List of Parts Complete

for

Machine No. 105-8

# List of Parts Complete

for

# Machine No. 105-8

No.					Name				
59588		Arm	, upper	and 1	ower (so	lid) wi	th 15404	and two	
			15405						
59491		Arm	Rotary	Shaft					
59610		"	Ħ	**	Bushin	g (back	) with 5	52045 and	
			59611						
52045		Arm	Rotary	Shaft	Bushing	(back)	Oil Pad	(wick)	
59611		**	"1	"	**	"	" Wic	k (braided	
			cotto	n)					
50554	C	Arm	Rotary	Shaft	Bushing	(back)	Set Scr	ew	
59524		11	п	TI.	n	(front	) with 5	2045	
52045		11	r <del>i</del>	11	11	11	Oil Pa	d (wick)	
448	C	11	u	11	ŧŧ	11	Set Sc	rew	
59613		Ħ	11	11	11	(intern	mediate)	with 5204	5
			and 12	28571					
52045		Arm	Rotary	Shaft	Bushing	(intern	mediate)	Oil Pad	
			(wick)	}					
128571		Arm	Rotary	Shaft	Bushing	(interm	nediate)	Oil Wick	
			(braid	led cot	ton)				
50554	С	Arm	Rotary	Shaft	Bushing	(interr	mediate)	Set Screw	
59628		11	Side Co	ver					
59629		11	11	" 5	59628 wit	h 59630	, 59631	and 132555	5
*59630		+1	11	" C	il Tube	for oil	ing Need	ile Bar	
			Lever	Connec	ting Rod				
59631		Arm	Side Co	ver Oi	1 Tube O	il Cup	for 5962	29	
1423	M 5	11	11	" Sc	rew				

No.			Name
59208	}		Balance Wheel 2 3/16 in. pulley with 424C and
			1354C
1354	C		Balance Wheel Position Screw
424	C		" Set Screw
59589	I		Cloth Plate with 59292, 66629 and 66630
<b>66</b> 629	ı		" Oil Tube, for oiling Feed Eccentric
			Connection Bar
66630	+		Cloth Plate Oil Tube, for oiling Feed Lifting
			Eccentric
59307			Cloth Plate Slide (left)
59308			" " (right)
59590			Cloth Plate complete, Nos. 59307, 59308 and 59589
177	С	2	" " Screw
59292			" " Steady Pin
59346			Feed (back) Bar
1131	С		" " Hinge Screw
59560			" Dog, 6 teeth (20 teeth to the inch)
			for 59597
59561			Feed (back) Dog, 5 teeth (16 teeth to the inch)
			for 59596
176	J		Feed (back) Dog Screw
59348			" Regulator
59349			" " Indicator
50471	D		" Regulating Screw Stud
1746	D		" " " " Thumb Nut
59350			" (front) Bar with two each 4580 and 8820
59441			" " 59350 with 1131c, 1746D, 50471D,
			59211 59346, 59348, 59349 and 59351
59351			Feed (front) Bar Carrier with three 4490
57234			" " " Hinge Pin
57235		2	" " " " Bushing
457	C	2	n n n n n n Set

Screw

No.			Name
449 C		Feed (front)	Bar Carrier Hinge Pin Set Screw
59211		11 11	" Hinge Pin
882 C	2	u u	
59562		11 11	Dec Defem
		for 595	Dog, 22 teeth (20 teeth to the inch)
59563	I		Dog, 18 teeth (16 teeth to the inch)
		for 595	
190 ј	F	eed (front)	Dog Screw
59564		" Eccentri	
<b>*</b> 59494		tt II	Body with 42727
51061 C	2	n n	" Set Screw
42727		ff H	" Steady Pin
61171		11 11	Pressure Spring
21332		11	" Cap
934 Ј	1	, ,,	" " Screw .
202 J	1	, ,,	Set Screw
59565	Fe	ed Eccentri	c (adjustable) complete, Nos. 202J,
			332, 50328c, 59494, 59564, 61171 and
		two 5106:	
59566	F∈	ed Eccentric	59565 with 59216
59216		11 11	Connection with 56006
59217		19	" Bar with 59218
59218		11 11	" " Plug
449 C	2	19	" " Set Screw
56006		" "	" Oil Wick (braided cotton)
59567	1	' Lifting	Eccentric with two 501500
59568	,	1 н	" 59567 with 59220
59220	,	11	" Connection
59221	11	ti .	" Bar with
		59218	
12454	Fee	d Lifting Ed	ccentric Connection Bar Oil Tube
		with 13259	

59619			Feed	Liftin	g Eccentric	Connection	Bar Oil Tube
				Bracke	t		
59620			Feed	Liftin	g Eccentric	Connection	Bar Oil Tube
				Bracke	t 59619 wit	h 12454	
190	J		Feed	Liftin	g Eccentric	Connection	. Bar Oil Tube
				Bracke	t Screw		
132590			Feed	Liftin	g Eccentric	Connection	Bar Oil Tube
				Oil Pa	d (wick)		
59218			Feed	Liftin	g Eccentric	Connection	. Bar Plug
458	С	2	11	11	11	11	" Set Screw
50150	С	2	***	41	11	Set Screw	
50328	С		11	Regula	ting Screw		
59576			Loope	er			
59381			r1	Car	rier with 5	03950	
59406			11		" Driver	with two l	186E
1186	E	2	11		11 11	Clamping S	crew
207	J		п		11	Timing Scr	ew
59225			11		" Hole P	lug	
59226			11		" Shaft		
59227			11		11 11	Crank with	1143E
1143	E		11			" Clam	ping Screw
50395	С		11	Se	t Screw		
59591			Need:	le Bar	(hollow) wi	th 906C and	50138F
42253		2	11	11	Bushing		
457	C	2	!!	:1	" Se	t Screw	
59592			11	14	Connecting	Bracket wit	h 175J and 460C
175	J		51	11	11	" Cla	mping Screw
59237			ri	"	11	Link	
40247			11	tt	ч	" Hinge	Pin (lower)
208	F		11	"	11	11 11	11 11
				Set Sc	rew		
40247			Needl	e Bar	Connecting	Link Hinge	Pin (upper)

460	C		Nee	dle	Bar	Conne	cting 1	Link I	Hinge	e Pin	(upp	er) Set
				S	orew							
59367			Nee	dle	Bur	Lever	with 2	208F,	4480	C and	1036	C
59600			11		n	11	59367	with	592	37, 5	9592	and two
				40	0247							
59603			Nee	dle	Bar	Lever	Conne	cting	Rod	with	2089	, 42367
				aı	nd tr	wo each	n 141E	and 6	547E			
59604			Nee	dle	Bar	Lever	Conne	cting	Rod	5960	3 with	n 59240
				aı	nd 59	9605						
59240			Nee	dle	Bar	Lever	Conne	cting	Rod	Ball	Stud	
1036	С		11		11	rr		Ħ	11	Ħ	11	Set
				S	crew							
127	E	2	Nee	dle	Bar	Lever	Conne	cting	Rod	Cap	(lowe:	r) Screw
647	E	2	н		11	11		11	11	71	(upp	er) Screw
59605			11		11	11		ft	11	Ecce	ntric	with
				41	48c,	12990	and to	wo 596	506			
59606		2	Nee	dle	Bar	Lever	Connec	cting	Rod	Ecce	ntric	Lubrica-
				ti	ing F	ead (wo	ood)					
1299	С		Nee	dle	Bar	Lever	Connec	cting	Rod	Fcce	ntric	Position
				S	crew							
448	С		Nee	ile	Bar	Lever	Connec	cting	Rod	Ecce	ntric	Set
				S	crew							
42077			Nee	dle	Bar	Lever	Connec	cting	Rod	Guid	9	
187	J			11	11	11		11	11	11	Sci	rew
59245				"	11	rt		11	11	11	Sti	ıđ
59246				II.	11	Ħ		**	11	11	,	1
				Br	racke	et with	ı 59245	5				
193	J		Need	ile	Bar	Lever	Connec	ting	Rod	Guid	e Stud	l Bracket
				Sc	rew							
42367			Need	dle	Bar	Lever	Connec	ting	Rod	Oil !	Pad (v	vick)
2089			,	,	11	11		11	11	**	" Re	etaining
				Ρi	.n							

```
59247
            Needle Bar Lever Hinge Pin
              " " " Bushing (back)
59248
                         " " " Set
              11 11 11
 624 C
                Screw
59249
             Needle Bar Lever Hinge Pin Bushing (front)
             n n n n n set
 457 C
                Screw
 448 C
             Needle Bar Lever Hinge Pin Set Screw
59394
              " " Thread Retainer Bracket
                             " Screw
 228 J
                            " Disc
42483 2
 93 C
                            71
                                Screw
                      71
10107
                            11
                                Spring
59395
             Needle Bar Thread Retainer complete, Nos. 93C,
               10107, 59394 and two 42483
59578
             Needle Guard
             " " Screw
171 J
50138 F
             " Set Screw
59544
             Presser Bar
                  " Bushing (lower)
59252
                      " Set Screw
457 C
                  " (upper)
42253
                  " " Set Screw
457 C
                  " Lifter
59253
                      11
51815
                          Roller and Stud
                     " Hinge Screw
89 F
                  " Stop Screw
50138 F
              " Lifting Bracket with 391E, 1143C,
59505
               51810, 51811 and 51815
391 E
            Presser Bar Lifting Bracket Adjusting Screw
59506
             11 11 11
                          " Guide
             " " Set Screw
624 C
```

```
Presser Bar Lifting Bracket Set Screw
1143 C
                   " Spring
59257
                   " " Block
               11
59258
                 " Roller and Stud
51810
59593
                 Foot with 10190
                    " Extension
               11
59594
                    11
                         11
               11
59545
                              Collar with 240C
                               " Set Screw
240 C
                            Spring
59601
                                " Guide Pin
                     11
                         11
59546
                                " " Set
                         11
1019 C
                Screw
             Presser Foot (spring yielding) complete, Nos. 59545,
59595
                 59546, 59593, 59594 and 59601
185 ј
             Presser Foot Screw
1317 D
             Pressure Regulating Thumb Screw
                    " " Lock Nut
1547 J
59264
             Slack Thread Controller
                   " Hinge Screw
 95 C
       2
                   11
                       11
59265
                               Link
                   " Hinge Screw
  87 C
                   " Regulator
59579
                         " Holder with 4650
59267
              " Crank with two
59268
                 465C
51811
             Slack Thread Regulator Holder Crank Roller and
                 Stud
465 C 2
             Slack Thread Regulator Holder Crank Set Screw
             " " Set Screw
465 C
59269
             Tension Bracket
               " Steady Pin
38670
              " (under thread) Disc
2102
       2
              " Regulating Thumb Screw
51570 C
```

Name

No.

୍ଦ ଦ୍ର

Name

No.

HUCUSCOL FUS

No.	Name
120342	Oiler (copper plated) with 120343
120343	" Spout, 3 1/2 in. long
26026	Screw Driver (large)
26485	" " (small)
120341	Tweezers (curved)
4822	Wrench for 1547 and 1747
55003	" " 1575

## Machine Base

No.				Na	ıme
59295		Machine	Base	with 1	.00D, 36006, 59296 and four each
		84	OE, 5	9297 an	nd wood screws 1 1/2 in. No. 14
59296		Machine	Base	Cover	
36006		11	11	11	Friction Washer
100 D		"	11	п	Hinge Screw
840 E	4	11	11	Screw	
59297		11	Cushi	on (fel	t)

# Knee Lifter Parts

140.	Name
32040	Chain, 12 $3/4$ in. long, with 56864 and 56865
56864	" Hook (large)
56865	" (small)
59509	Lifting Lever
21 D	" " Hinge Screw

59510		Lifting	Lever Spring
59511		11	" Stop
219	J	11	" " Screw
7124		Rock Sha	aft
2764		rt 11	Hanger (back) with two wood screws
		1 1	in. No. 10
16128		Rock Sha	aft Hanger (front) with two wood screws
		1 i	in. No. 10
16646		Rock Sha	nft Knee Arm
16647		Rock Sha	oft Knee Arm complete, Nos. 2766, 2767 and
		166	546
2766		Rock Sha	aft Knee Arm Hub with 3560
356	С	n 11	" " Set Screw
2767		11 11	" Plate with 356C
356	С	11 1	" " Set Screw
6337		11 11	" Lifting Bracket with two 3560
6338		11 11	" Hook
356	С	11 1	" " Set Screw
356	С	12 1	" " Set Screw
32134		11 F	" Spring
2770		a) f	" " Adjusting Dog with 356C
356	С	11 1	" " Set Screw
2770		11 ,	" Stop Dog with 356C
356	c	11 1	" " Set Screw
32135		Rock Sha	aft complete, Nos. 2764, 6337, 6338, 7124,
		161	128, 16647, 32134 and three 2770
59512		Knee Lit	fter complete, (power table) Nos. 21D, 219J,
		320	040, 32135 and 59509 to 59511

# Thread Unwinder

For Two Spools

No.	Name
225257	Spool Rest with 201018C
150203	2 " Cushion (felt)
225388	" Rod
200383	" " " Bet Screw
201018	" " Set Screw
259658	" Stand with 2003830
225391	2 Thread Guide
201596 .	" " Lock Nut
225326	" Position Cup
225324	" Rod with 208E and 225322
208 I	Screw "Screw
225322	" " Washer
225258	Thread Unwinder complete, Nos. 201696J, 225257,
	225324, 225326, 225388, 259658, two each
	150203 and 225391 and three wood screws 7/8
	in. No. 12
27739	Thread Cone (wood) for large cones