

November 13, 1950

Department #54

HISTORICAL COPY
DO NOT REMOVE

FOR AGENTS ONLY
List of Parts Complete

for

Machine No. 109-224

109-224

ALS:LR

November 13, 1950

Department #54

List of Parts Complete
for
Machine No. 109-224

| No. | Name |
|----------|--|
| *133117 | Arm, upper and lower (solid) with 948E, 15404, 133201 and two 15405 |
| 57202 | Arm Oil Tube for oiling 64267 |
| 56003 | " " " with 52045, for oiling 133025 |
| 13862 | " " " " 52045, for oiling 133087 |
| 52045 | " " " Packing (wick) |
| 127905 | " Rock Shaft |
| 127907 | " " " 127905 with 64253, 133067 and 133280 |
| 42365 | " " " Back Bearing Oil Pad (felt) |
| 64386 | " " " Bushing (back bearing) |
| 446 AL | " " " " " " Set Screw |
| 64388 | " " " " (intermediate) |
| 423 AL | " " " " " " Set Screw |
| 52045 | " " " " Oil Pad (wick) |
| 64253 | " " " Collar with two 624AL |
| 624 AL 2 | " " " " Set Screw |
| 133289 | " " " Crank (back) with four 168C |
| 168 C 4 | " " " " " Set Screw |
| 133067 | " " " " (front) with 443AL |
| 127838 | " " " " " Pin |
| 443 AL | " " " " " Set Screw |
| 54105 | " " " Flanged Bushing |
| 52045 | " " " " " Oil Pad (wick) |

| | |
|----------|---|
| 453 AL | Arm Rock Shaft Flanged Bushing Set Screw |
| 18154 | " " " Front Bearing Oil Pad (felt) |
| 133255 | " Rotary Shaft with 51015AL and 57824 |
| 133256 | " " " 133255 with 64366 and 127900 |
| 133120 | " " " Bushing (front) |
| 51521 C | " " " " " Set Screw |
| 57781 | " " " " (intermediate) with 49093 and 64805 |
| 49093 | Arm Rotary Shaft Bushing (intermediate) Oil Pad (braided cotton) long |
| 64805 | Arm Rotary Shaft Bushing (intermediate) Oil Pad (braided cotton) short |
| 832 C | Arm Rotary Shaft Bushing (intermediate) Set Screw |
| 54450 | " " " Collar with two 1258AL |
| 1258 AL | " " " " Set Screw |
| 61441 | " " " Flanged Bushing with 49093 and 64805 |
| 49093 | " " " " " Oil Pad (braided cotton) long |
| 64805 | Arm Rotary Shaft Flanged Bushing Oil Pad (braided cotton) short |
| 159 F | Arm Rotary Shaft Flanged Bushing Screw |
| 57824 | " " " Oil Pad (felt) |
| 127918 | " " " " Tube with 64508 |
| 64508 | " " " " " Oil Pad (braided cotton) |
| 144 D | " " " Screw |
| 4288 | " Side Cover |
| 190 J | " " " Screw |
| 127829 | Balance Wheel (single belt groove) 3 5/16 in. pulley with two 51283AL |
| 51283 AL | Balance Wheel Set Screw |

| | |
|---------|---|
| 133209 | Cloth Plate with three 57404 |
| 57404 | " " Oil Tube |
| 57344 | " " Slide |
| 57345 | Cloth Plate Slide complete, Nos. 57344, two 52683 and four 725J |
| 52683 | Cloth Plate Slide Spring |
| 57334 | " " " " Bracket |
| 193 E 4 | " " " " " Screw |
| 725 J | " " " " " Screw |
| 133211 | Cloth Plate complete, Nos. 57345, 133209, 133215, 133221, two 57334, three 1443W and four 193E |
| 898 F | Cloth Plate Screw (large) |
| 1011 F | " " " (small) |
| 127882 | " " Support Bracket with 29627, 50524C, 51250C and two 1520J |
| 51250 C | Cloth Plate Support Bracket Adjusting Screw (bottom) |
| 50524 C | " " " " " " (top) |
| 1520 J | " " " " " " Nut |
| 29627 | " " " " " Dowel Pin |
| 146 E | " " " " " Screw |
| 64267 | Crank Connecting Rod with two each 896AL and 1057AL |
| 64366 | " " " 64267 with 50069C |
| 50069 C | " " " Ball Screw Stud (upper) |
| 1516 E | " " " " " " " Nut |
| 64268 | " " " " " " " Washer |
| 896 AL | " " " Cap (lower) Screw |
| 1057 AL | " " " " (upper) Screw |
| 57288 | " " " Oil Case with 57290, 133190 and four each 185E and 448AL |

| | |
|----------|---|
| 57290 | Crank Connecting Rod Oil Case Cap |
| 133190 | " " " " " " Packing |
| 185 E | " " " " " " Screw |
| 448 AL | " " " " " " Set Screw |
| 127923 | Face Plate for 1 9/16 in. to 2 13/16 in. gauges |
| 127924 | " " " 2 7/8 in. to 3 1/2 in. gauges |
| 46111 | " " Pin |
| 1423 J | " " Screw |
| 61018 | Feed Bar with two 624AL |
| 61459 | " " 61018 with 127744 |
| 57225 | " " Hinge Pin |
| 624 AL | " " " " Set Screw |
| 127647 | " Dog, 17 teeth (13 teeth to the inch) for 127648 |
| 57293 | " " Packing, .005 in. thick |
| 57294 | " " " .012 in. thick |
| 57321 | " " " .021 in. thick |
| 1255 C | " " Screw |
| *127506 | " Eccentric |
| *61020 | " " Body |
| 51061 AL | " " " Set Screw |
| 217 J | " " Set Screw |
| 127508 | Feed Eccentric (adjustable) complete, Nos. 196F, 50653C, 61020, 127506 and two 51061AL |
| 130326 | Feed Eccentric Connection with 127851 and 130328 |
| 130327 | " " " 130326 with 127508 and 127788 |
| 130328 | " " " Oil Cup |
| 127851 | " " " " " Oil Pad (braided cotton) |
| 127744 | " Lifting Connection |
| 127745 | " " Eccentric with two 452C |
| 452 C | " " " Set Screw |

| | |
|----------|--|
| 50653 C | Feed Regulating Screw |
| 127509 | " Rocking Frame with four 624AL |
| 127788 | " " " Bar |
| 624 AL | " " " " Set Screw |
| 57234 | " " " Hinge Pin |
| 57235 | " " " " " Bushing |
| 449 AL | " " " " " " Set Screw |
| 624 AL | " " " " " Set Screw |
| 127513 | " Roll (lower) 2 in. wide, with two 140279C |
| *131176 | " " " Clutch (brake) |
| 131271 | " " " " " 131176 with three 58611 |
| *131177 | " " " " (drive) |
| 131272 | " " " " " 131177 with three 58611 |
| 68149 | " " " " (brake) Connection with 440AL, 1700J and two 50083AL |
| 440 AL | Feed Roll (lower) Clutch (brake) Connection Adjusting Screw |
| 1700 J | Feed Roll (lower) Clutch (brake) Connection Adjusting Screw Nut |
| 50083 AL | Feed Roll (lower) Clutch (brake) Set Screw |
| 127530 | " " " " " Stop Block |
| 158 E | " " " " " " Screw |
| 68150 | " " " " (drive) Connection with two 50083AL |
| 50083 AL | Feed Roll (lower) Clutch (drive) Connection Set Screw |
| 133245 | " " " " Cover |
| 50004 W | " " " " " Screw |
| 68151 | " " " " Roller |
| 68152 | " " " " " Plunger |

| | |
|----------|--|
| 68153 | Feed Roll (lower) Clutch Roller Spring |
| 133161 | " " " " Shaft |
| 133162 | " " " " " 133161 with 131182 |
| 127653 | " " " " " Bracket with 448AL |
| 133263 | Feed Roll (lower) Clutch Shaft Bracket complete, Nos. 127530, 127653, 127934, 133162, two 158E and three 62562 |
| 948 D | Feed Roll (lower) Clutch Shaft Bracket Screw |
| 62562 | " " " " " Collar with two 465C |
| 465 C | " " " " " " Set Screw |
| 127934 | " " " " " Spacing Collar |
| 68155 | " " " " " Sleeve with four 1149AL |
| 1149 AL | " " " " " Set Screw |
| 131182 | Feed Roll (lower) Clutch complete, Nos. 68149, 68150, 68155, 131271, 131272 and six each 68151 to 68153 |
| 68611 | Feed Roll (lower) Clutch Wearing Plate |
| 54458 | " " " Connecting Rod with two 896AL |
| 68016 | " " " " " 54458 with 54456 |
| 896 AL | " " " " " Cap Screw |
| 1257 C | " " " " " Hinge Screw |
| 1620 E | " " " " " " " Nut |
| *54024 | " " " Eccentric |
| *54455 | " " " " Body |
| 51061 AL | " " " " Set Screw |
| 7071 | " " " " Clamping Washer |
| 217 J | " " " " " " Screw |
| 54456 | Feed Roll (lower) Eccentric (adjustable) complete, Nos. 217J, 1103C, 7071, 54024, 54455 and two 51061AL |
| 1103 C | Feed Roll (lower) Eccentric Regulating Screw |
| 127514 | " " " Guard with 208J |

| | |
|------------|--|
| 208 J | Feed Roll (lower) Guard Clamping Screw |
| 133164 | " " " " Shaft |
| 133165 | " " " " " Bracket with 624AL |
| 448 AL | " " " " " " Set Screw |
| 624 AL | " " " " " " Set Screw |
| 140279 C 2 | " " " " " Set Screw |
| 133221 | " " " " " Spacing Plate (left) |
| 1443 | " " " " " " Screw |
| 133215 | " " " " " " (right) |
| 1443 W 2 | " " " " " " Screw |

Note: Plate Nos. 133215 and 133221 are used with
4 1/4 in. Feed Rolls

| | |
|---------|--|
| 127533 | Feed Roll (upper) 2 in. wide, with two 140279C |
| 127534 | " " " " Bar |
| 127935 | " " " " " Bracket with 453AL |
| 127937 | " " " " " " 453AL |
| 127936 | Feed Roll (upper) Bar Bracket complete, for 1 9/16 in. to 2 15/16 in. gauges, Nos. 72D, 194D, 226J, 866C, 913D, 1330C, 1876, 11193, 23404, 127534, 127536, 127542, 127543, 127545, 127935 and 127939 |
| 127938 | Feed Roll (upper) Bar Bracket complete, for 3 in. to 3 1/2 in. gauges, Nos. 72D, 194D, 226J, 866C, 913D, 1330C, 1876, 11193, 23404, 57450, 127534, 127536, 127542, 127543, 127545, 127937, 127939, 133048 and two 16LJ |
| 1193 J | Feed Roll (upper) Bar Bracket Screw (lower) |
| 50267 D | " " " " " " (upper) |
| 127536 | " " " " " Collar with two 448AL |
| 1876 | " " " " " Roller and Stud |

| | |
|------------|--|
| 448 AL 2 | Feed Roll (upper) Bar Collar Set Screw |
| 23404 | " " " " Spring |
| 127537 | " " " Bell Crank |
| 64 D | " " " " " Hinge Screw |
| 1620 E | " " " " " " " Nut |
| 127543 | " " " Lifter |
| 866 C | " " " " Hinge Screw |
| 127939 | " " " " Link |
| 74 D | " " " " " Connecting Screw |
| 72 D | " " " " " Hinge Screw |
| 127545 | " " " " " Spring |
| 226 J | " " " " " " Screw |
| 11193 | " " " " " " Steady Pin |
| 194 D | " " " " " Stop Screw |
| 1330 C | " " " " " Stop Screw |
| 913 D | " " " Pressure Regulating Thumb Screw |
| 133166 | " " " Shaft |
| 133167 | " " " " Bracket with 453AL |
| 127542 | " " " " " Guide Pin |
| 453 AL | " " " " " " Set Screw |
| 453 AL | " " " " " Set Screw |
| 140279 C 2 | " " " Set Screw |

127950 **Looper**

61264 " **Carrier with two 50379C**

61474 " **Packing**

Note: No. 61474 is furnished in thicknesses of .030 in., .046 in., .075 in., .085 in., .090 in. and .120 in. when ordering, state thickness required.

127746 **Looper Carrier Rock Shaft with 177C**

| | |
|---------|---|
| 61461 | Looper Carrier Rock Shaft 127746 with 61361 |
| 127790 | " " " " Connection with two 171AL and four 1057AL |
| 133131 | Looper Carrier Rock Shaft Connection 127790 with 133130 |
| 133130 | " " " " " Ball Stud |
| 177 C | " " " " " " " Set Screw |
| 171 AL | " " " " " Cap (lower) Screw |
| 1057 AL | " " " " " " (upper) Screw |
| | (left) |
| 1057 AL | Looper Carrier Rock Shaft Connection Cap (upper) Screw (right) |
| 61361 | Looper Carrier Rock Shaft Hinge Pin (eccentric) |
| 61031 | " " " " " " Bushing |
| 1299 AL | " " " " " " Set Screw |
| 61189 | " " " " " " Handle |
| 133122 | Looper Carrier Rock Shaft Hinge Pin Handle complete, Nos. 1094D, 61189, 61190 and 133124 |
| 61190 | Looper Carrier Rock Shaft Hinge Pin Handle Body with 1299C and two 453AL |
| 1299 AL | Looper Carrier Rock Shaft Hinge Pin Handle Body Posit- ion Screw |
| 453 AL | Looper Carrier Rock Shaft Hinge Pin Handle Body Set Screw |
| 453 AL | Looper Carrier Rock Shaft Hinge Pin Handle Set Screw |
| 133123 | " " " " " " Lock Stud (hollow) |
| 133124 | " " " " " " " " Plate |
| 1094 D | " " " " " " " " " Screw |
| 133125 | Looper Carrier Rock Shaft Hinge Pin Lock Stud Spring |
| 717 C | " " " " " " Position Screw |
| 1650 E | " " " " " " " " Nut |

| | |
|----------|---|
| 51279 C | Looper Carrier Screw |
| 1698 E | " " " Nut |
| 127597 | " Driving Shaft with two 61039 |
| 127900 | " " " 127597 with 127745 |
| •133201 | " " " Bracket |
| 948 E | " " " " Screw |
| 133202 | " " " Bushing |
| 51322 C | " " " " Set Screw |
| 133128 | " " " Hole Plug |
| 46200 | " " " Oil Pad (felt) for oiling 127597 |
| 12147 | " " " " " " " " 61361 |
| | and 127597 |
| 2117 | Looper Driving Shaft Pin |
| 61039 | " " " Plug |
| 51015 AL | " " " Set Screw |
| 61279 | " Protector Stud |
| 453 AL | " " " Set Screw |
| 50379 C | " Set Screw |
| 57244 | Needle Bar (hollow) |
| 127548 | " " 57244 with 127549, for 1 9/16 in. to 2 13/16 in. gauges |
| 133172 | Needle Bar 57244 with 133145, for 2 7/8 in. to 3 1/2 in. gauges |
| 38456 | Needle Bar Bushing (lower) |
| 1133 E | " " " " Set Screw |
| 133085 | " " " (upper) |
| 1133 E | " " " " Set Screw |
| 133087 | " " Connecting Link with 133088 |
| 133129 | " " " " 133087 with 57940 and 133113 |
| 133169 | " " " " 133087 with 57940 and 133168 |

| | |
|---------|---|
| 57940 | Needle Bar Connecting Link Hinge Stud |
| 1520 E | " " " " " " Nut |
| 133088 | " " " " Oil Stud Nut |
| 133113 | " " " Stud with 50379C and two 187E, for 1 9/16 in. to 2 13/16 in. gauges |
| 133168 | Needle Bar Connecting Stud with 50379C and two 187E, for 2 7/8 in. to 3 1/2 in. gauges |
| 187 E | Needle Bar Connecting Stud Clamping Screw |
| 127549 | " Clamp with two 50379F |
| 133145 | " " " " 735F |
| 57449 | " " Guide for 2 7/8 in. to 3 1/2 in. gauges |
| 57450 | " " " Bracket (left) for 2 7/8 in. to 3 1/2 in. gauges |
| 161 J | Needle Clamp Guide Bracket (left) Screw |
| 133048 | " " " " (right) for 2 7/8 in. to 3 1/2 in. gauges |
| 161 J | Needle Clamp Guide Bracket (right) Screw |
| 914 F | " " " Screw |
| 127953 | " " (lower) Support |
| 127954 | " " (upper) Support |
| 51278 J | " " Support Clamping Screw |
| 1654 J | " " " " " Nut |
| 9525 | " " " " " Washer |
| 127956 | Needle Clamp Support (adjustable) complete for 2 7/8 in. to 3 1/2 in. gauges, Nos. 1654J, 9525, 51278J, 127954 and 127955 |
| 220 J | Needle Clamp Support Screw |
| 57319 | " Guard (left) with 50239C |

| | |
|---------|---|
| 57320 | Needle Guard (right) with 50239C |
| 57351 | " " Bar |
| 57943 | " " Bar Bracket (left) with 440AL |
| 177 C | " " " " " Screw |
| 57944 | " " " " (right) with 440AL |
| 177 C | " " " " " Screw |
| 57354 | " " " " Holder |
| 29627 | " " " " " Dowel Pin |
| 50154 D | " " " " " Screw |
| 440 AL | " " " " Set Screw |
| 50239 C | " " " " Set Screw |
| 50379 F | " " " " Set Screw for 61044 |
| 735 F | " " " " " 133145 |
| 57255 | Presser Bar |
| 133090 | " " Bushing (lower) |
| 1133 E | " " " " " Set Screw |
| 38456 | " " " (upper) |
| 1133 E | " " " " " Set Screw |
| 127836 | " " Guide |
| 61049 | " " " Connection Stud with 453AL |
| 453 AL | " " " " " Set Screw |
| 133133 | " " Lifter |
| 57258 | " " " Hinge Pin |
| 447 AL | " " " " " Set Screw |
| 1872 | " " " Roller and Stud |
| 194 D | " " " Stop Screw |
| 127551 | " " " Lifting Bracket with 460AL and 1872 |
| 127841 | " " " Lever |
| 61075 | " " " " Connecting Stud |

| | |
|--------|--|
| 460 AL | Presser Bar Lifting Lever Connecting Stud Set Screw |
| 61167 | " " " " Extension for 127840 |
| 162 J | " " " " " Screw |
| 802 D | " " " " Hinge Screw |
| 57978 | " " " " Spring |
| 38467 | " " Spring (flat) |
| 38468 | " " " Stud |
| 440 AL | " Foot Adjusting Screw |
| 1698 J | " " " " Nut |
| 57891 | " " Shank |
| 378 J | " " " Hinge Screw |
| 1528 J | " " " " " Nut |
| 57890 | " " Support Bracket |
| 1094 J | " " " " Screw |
| 133154 | Presser Foot (side hinged) complete, for 3 in. gauge and above, Nos. 378J, 1528J, 57891 and two each 440AL, 1094J, 1698J and 57890 |
| 190 J | Presser Foot Screw |
| 574 W | Pressure Regulating Thumb Screw |
| 1539 W | " " " " Lock Nut |
| 133097 | Slack Thread (upper) Controller Body |
| 127961 | " " " " Spring |
| 127739 | " " " " " Collar |
| 211 J | " " " " " " Screw |
| 133098 | Slack Thread (upper) Controller complete, Nos. 211J, 127739, 127961 and 133097 |
| 211 J | Slack Thread (upper) Controller Screw |
| 127963 | " " Regulator |
| 127758 | " " " Holder with 824AL |
| 61281 | " " " " Crank with 187J and 1963 |

| | |
|---------|--|
| 187 J | Slack Thread Regulator Holder Crank Clamping Screw |
| 1963 | " " " " " Roller and Stud |
| 624 AL | " " " Set Screw |
| 2102 | Tension (under thread) Disc |
| 51570 C | " " " Regulating Thumb Nut |
| 50326 C | " " " Screw Stud |
| 59539 | " " " " " 50326C with 51570C |
| 59534 | " " " Spring |
| 59537 | " " " " Bushing (large) |
| 59538 | " " " " " (small) |
| 131696 | " " " Thread Guide |
| 2102 | " (upper thread) Disc |
| 51570 C | " " " Regulating Thumb Nut |
| 50326 C | " " " Screw Stud |
| 59539 | " " " " " 50326C with 51570C |
| 59535 | " " " Spring |
| 59537 | " " " " Bushing (large) |
| 59538 | " " " " " (small) |
| 131696 | " " " Thread Guide |
| 127971 | " Plate with 439D |
| 439 D | " " Position Stud |
| 57265 | " " Spring |
| 665 J | " " " Screw |
| 32572 | " Releasing Disc |
| 57266 | " " Lever |
| 61164 | " " " Connection |
| 1094 F | " " " " Screw for 61167 |
| 798 D | " " " Hinge Screw |
| 127977 | " " Pin (large) |
| 133066 | " " " (small) |
| 127978 | " " Plate |

| | |
|---------|---|
| | Tension Releasing Plate Screw |
| 691 J | |
| 127806 | Thread (under) Eyelet (back) with 127812 |
| 691 J | " " " " Screw |
| 127812 | " " " " Thread Guide |
| 127984 | " " " (front) |
| 127986 | " " " " Post |
| 127987 | " " " " " 127986 with 203J and 127984 |
| 448 AL | Thread (under) Eyelet (front) Post Set Screw (left) |
| 430 C | " " " " " " " (right) |
| 203 J | " " " " Screw |
| 61103 | " " Protector |
| 397 F | " " " Screw |
| 127989 | " " Take-up |
| 127990 | " " " Driving Crank with 1454E |
| 1454 E | " " " " Clamping Screw |
| 1131 C | " " " " Hinge Screw |
| 1520 E | " " " " " " Nut |
| 127991 | " " " Eccentric with two 446AL |
| 127992 | " " " " Connection with 50240E, 127851, 127994, 127995 and two 127848 |
| 127993 | Thread (under) Take-up Eccentric Connection 127992 with 127991 |
| 127848 | Thread (under) Take-up Eccentric Connection Oil Cup |
| 127994 | " " " " " " " Oil Pad (back) braided cotton |
| 127851 | Thread (under) Take-up Eccentric Connection Oil Cup Oil Pad (front) braided cotton |
| 50240 E | Thread (under) Take-up Eccentric Connection Oil Plug Screw |
| 127995 | Thread (under) Take-up Eccentric Connection Oil Plug Screw Washer (leather) |

| | | | | |
|--------|----------------|---------|-------------------------|-----------------------------------|
| 448 AL | Thread (under) | Take-up | Eccentric | Set Screw |
| 127996 | " | " | " | Eyelet (left) |
| 203 J | " | " | " | " " Set Screw |
| 127997 | " | " | " | " (right) |
| 203 J | " | " | " | " " Set Screw |
| 127998 | " | " | " | Packing (.015 in. thick) |
| 127999 | " | " | " | " (.025 in. thick) |
| 128000 | " | " | " | " (.060 in. thick) |
| 190 J | " | " | " | Screw |
| 133001 | " | " | " | Shaft |
| 133002 | " | " | " | " Bracket with two 203J |
| 133003 | Thread (under) | Take-up | Shaft Bracket complete, | Nos. |
| | | | | 127990, 133001, 133002 and 133004 |
| 575 E | Thread (under) | Take-up | Shaft Bracket | Screw (left) |
| 129 E | " | " | " | " " " (right) |
| 133004 | " | " | " | Collar with two 460AL |
| 460 AL | " | " | " | " " Set Screw |
| 133005 | " | (upper) | Eyelet | (back) |
| 178 J | " | " | " | " Set Screw |
| 133017 | " | " | Stripper | Body |
| 131039 | " | " | " | " Hole Plug |
| 50554 | " | " | " | " Set Screw |
| 68130 | " | " | " | Disc (inside) |
| 68131 | " | " | " | " " Washer (fiber) |
| 133018 | " | " | " | " (outside) |
| 1698 C | " | " | " | " " Nut |
| 34099 | " | " | " | " " Washer |
| 68133 | " | " | " | Roller |
| 68134 | " | " | " | " Hinge Pin |

| | |
|---------|--|
| 133019 | Thread (upper) Hipper Spacing Collar |
| 133023 | " " " Stud |
| 133024 | Thread (upper) Hipper Stud complete, Nos. 68133, 68134 and 133023 |
| 13218 | Thread (upper) Hipper Stud Spring |
| 133025 | Thread (upper) Hipper complete, Nos. 1698C, 13218, 34099, 68130, 68131, 133017 to 133019 and 133024 |
| 133029 | Thread (upper) Hipper Thread Guide |
| 207 J | " " " " " Screw |
| 133030 | " " Oil Cup |
| 133031 | " " " " 133030 with 133032 |
| | Note: No. 133031 is not regular fitting of machine, if desired it must be so stated on order. |
| 133032 | Thread (upper) Oil Cup Oil Pad (felt) |
| 50004 W | " " " " Screw |
| 133033 | " " Take-up |
| 50379 C | " " " Set Screw |
| 127648 | Throat Plate for 127647 |
| 691 F | " " Screw |
| *15404 | Trade Mark |
| 15405 | " " Rivet |