SINGER 157-1 & 157-2

Form 18872 (735) Printed in U. S. A.

LIST of PARTS



SINGER"

MACHINES

Nos. 157-1 and 157-2

THE SINGER MANUFACTURING COMPANY

INSTRUCTIONS FOR OILING

Before starting the machine, it must be serviced, as instructed in Form 18666.

Each machine is equipped with an oil reservoir from which all the principal bearings receive a constant supply of oil, the oil flowing from the reservoir through the tubes.

Fill the oil reservoir <u>level full</u> of oil. This oil level should be maintained.

Excess oil drains into the machine base and may be drawn off through a petcock provided for the purpose.

To insure easy running and prevent unnecessary wear of the parts which are in movable contact, the machine requires oiling, and when in continuous use, "TYPE B" or "TYPE D" OIL, sold by Singer Sewing Machine Company, should be applied at least twice each day to all oil holes marked "OIL".

"TYPE D" OIL should be used when an oil is desired which will produce a minimum of stain on fabrics, even after a long period of storage.

INDEX

	Pag
Accessories	35
Fittings for 157-1 Machine	32
FOOT LIFTER PARTS	36
KNEE LIFTER PARTS	37
Machine Base Oil Drain Jar	36
Machine Base	36
Machine No. 157-1	7
" " 157-2	20
Numerical List of Parts	39
THREAD UNWINDER	38
Timing Gauge	38

INSTRUCTIONS FOR ORDERING

In ordering from this list, use ONLY the part NUMBER in the FIRST column.

The number stamped on a Sewing Machine Part is in every case the number of the single part only.

Every combination of parts sent out as such has its specific number, which, although not stamped on the parts, must be used when ordering the combination.

Each number always indicates the SAME PART in whatever list it appears, or for whatever machine.

The letters after some of the numbers indicate the style of finish only, as follows:

A-Hardened, Polished, Nickel Plated and Buffed

B-Polished, Nickel Plated and Buffed

C-Hardened Only

D—Polished Only E—Soft, Not Polished

F-Hardened and Polished

H—Blued

J-Nickel Plated Only

K-Hardened and Nickel Plated

L-Brass Plated

M-Oxidized

N-Japanned, Dull

P-Japanned, Bright

R—Merlized

T-Copper Plated

T. A.-Hardened, Polished, Copper and Nickel Plated

and Buffed

T. B.—Copper and Nickel Plated and Polished
T. J.—Copper and Nickel Plated Only
T. K.—Hardened, Copper and Nickel Plated
T. M.—Copper Plated and Oxidized

T. L—Copper and Brass Plated U—Zinc Plated

V.—Silver Plated

W-Polished and Nickel Plated

Y-Black Nickel Plated Only

Z-Chromium Plated

Z. B.-Polished, Nickel Plated, Buffed and Chromium Plated

Z. J.—Nickel and Chromium Plated

These letters MUST BE USED when they appear in the list; and AFTER the number as in the list.

In this series:

1 to 1500, 50001 to 51500 and 140001 to 142000 are

Screw Numbers


1501 to 1800 and 51501 to 51800 are Nut Numbers 1801 to 2000 and 51801 to 52000 are Roller Numbers 2001 to 50000 and 52001 to 190000 are Sewing Machine Parts, 190001 and upward are numbers of Elec-

trical Parts.

The figures in the second column refer only to the plates. illustrating the parts, and are NOT TO BE USED in ordering.

Parts marked with an asterisk (*) are furnished only when repairs are made at factory.

LIST OF PARTS COMPLETE FOR

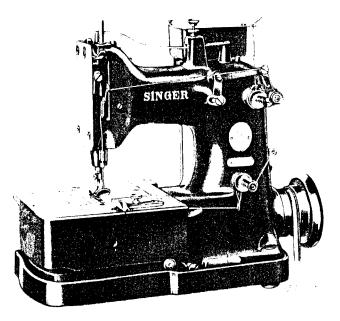

MACHINE No. 157-1

FOR STITCHING BAGS MADE FROM CLAY FILLED AND OTHER LIGHT MATERIAL SUCH AS IS USED FOR THE MANUFACTURE OF SALT, SUGAR, RICE AND FLOUR BAGS, ETC. MAKES 31 TO 8 STITCHES TO THE INCH. HAS ONE NEEDLE, LOOPER AND THROAT PLATE FOR TWO-THREAD CHAIN-STITCH; ALSO LOOPER AND THROAT PLATE FOR SINGLE THREAD CHAIN-STITCH. LIFT OF PRESSER FOOT 18 INCH. WILL STITCH MATERIAL UP TO 1 INCH IN THICKNESS. FITTED WITH OILING SYSTEM THAT AUTOMATICALLY LUBRI-CATES THE PRINCIPAL BEARINGS OF THE MACHINE.

*130701

PLATE

NAME ---- Arm, upper and lower (solid) with 15404 and two 15405

NO.	PLATE	NAME
130702	21719	Arm Back Cover
1095F	21707	" " Screw
51333ј	21702	" Oil Plug Screw
130703	21704	" "Tube with 54969, for oil-
		ing Needle Bar Connecting Link
130704	21704	Arm Oil Tube with 54969, for oiling
		Needle Bar Connecting Link
		Hinge Pin (lower)
130705	21704	
130709	21104	Arm Oil Tube with 54969, for oiling
130706	91704	Arm Rock Shaft Front Bearing
130700	21704	Arm Oil Tube with 54969, for oiling
		Arm Rock Shaft Back and Inter-
		mediate Bearings
54969	21714	Arm Oil Tube Oil Pad (braided
		cotton)
130707	21731	Arm Rock Shaft with 624c
130860		" " 130707 with 130874
*130708		" " Bushing (back)
130709	21728	u u u u
		130708 with 130911
130911	21714	Arm Rock Shaft Bushing (back)
		Oil Pad (braided cotton)
443c	21703	Arm Rock Shaft Bushing (back)
		Set Screw
*130907		Arm Rock Shaft Bushing (interme-
		diate)
130908	21728	Arm Rock Shaft Bushing (interme-
100000	41120	diate) 130907 with 130912
130912	21714	Arm Rock Shaft Bushing (interme-
200012	21111	diate) Oil Pad (braided cotton)
443c	21703	Arm Rock Shaft Bushing (interme-
1100	21100	diate) Set Screw
130876	21722	Arm Rock Shaft Crank (back, ball
		bearing solid) with 1177E
1177E	21701	Arm Rock Shaft Crank (back)
		Clamping Screw
40025	21704	Arm Rock Shaft Crank (back) Pin
*130909		
100000		" " " Flanged Bushing (front)
130910	21728	Arm Rock Shaft Flanged Bushing
		(front) 130909 with 130912
130912	21714	Arm Rock Shaft Flanged Bushing
2		(front) Oil Pad (braided cotton)
443c	21703	Arm Rock Shaft Flanged Bushing
1100		(front) Set Screw
		(one) DOE FIGION

NO.	PLATE	NAME
130960	21737	Arm Rotary Shaft " " 130960 with 691c
130961		and 130972
*130720		Arm Rotary Shaft Bushing (front)
130720	21728	" " " " "
100121	21,20	130720 with 130713
130713	21714	Arm Rotary Shaft Bushing (front)
		Oil Pad (braided cotton)
443c	21703	Arm Rotary Shaft Bushing (front)
		Set Screw
*130722		Arm Rotary Shaft Bushing (intermediate)
130723	21728	Arm Rotary Shaft Bushing (inter-
		mediate) 130722 with 130713
130713	21714	Arm Rotary Shaft Bushing (inter-
		mediate) Oil Pad (braided cotton)
448c	21703	Arm Rotary Shaft Bushing (inter-
		mediate) Set Screw
130896	21735	Arm Rotary Shaft Counterbalance
		with 130897, 130898 and two 896n
*130897		Arm Rotary Shaft Counterbalance Cap
89 6 E	21703	Arm Rotary Shaft Counterbalance Cap Screw
130898	21704	Arm Rotary Shaft Counterbalance
		Position Pin
*130884	M 7 1000	Arm Rotary Shaft Flanged Bushing (back)
130885	21734	Arm Rotary Shaft Flanged Bushing
		(back) 130884 with 57974
57974	21714	Arm Rotary Shaft Flanged Bushing
		(back) Oil Pad (braided cotton)
159F	21703	Arm Rotary Shaft Flanged Bushing (back) Screw
130962		Arm Rotary Shaft Oil Sling (back)
130972	21713	11 11 11 11 11
		130962 with 130963
130963	21704	Arm Rotary Shaft Oil Sling (back) Oil Tube
69 1 0	21707	Arm Rotary Shaft Oil Sling (back) Screw
130730		Arm Rotary Shaft Oil Sling (front)
130973	21713	" " " " " " "
		130730 with 130731
130731	21704	Arm Rotary Shaft Oil Sling (front) Oil Tube

NO. 130741	PLATE 21718	NAME Food Lifting Economic with two
190141	21110	Feed Lifting Eccentric with two 1036c
49253	21720	Feed Lifting Eccentric Connection
10200	21120	with 457c, 2653, 55515 and two
		896е
896E	21703	Feed Lifting Eccentric Connection
00015	21100	Cap Screw
49030	21704	Feed Lifting Eccentric Connection
10000	21.01	Hinge Pin
457c	21707	Feed Lifting Eccentric Connection
1010	21.101	Hinge Pin Set Screw
55515	21714	Feed Lifting Eccentric Connection
00010	21,11	Oil Pad (braided cotton)
2653	21704	Feed Lifting Eccentric Connection
		Oil Pad Pin
1036c	21703	Feed Lifting Eccentric Set Screw
1103c	21707	" Regulating Screw
130893	21731	" Rocking Frame with 1396E
130894		" " 130893 with
		130746
11398	21727	Feed Rocking Frame Hinge Pin
*58293		" " " " "
		11398 with 1508E
1508E	21702	Feed Rocking Frame Hinge Pin
		Nut
622c	21702	Feed Rocking Frame Hinge Pin
		Screw Bushing
1508J	21702	Feed Rocking Frame Hinge Pin
		Screw Bushing Nut
130746	21714	Feed Rocking Frame Oil Pad
		(braided cotton)
27398	21704	Feed Rocking Frame Washer
120969	21710	Guide
194D	21707	" Screw Stud
671D	21701	" Thumb Screw
130921	21724	Looper, for single thread
130747	21724	" double thread
	Note:	Nos. 130747 and 130921 are sent with
	this	machine.
130748	21731	Looper Bell Crank with 1147c,
		130749 and 130939
46228	21724	Looper Bell Crank Ball Stud
$1147\mathrm{e}$	21703	" " " Set
		Screw
130750	21727	Looper Bell Crank Connection with
		two 171E

NO.	PLATE	NAME
130872		Looper Bell Crank Connection 130750 with 46228
171E	21703	Looper Bell Crank Connection Cap
		Screw
130752	21720	Looper Bell Crank Connection
		Driver with two 1057E
1057E	21703	Looper Bell Crank Connection
		Driver Cap Screw
130754	21719	Looper Bell Crank Connection
1001	01700	Hinge Screw Stud
1664л	21702	Looper Bell Crank Connection
130755	21727	Hinge Screw Stud Nut Looper Bell Crank Hinge Stud
435c	21727	" " " " Set
1000	21100	Screw (lower)
448c	21703	Looper Bell Crank Hinge Stud Set
		Screw (upper)
130749	21714	Looper Bell Crank Oil Pad (felt)
130939	21704	" " " Retainer
130756	21724	" Carrier with 130760 and
		three 1147c
130757	21722	Looper Carrier Connection with
		four 175E
		■
130873		Looper Carrier Connection 130757
	91794	with 130956 and 130970
130873 130970	21724	with 130956 and 130970 Looper Carrier Connection Ball
130970		with 130956 and 130970 Looper Carrier Connection Ball Screw Stud (right)
	21724 21702	with 130956 and 130970 Looper Carrier Connection Ball Screw Stud (right) Looper Carrier Connection Ball
130970		with 130956 and 130970 Looper Carrier Connection Ball Screw Stud (right) Looper Carrier Connection Ball Screw Stud (right) Nut
130970 1518J	21702	with 130956 and 130970 Looper Carrier Connection Ball Screw Stud (right) Looper Carrier Connection Ball Screw Stud (right) Nut Looper Carrier Connection Ball
130970 1518J	21702	with 130956 and 130970 Looper Carrier Connection Ball Screw Stud (right) Looper Carrier Connection Ball Screw Stud (right) Nut Looper Carrier Connection Ball
130970 1518J	21702	with 130956 and 130970 Looper Carrier Connection Ball Screw Stud (right) Looper Carrier Connection Ball Screw Stud (right) Nut Looper Carrier Connection Ball Screw Stud (right) Washer
130970 1518J 49043 130956	21702 21704 21724	with 130956 and 130970 Looper Carrier Connection Ball Screw Stud (right) Looper Carrier Connection Ball Screw Stud (right) Nut Looper Carrier Connection Ball Screw Stud (right) Washer (fibre) Looper Carrier Connection Ball Stud (left)
130970 1518J 49043	21702 21704	with 130956 and 130970 Looper Carrier Connection Ball Screw Stud (right) Looper Carrier Connection Ball Screw Stud (right) Nut Looper Carrier Connection Ball Screw Stud (right) Washer (fibre) Looper Carrier Connection Ball Stud (left) Looper Carrier Connection Ball
130970 1518J 49043 130956 1147c	21702 21704 21724 21703	with 130956 and 130970 Looper Carrier Connection Ball Screw Stud (right) Looper Carrier Connection Ball Screw Stud (right) Nut Looper Carrier Connection Ball Screw Stud (right) Washer (fibre) Looper Carrier Connection Ball Stud (left) Looper Carrier Connection Ball Stud (left) Stud (left) Set Screw
130970 1518J 49043 130956	21702 21704 21724	with 130956 and 130970 Looper Carrier Connection Ball Screw Stud (right) Looper Carrier Connection Ball Screw Stud (right) Nut Looper Carrier Connection Ball Screw Stud (right) Washer (fibre) Looper Carrier Connection Ball Stud (left) Looper Carrier Connection Ball Stud (left) Looper Carrier Connection Ball Stud (left) Set Screw Looper Carrier Connection Ball
130970 1518J 49043 130956 1147c 49043	21702 21704 21724 21703 21704	with 130956 and 130970 Looper Carrier Connection Ball Screw Stud (right) Looper Carrier Connection Ball Screw Stud (right) Nut Looper Carrier Connection Ball Screw Stud (right) Washer (fibre) Looper Carrier Connection Ball Stud (left) Looper Carrier Connection Ball Stud (left) Set Screw Looper Carrier Connection Ball Stud (left) Washer (fibre)
130970 1518J 49043 130956 1147c	21702 21704 21724 21703	with 130956 and 130970 Looper Carrier Connection Ball Screw Stud (right) Looper Carrier Connection Ball Screw Stud (right) Nut Looper Carrier Connection Ball Screw Stud (right) Washer (fibre) Looper Carrier Connection Ball Stud (left) Looper Carrier Connection Ball Stud (left) Set Screw Looper Carrier Connection Ball Stud (left) Set Screw Looper Carrier Connection Ball Stud (left) Washer (fibre) Looper Carrier Connection Cap
130970 1518J 49043 130956 1147c 49043 175E	21702 21704 21724 21703 21704 21703	with 130956 and 130970 Looper Carrier Connection Ball Screw Stud (right) Looper Carrier Connection Ball Screw Stud (right) Nut Looper Carrier Connection Ball Screw Stud (right) Washer (fibre) Looper Carrier Connection Ball Stud (left) Looper Carrier Connection Ball Stud (left) Set Screw Looper Carrier Connection Ball Stud (left) Washer (fibre) Looper Carrier Connection Cap (left) Screw
130970 1518J 49043 130956 1147c 49043	21702 21704 21724 21703 21704	with 130956 and 130970 Looper Carrier Connection Ball Screw Stud (right) Looper Carrier Connection Ball Screw Stud (right) Nut Looper Carrier Connection Ball Screw Stud (right) Washer (fibre) Looper Carrier Connection Ball Stud (left) Looper Carrier Connection Ball Stud (left) Set Screw Looper Carrier Connection Ball Stud (left) Washer (fibre) Looper Carrier Connection Cap (left) Screw Looper Carrier Connection Cap
130970 1518J 49043 130956 1147c 49043 175E	21702 21704 21724 21703 21704 21703	with 130956 and 130970 Looper Carrier Connection Ball Screw Stud (right) Looper Carrier Connection Ball Screw Stud (right) Nut Looper Carrier Connection Ball Screw Stud (right) Washer (fibre) Looper Carrier Connection Ball Stud (left) Looper Carrier Connection Ball Stud (left) Screw Looper Carrier Connection Ball Stud (left) Set Screw Looper Carrier Connection Ball Stud (left) Washer (fibre) Looper Carrier Connection Cap (left) Screw Looper Carrier Connection Cap (right) Screw
130970 1518J 49043 130956 1147c 49043 175E	21702 21704 21724 21703 21704 21703 21703	with 130956 and 130970 Looper Carrier Connection Ball Screw Stud (right) Looper Carrier Connection Ball Screw Stud (right) Nut Looper Carrier Connection Ball Screw Stud (right) Washer (fibre) Looper Carrier Connection Ball Stud (left) Looper Carrier Connection Ball Stud (left) Set Screw Looper Carrier Connection Ball Stud (left) Washer (fibre) Looper Carrier Connection Cap (left) Screw Looper Carrier Connection Cap
130970 1518J 49043 130956 1147c 49043 175E 175E	21702 21704 21724 21703 21704 21703 21703 21724	with 130956 and 130970 Looper Carrier Connection Ball Screw Stud (right) Looper Carrier Connection Ball Screw Stud (right) Nut Looper Carrier Connection Ball Screw Stud (right) Washer (fibre) Looper Carrier Connection Ball Stud (left) Looper Carrier Connection Ball Stud (left) Looper Carrier Connection Ball Stud (left) Set Screw Looper Carrier Connection Ball Stud (left) Washer (fibre) Looper Carrier Connection Cap (left) Screw Looper Carrier Connection Cap (right) Screw Looper Carrier Hinge Stud " " Collar with two 202F
130970 1518J 49043 130956 1147c 49043 175E 175E	21702 21704 21724 21703 21704 21703 21703 21724 21724	with 130956 and 130970 Looper Carrier Connection Ball Screw Stud (right) Looper Carrier Connection Ball Screw Stud (right) Nut Looper Carrier Connection Ball Screw Stud (right) Washer (fibre) Looper Carrier Connection Ball Stud (left) Looper Carrier Connection Ball Stud (left) Looper Carrier Connection Ball Stud (left) Set Screw Looper Carrier Connection Ball Stud (left) Washer (fibre) Looper Carrier Connection Cap (left) Screw Looper Carrier Connection Cap (right) Screw Looper Carrier Hinge Stud " " Collar

NO.	PLATE 21703	NAME Looper Carrier Hinge Stud Set
896E	41103	Looper Carrier Hinge Stud Set Screw
130760	21714	Looper Carrier Oil Pad (braided
130100	21111	cotton)
130761	21721	Looper Carrier Rock Shaft
130762	21721	" " " Crank
100102	21,21	(back) forked, with 51313c
51313c	21703	Looper Carrier Rock Shaft Crank
010100	21,00	(back) Position Screw
49049	21721	Looper Carrier Rock Shaft Crank
10010		(back) Slide Block
130763	21721	Looper Carrier Rock Shaft Crank
		(front) with 896E and two 157E
157E	21701	Looper Carrier Rock Shaft Crank
		(front) Clamping Screw
130764	21720	Looper and Thread (under) Take-up
		Eccentric with two 1036c
1036c	21703	Looper and Thread (under) Take-up
		Eccentric Set Screw
130765	21733	Looper Gate
63C	21701	" " Hinge Screw
2818	21704	" " " Friction
		Washer
1147c	21703	Looper Set Screw
130766	21734	Needle Bar (hollow)
130767	21727	" " Bushing (lower)
435E	21703	" " " Set
		Screw
130768	21727	Needle Bar Bushing (upper)
1133E	21707	" " " Set
		Screw
130769	21716	Needle Bar Connecting Link
130874		" " 130769
		with 49268 and 130771
130770	***************************************	Needle Bar Connecting Link Hinge Pin
130771	21724	Needle Bar Connection Link Hinge
		Pin 130770 with 130772
130772		Needle Bar Connecting Link Hinge
		Pin Oil Tube
624c	21703	Needle Bar Connecting Link Hinge
		Pin Set Screw
49268	21727	Needle Bar Connecting Stud with
AU #100	1~1	1454E
1454E	21703	
TANAR	21103	Needle Bar Connecting Stud Clamping Screw
		INE DOLOW

NO.	PLATE	NAME Name Name Name Name Name Name Name Name
130932	21714	Needle Bar Oil Pad (felt)
130940	21713	Retainer
316c	21703	Sciew
1629c		Claimping Nuc
130773	21720	Guara
	21701	belew
130964	21734	Oil Reservoir
130965	21736	" Cover
50116D		" " Hinge Screw
130953	21714	" " " Frie-
		tion Washer
1127D	21707	Oil Reservoir Cover Thumb Screw
130776		" Oil Pipe for 130966
130966	21735	" " " 130776 with
		130784, for oiling Arm Rotary
		Shaft Back Bearing
130784	***************************************	Oil Reservoir Oil Pipe Joint for 130966
130779		Oil Reservoir Oil Pipe for 130967
130967	21735	" " 130779 with
		130778, for oiling Arm Rotary
		Shaft Intermediate Bearing
130778		Oil Reservoir Oil Pipe Joint for
		130967
130782		Oil Reservoir Oil Pipe for 130783
130783	21735	" " 130782 with
		130784, for oiling Looper Bell
		Crank Connection Driver
130784		Oil Reservoir Oil Pipe Joint for
200102		130783
130785		Oil Reservoir Oil Pipe for 130968
130968	21735	" " " 130785 with
20000	21100	190100 MICH
		130778, for oiling Arm Rotary Shaft Front Bearing
130778		
130110		Oil Reservoir Oil Pipe Joint for 130968
130787	21710	
100101	21110	Oil Reservoir Oil Pipe Clamping Plate
176ј	21701	
1100	21101	Oil Reservoir Oil Pipe Clamping
120700	01710	Plate Screw
130788	21710	Oil Reservoir Oil Pipe Position
100700	01710	Plate
130789	21710	Oil Reservoir Oil Tube for 130967
100701	01710	and 130968
130/91	21710	100 100 100 100
		and 130966

277	PLATE	NAME
NO. 130957	21710	Oil Reservoir Oil Tube for oiling
200001		Crank Connecting Rod (upper)
		Bearing
130793	21730	Oil Reservoir Oil Tube Wick (9
100100		strands) for 130783
130794	21730	Oil Reservoir Oil Tube Wick (6
100101	21100	strands) for 130967 and 130968
130795	21730	Oil Reservoir Oil Tube Wick (8
190199	21100	strands) for 130966
130797	21730	Oil Reservoir Oil Tube Wick (5
190191	21130	strands) for 130957
100000		Oil Reservoir complete, Nos. 1127p,
130969		50116b, 130793, 130795, 130797,
		130953, 130957, 130964, 130965 and
		two each 130789, 130791 and
		130794
50152p	21701	Oil Reservoir Screw for 130969
130899	21710	" " for 130902
130900	21704	" " Oil Tube (brass)
130901	21719	" " Wick (wick)
130902		Oil Reservoir complete, for oiling
		Feed Connecting Rod, for 130734,
		Nos. 130899 to 130901
894F	21701	
894F	21701	Nos. 130899 to 130901
894F 130799	21701 21734	Nos. 130899 to 130901 Oil Reservoir Screw for 130734 and
0021		Nos. 130899 to 130901 Oil Reservoir Screw for 130734 and 130902
130799	21734 21721	Nos. 180899 to 130901 Oil Reservoir Screw for 130734 and 130902 Presser Bar
130799 130800	21734 21721	Nos. 180899 to 130901 Oil Reservoir Screw for 130734 and 130902 Presser Bar " " Bushing (lower)
130799 130800	21734 21721	Nos. 180899 to 130901 Oil Reservoir Screw for 130734 and 130902 Presser Bar " " Bushing (lower) " " Set
130799 130800 435E	21734 21721 21703	Nos. 130899 to 130901 Oil Reservoir Screw for 130734 and 130902 Presser Bar ""Bushing (lower) ""Set Screw
130799 130800 435E	21734 21721 21703	Nos. 130899 to 130901 Oil Reservoir Screw for 130734 and 130902 Presser Bar " " Bushing (lower) " " " Set Screw Presser Bar Bushing (upper)
130799 130800 435E	21734 21721 21703	Nos. 130899 to 130901 Oil Reservoir Screw for 130734 and 130902 Presser Bar " " Bushing (lower) " " " " Set Screw Presser Bar Bushing (upper) " " " Set
130799 130800 435E 49061 1133E	21734 21721 21703 21727 21707	Nos. 130899 to 130901 Oil Reservoir Screw for 130734 and 130902 Presser Bar " " Bushing (lower) " " " " Set Screw Presser Bar Bushing (upper) " " " Set
130799 130800 435E 49061 1133E	21734 21721 21703 21727 21707	Nos. 130899 to 130901 Oil Reservoir Screw for 130734 and 130902 Presser Bar " " Bushing (lower) " " " " Set Screw Presser Bar Bushing (upper) " " " Set Screw Presser Bar Lifter
130799 130800 435E 49061 1133E 49062 2120	21734 21721 21703 21727 21707 21723 21707 21704	Nos. 180899 to 130901 Oil Reservoir Screw for 130734 and 130902 Presser Bar " " Bushing (lower) " " " " Set Screw Presser Bar Bushing (upper) " " " Set Screw Presser Bar Lifter " " Cap Screw " " Friction Washer " " Hinge Stud
130799 130800 435E 49061 1133E 49062 2120 49063	21734 21721 21703 21727 21707 21723 21707 21704 21723	Nos. 180899 to 130901 Oil Reservoir Screw for 130734 and 130902 Presser Bar " " Bushing (lower) " " " " Set Screw Presser Bar Bushing (upper) " " " Set Screw Presser Bar Lifter " " Cap Screw " " Friction Washer " " Hinge Stud
130799 130800 435E 49061 1133E 49062 2120 49063 49064	21734 21721 21703 21727 21707 21723 21707 21704 21723	Nos. 180899 to 130901 Oil Reservoir Screw for 130734 and 130902 Presser Bar " " Bushing (lower) " " " " Set Screw Presser Bar Bushing (upper) " " " Set Screw Presser Bar Lifter " " Cap Screw " " Friction Washer " " Hinge Stud
130799 130800 435E 49061 1133E 49062 2120 49063 49064	21734 21721 21703 21727 21707 21723 21707 21704 21723	Nos. 180899 to 130901 Oil Reservoir Screw for 130734 and 130902 Presser Bar " " Bushing (lower) " " " " Set Screw Presser Bar Bushing (upper) " " " Set Screw Presser Bar Lifter " " " Cap Screw " " Friction Washer " " " Hinge Stud " " " Set Screw
130799 130800 435E 49061 1133E 49062 2120 49063 49064 4530	21734 21721 21703 21727 21707 21723 21707 21704 21723 21703	Nos. 180899 to 130901 Oil Reservoir Screw for 130734 and 130902 Presser Bar " " Bushing (lower) " " " Set Screw Presser Bar Bushing (upper) " " " Set Screw Presser Bar Lifter " " " Cap Screw " " Friction Washer " " " Friction Washer " " " " Set Screw
130799 130800 435E 49061 1133E 49062 2120 49063 49064 4530	21734 21721 21703 21727 21707 21723 21707 21704 21723 21703 9440	Nos. 130899 to 130901 Oil Reservoir Screw for 130734 and 130902 Presser Bar " " Bushing (lower) " " " Set Screw Presser Bar Bushing (upper) " " " Set Screw Presser Bar Lifter " " " Cap Screw " " " Friction Washer " " " Hinge Stud " " " " Set Screw Presser Bar Lifting Bracket with 453c and 892r
130799 130800 435E 49061 1133E 49062 2120 49063 49064 4530	21734 21721 21703 21727 21707 21723 21707 21704 21723 21703 9440	Nos. 180899 to 130901 Oil Reservoir Screw for 130734 and 130902 Presser Bar " " Bushing (lower) " " " Set Screw Presser Bar Bushing (upper) " " " Set Screw Presser Bar Lifter " " " Cap Screw " " " Friction Washer " " " Hinge Stud " " " " Set Screw Presser Bar Lifting Bracket with 453c and 892r
130799 130800 435E 49061 1133E 49062 2120 49063 49064 4530	21734 21721 21703 21727 21707 21723 21707 21704 21723 21703 9440	Nos. 130899 to 130901 Oil Reservoir Screw for 130734 and 130902 Presser Bar ""Bushing (lower) """Set Screw Presser Bar Bushing (upper) """Set Screw Presser Bar Lifter """Cap Screw """Friction Washer """Set Screw Presser Bar Lifting Bracket with 453c and 892r Presser Bar Lifting Bracket Adjusting Screw

NO.	PLATE	NAME
49966	21723	Presser Bar Lifting Link
2120	21707	" " " Cap Screw
724c	21707	" " Hinge
		Screw
49067	21734	Presser Bar Spring (flat)
38468	21716	" " Stud
51242c	21703	" Foot Hinge Screw
130929		" " Plate
130847		" " Shank
130930	21712	Presser Foot (hinged) complete, to
		make three to four stitches to the
		inch, Nos. 51242c, 130847 and
		130929
190л	21707	Presser Foot Screw
574w		
574 W 1539 W		Pressure Regulating Thumb Screw
1539W	21703	Lock Nut
130959	21723	Slack Thread Controller
1095F	21707	Screw
2102	21723	Tension (under thread) Disc
515 70c	21702	Regulating
		Thumb Nut
50326c	21701	Tension (under thread) Screw Stud
59539		
		50326c with 51570c
59534	9440	Tension (under thread) Spring
59537	21723	" " " Bush-
		ing (large)
59538	9440	Tension (under thread) Spring
		Bushing (small)
32572	21723	Tension (under thread) Spring
		Washer
130807	9440	Tension (under thread) Thread
		Guide
50530 K	21702	Tension (upper thread, automatic)
		Body
15770	21723	Tension (upper thread, automatic)
		Cap
130808	21723	Tension (upper thread, automatic)
		Releasing Cam with 1036c
1036e	21703	Tension (upper thread, automatic)
		Releasing Cam Set Screw
130809	21704	Tension (upper thread, automatic)
		Releasing Pin
9540	21724	Tension (upper thread, automatic)
		Spring


NO. 848к	PLATE 21707	NAME Tension (upper thread, automatic)
		Stud
9541	21704	Tension (upper thread, automatic)
		Stud Plug (micarda)
34527		Tension (upper thread, automatic)
		complete, Nos. 848k, 9540, 9541,
130849	9440	15770 and 50530K
190949	9440	Tension (upper thread, automatic) Thread Guide
190л	21707	Tension (upper thread, automatic)
1000	21101	Thread Guide Screw
2102	21723	Tension (upper thread) Disc
51570c	21702	" " Regulating
	-	Thumb Nut
50326c	21701	Tension (upper thread) Screw Stud
59539		
		50326c with 51570c
59534	9440	Tension (upper thread) Spring
59537	21723	" " Bush-
		ing (large)
59538	9440	Tension (upper thread) Spring
90550	01700	Bushing (small)
32572	21723	Tension (upper thread) Spring Washer
49220	21705	
402 2 0	21100	Tension (upper thread) Thread Guide
130931	21705	Thread (under) Take-up for medium
		and heavy work
	Note:	No. 130931 is regularly furnished
		this machine.
130810	21705	Three 1 (and 1 a) The
100010	21100	Thread (under) Take-up for light and medium work
130862	21705	Thread (under) Take-up Connec-
		tion (forked) with two 1057E
1057E	21703	Thread (under) Take-up Connec-
		tion Cap Screw
130864	9440	Thread (under) Take-up Connec-
190л	21707	tion Slide Block Thread (under) Take-up Screw
130811	9440	" " Thread Guide
175л	21703	a a a a a
		Screw
130812	21723	Thread (under) Thread Guide (back
		of arm)

NO.	PLATE	NAME
1423j	21707	Thread (under) Thread Guide Screw
130813	21706	" (upper) Controller
1095F	21707	" " Adjusting
		Screw
691F	21707	Thread (upper) Controller Screw
130814	21723	" " Thread
		Guide
940c	21707	Thread (upper) Controller Thread
		Guide Screw
130815	21705	Thread (upper) Take-up with 1147c
1147c	21703	" " Set Screw
130926	21729	Throat Plate with 665j and 130928,
		for single thread, for 130919 and
		130920
130928	21729	Throat Plate Thread Retainer for
		130926
665 J	21707	Throat Plate Thread Retainer
		Screw
130927	21729	Throat Plate for double thread, for
		130919 and 130920
691F	21707	Throat Plate Screw
*15404		Trade Mark
15405		" " Rivet

SINGER Needles should be used in SINGER Machines These Needles and their Containers are marked with the Company's Trade Mark "SIMANCO.**" 1

Needles in Containers marked
"FOR SINGER MACHINES"
are NOT **SINGER** made needles. 2

LIST OF PARTS COMPLETE FOR

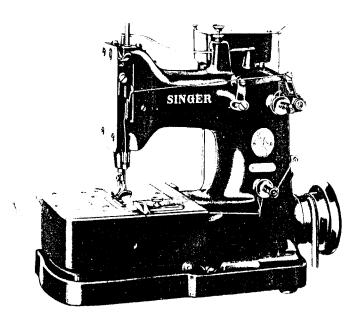

MACHINE No. 157-2

FOR STITCHING HEAVY BURLAP BAGS. MAKES 2 TO 4 STITCHES TO THE INCH. HAS ONE NEEDLE, LOOPER AND THROAT PLATE FOR TWO-THREAD CHAIN-STITCH, ALSO LOOPER AND THROAT PLATE FOR SINGLE THREAD CHAIN-STITCH. LIFT OF PRESSER FOOT 14 INCH. WILL STITCH MATERIAL UP TO 3 INCH IN THICKNESS. FITTED WITH AN OILING SYSTEM THAT AUTOMATICALLY LUBRICATES THE PRINCIPAL BEARINGS OF THE MACHINE.

NO. PLATE *130938 ---- Arm, upper and lower (solid) with 15404 and two 15405

	PLATE	NAME
130702	21719	Arm Back Cover
1095F	21707	DCICW
51333j	21702	" Oil Plug Screw
130703	21704	" " Tube with 54969 for oiling
		Needle Bar Connecting Link
130705	21704	Arm Oil Tube with 54969 for oiling
		Arm Rock Shaft Front Bearing
1 3070 6	21704	Arm Oil Tube with 54969 for oiling
		Arm Rock Shaft Back and Inter-
		mediate Bearings
54969	21714	Arm Oil Tube Oil Pad (braided
		cotton)
130823	21731	Arm Rock Shaft with 624c
130861		" " 130823 with 130769
		and 130770
*130708		Arm Rock Shaft Bushing (back)
130709	21728	
		130708 with 130911
130911	21714	Arm Rock Shaft Bushing (back)
		Oil Pad (braided cotton)
443c	21703	Arm Rock Shaft Bushing (back)
		Set Screw
*130907		Arm Rock Shaft Bushing (interme-
		diate)
130908	21728	Arm Rock Shaft Bushing (interme-
		diate) 130907 with 130912
130912	21714	Arm Rock Shaft Bushing (interme-
		diate) Oil Pad (braided cotton)
443€	21703	Arm Rock Shaft Bushing (interme-
		diate) Set Screw
130876	21722	Arm Rock Shaft Crank, back (ball
		bearing solid) with 1177E
1177E	21701	Arm Rock Shaft Crank, back,
		Clamping Screw
40025	21704	Arm Rock Shaft Crank, back, Pin
*130909		" " " Flanged Bushing
		(front)
130910	21728	Arm Rock Shaft Flanged Bushing
		(front) 130909 with 130912
130912	21714	Arm Rock Shaft Flanged Bushing
		(front) Oil Pad (braided cotton)
138756	21737	Arm Rotary Shaft
138757		" " 138756 with 691c
		and 138759
*130720		Arm Rotary Shaft Bushing (front)
130721	21728	a a a a
		130720 with 130713

No	Y. / 4 (T) (C)	
NO. 130713	PLATE 21714	NAME Arm Rotary Shaft Bushing (front)
		Oil Pad (braided cotton)
443c	21703	Arm Rotary Shaft Bushing (front)
		Set Screw
*130722		Arm Rotary Shaft Bushing (inter-
		mediate)
130723	21728	Arm Rotary Shaft Bushing (inter-
		mediate) 130722 with 130713
130713	21714	Arm Rotary Shaft Bushing (inter-
		mediate) Oil Pad (braided cotton)
448c	21703	Arm Rotary Shaft Bushing (inter-
		mediate) Set Screw
*130884		Arm Rotary Shaft Flanged Bushing
		(back)
130885	21734	Arm Rotary Shaft Flanged Bushing
		(back) 130884 with 57974
57974	21714	Arm Rotary Shaft Flanged Bushing
450	04=00	(back) Oil Pad (braided cotton)
159F	21703	Arm Rotary Shaft Flanged Bushing
. 100550		(back) Screw
138758	0.1.7.1.0	Arm Rotary Shaft Oil Sling (back)
138759	21713	
130963	21704	138758 with 130963
100000	21104	Arm Rotary Shaft Oil Sling (back) Oil Tube
691c	21707	Arm Rotary Shaft Oil Sling (back)
		Set Screw
130730		Arm Rotary Shaft Oil Sling (front)
130973	21713	
		130730 with 130731
130731	21704	Arm Rotary Shaft Oil Sling (front)
		Oil Tube
144 D	21701	Arm Rotary Shaft Screw
130824	21733	Balance Wheel, 21 in. pulley, with
		two 430c
130870	21733	Balance Wheel Cover
430c	21703	" Set Screw
130733	21737	Cloth Plate with two 46224
130865	21737	" " Extension
130866	21719	" " " Hinge Stud
130867	21728	" " " Bear-
		ing with 152E
152e	21707	Cloth Plate Extension Hinge Stud
		Bearing Clamping Screw
596p	21701	Cloth Plate Extension Hinge Stud
		Bearing Screw

NO.	PLATE	NAME
889c	21703	Cloth Plate Extension Hinge Stud
		Set Screw
51262 C	21707	Cloth Plate Extension Lock Screw Stud
130868	21719	Cloth Plate Extension Lock Spring
50183F	21701	<i>u u u u</i>
		Screw (large)
162F	21701	Cloth Plate Extension Lock Spring
		Screw (small)
46224	21723	Cloth Plate Oil Cup
130906	21719	" " " Guard
1423 $_{ m J}$	21707	" " " Serew
50085F	21703	" Serew
49016	21726	" " Slide
38419	21726	" " Spring
725 J	21702	" " " Screw
49017		Cloth Plate Slide complete, Nos.
		38419, 49016 and two 725j
130734		Cloth Plate complete, Nos. 162F,
		596b, 894r, 49017, 50183r, 51262c,
		130733, 130865 to 130868, 130902,
		130906 and two each 889c and
		1423л
130877	21726	Crank Connecting Rod (rod only, hollow)
130752	21720	Crank Connecting Rod End Bearing
		(lower) with two 1057E
1057E	21703	Crank Connecting Rod End Bearing
		(lower) Cap Screw
130878	21726	Crank Connecting Rod End Bearing
130754	21719	(lower) Connection
130734	41/13	Crank Connecting Rod End Bearing
		(lower) Connection Hinge Screw Stud
$1664 ext{J}$	21702	Crank Connecting Rod End Bearing
		(lower) Connecting Hinge Screw
		Stud Nut
*130879		Crank Connecting Rod End Bearing
		(upper)
896E	21703	Crank Connecting Rod End Bearing
		(upper) Cap Screw
130881	21726	Crank Connecting Rod End Bearing
		(upper) complete, Nos. 130879
		and two 896E
1756E	21702	Crank Connecting Rod Nut (lower)
1757E	21702	" " (upper)
		(u)/(n+1)

NO.	PLATE	NAME
130882		Crank Connecting Rod complete,
		Nos. 1664J, 1756E, 1757E, 130752,
		130754, 130877, 130878 and 130881
130883		Crank Connecting Rod 130882 with
		130876
130737	21736	Face Plate
193F	21707	" " Screw
130828	21722	Feed Bar with 457c
130738	21722	" " Hinge Pin
457c	21707	" " Set Screw
130914	21731	" Connecting Rod with two 896E
896E	21703	" " Cap Screw
130916		" " 130914 with
200010		130918 WITH
120000	01710	
$\frac{130889}{1480c}$	21719	Feed Connecting Rod Crank
1480C	21702	" Cap
		Screw
1396E	21701	Feed Connecting Rod Crank Clamp-
		ing Screw
130831	21725	Feed Dog, 16 teeth (10 teeth to the
		inch) for 130856 and 130857
	Note:	No. 130831 is sent with this machine
		No. 130831 is sent with this machine
		ss another Feed Dog is specified on
	unle orde	ss another Feed Dog is specified on er.
172e	unle	ss another Feed Dog is specified on er. Feed Dog Screw
*130917	unle orde	ss another Feed Dog is specified on er. Feed Dog Screw " Eccentric
*130917 *130891	unle orde 21703	ss another Feed Dog is specified on er. Feed Dog Screw " Eccentric " Body
*130917 *130891 51061c	unle orde 21703 21707	ss another Feed Dog is specified on er. Feed Dog Screw " Eccentric " Body " " Set Screw
*130917 *130891 51061c 7071	unle orde 21703 21707 21714	ss another Feed Dog is specified on er. Feed Dog Screw "Eccentric" "Body "Set Screw "Clamping Washer
*130917 *130891 51061c 7071 217J	21703	ss another Feed Dog is specified on er. Feed Dog Screw
*130917 *130891 51061c 7071	unle orde 21703 21707 21714	Feed Dog Screw "Eccentric "Body "Set Screw "Clamping Washer ""Screw Feed Eccentric (adjustable) com-
*130917 *130891 51061c 7071 217J	21703	Feed Dog Screw "Eccentric "Body "Set Screw "Clamping Washer ""Screw Feed Eccentric (adjustable) complete, Nos. 217J, 1103c, 7071,
*130917 *130891 51061c 7071 217J	21703	Feed Dog Screw "Eccentric "Body "Set Screw "Clamping Washer ""Screw Feed Eccentric (adjustable) com-
*130917 *130891 51061c 7071 217J	21703	Feed Dog Screw "Eccentric "Body "Set Screw "Clamping Washer ""Screw Feed Eccentric (adjustable) complete, Nos. 217J, 1103c, 7071,
*130917 *130891 51061C 7071 217J 130918	unle orde 21703 21707 21714 21707 21718	Feed Dog Screw "Eccentric "Body "Clamping Washer "Screw "Screw "Clamping Washer ""Screw Feed Eccentric (adjustable) complete, Nos. 217J, 1103c, 7071, 130891, 130917 and two 51061c
*130917 *130891 51061c 7071 217J 130918	21703 	Feed Dog Screw "Eccentric "Body "Clamping Washer "Screw "Clamping Washer "Screw Feed Eccentric (adjustable) complete, Nos. 217 <i>J</i> , 1103 <i>c</i> , 7071, 130891, 130917 and two 51061 <i>c</i> Feed Lifting Cam with two 1036 <i>c</i>
*130917 *130891 51061c 7071 217J 130918	21703 	Feed Dog Screw "Eccentric "Body "Clamping Washer "Screw Feed Eccentric (adjustable) complete, Nos. 217 <i>J</i> , 1103 <i>c</i> , 7071, 130891, 130917 and two 51061c Feed Lifting Cam with two 1036c ""Connection with 457c and two 175E
*130917 *130891 51061C 7071 217J 130918 130833 130834	21703	Feed Dog Screw "Eccentric "Body ""Set Screw "Clamping Washer ""Screw Feed Eccentric (adjustable) complete, Nos. 217 <i>J</i> , 1103 <i>c</i> , 7071, 130891, 130917 and two 51061c Feed Lifting Cam with two 1036c ""Connection with
*130917 *130891 51061C 7071 217J 130918 130833 130834	21703	Feed Dog Screw "Eccentric "Body "Clamping Washer "Clamping Washer ""Screw Feed Eccentric (adjustable) complete, Nos. 217J, 1103c, 7071, 130891, 130917 and two 51061c Feed Lifting Cam with two 1036c ""Connection with 457c and two 175E Feed Lifting Cam Connection Cap Screw
*130917 *130891 51061C 7071 217J 130918 130833 130834 175E	21703	Feed Dog Screw "Eccentric "Body "Set Screw "Clamping Washer "Screw Feed Eccentric (adjustable) complete, Nos. 217J, 1103c, 7071, 130891, 130917 and two 51061c Feed Lifting Cam with two 1036c ""Connection with 457c and two 175E Feed Lifting Cam Connection Cap Screw Feed Lifting Cam Connection Collar
*130917 *130891 51061C 7071 217J 130918 130833 130834	21703	Feed Dog Screw "Eccentric "Body "Set Screw "Clamping Washer "Screw Feed Eccentric (adjustable) complete, Nos. 217J, 1103c, 7071, 130891, 130917 and two 51061c Feed Lifting Cam with two 1036c ""Connection with 457c and two 175E Feed Lifting Cam Connection Cap Screw Feed Lifting Cam Connection Collar ""Hinge
*130917 *130891 51061C 7071 217J 130918 130833 130834 175E 130871 130836	21703	Feed Dog Screw "Eccentric "Body "Set Screw "Clamping Washer "Screw Feed Eccentric (adjustable) complete, Nos. 217J, 1103c, 7071, 130891, 130917 and two 51061c Feed Lifting Cam with two 1036c ""Connection with 457c and two 175E Feed Lifting Cam Connection Cap Screw Feed Lifting Cam Connection Collar ""Hinge Pin
*130917 *130891 51061C 7071 217J 130918 130833 130834 175E	21703	Feed Dog Screw "Eccentric "Body "Set Screw "Clamping Washer "Screw Feed Eccentric (adjustable) complete, Nos. 217J, 1103c, 7071, 130891, 130917 and two 51061c Feed Lifting Cam with two 1036c ""Connection with 457c and two 175E Feed Lifting Cam Connection Cap Screw Feed Lifting Cam Connection Collar ""Hinge

NO.	PLATE	NAME Feed Lifting Cam Set Screw
1036c	21703	
1103c	21707	regulating below
130893	21731	ROCKING Frame with 1990E
130894		150675 WICH
		130746
11398	21727	Feed Rocking Frame Hinge Pin
*58293		., ., ., ., ., .,
		11398 with 1508E
1508E	21702	Feed Rocking Frame Hinge Pin Nut
622 c	21702	Feed Rocking Frame Hinge Pin
		Screw Bushing
1508л	21702	Feed Rocking Frame Hinge Pin
		Screw Bushing Nut
130746	21714	Feed Rocking Frame Oil Pad
200,10		(braided cotton)
27398	21704	Feed Rocking Frame Washer
120969	21710	Guide
194D	21707	" Screw Stud
671b		" Thumb Screw
130838	21724	Looper, for single thread
130839	21724	" " double thread
130748	21731	double tillead
190149	21131	" Bell Crank with 1147c, 130749 and 130939
46228	21724	Looper Bell Crank Ball Stud
1147c	21703	" " " Set
11110	21100	Screw
130750	21727	Looper Bell Crank Connection with
200100	21121	two 171E
130872		
130374		Looper Bell Crank Connection
		130750 with 46228
171E	21703	Looper Bell Crank Connection
		Cap Screw
130752	21720	Looper Bell Crank Connection
		Driver with two 1057E
1057E	21703	Looper Bell Crank Connection
		Driver Cap Screw
130754	21719	Looper Bell Crank Connection
		Hinge Screw Stud
1664л	21702	Looper Bell Crank Connection
		Hinge Screw Stud Nut
130755	21727	Looper Bell Crank Hinge Stud
435c	21703	" " " Set
		Screw (lower)
448c	21703	Looper Bell Crank Hinge Stud Set
		Screw (upper)
		(wppor)

NO.	PLATE	NAME Leaner Bell Cropk Oil Dad (felt)
130749	21714	Looper Bell Crank Oil Pad (felt)
130939	21704	Retainer
130756	21724	Carrier with 150100 and timee
		1147c
130757	21722	Looper Carrier Connection with
		four 175E
130873		Looper Carrier Connection 130757
		with 130956 and 130970
130970	21724	Looper Carrier Connection Ball
		Screw Stud (right)
1518ј	21702	Looper Carrier Connection Ball
		Screw Stud (right) Nut
49043	21704	Looper Carrier Connection Ball
		Screw Stud (right) Washer
		(fibre)
130956	21724	Looper Carrier Connection Ball
		Stud (left)
1147c	21703	Looper Carrier Connection Ball
		Stud (left) Set Screw
49043	21704	Looper Carrier Connection Ball
		Stud (left) Washer (fibre)
175E	21703	Looper Carrier Connection Cap
		(left) Screw
175E	21703	Looper Carrier Connection Cap
		(right) Screw
130759	21724	Looper Carrier Hinge Stud
49166	21724	" " " Collar
		with two 202F
202F	21707	Looper Carrier Hinge Stud Collar
		Set Screw
896E	21703	Looper Carrier Hinge Stud Set
		Screw
130760	21714	Looper Carrier Oil Pad (braided
		cotton)
130761	21721	Looper Carrier Rock Shaft
130762	21721	" " " Crank
200102		(back), forked, with 51313c
51313c	21703	Looper Carrier Rock Shaft Crank
010100	21100	(back) Position Screw
49049	21721	Looper Carrier Rock Shaft Crank
10010	21121	(back) Slide Block
130763	21721	Looper Carrier Rock Shaft Crank
T00100	21121	(front) with 896E and two 157E
157E	21701	Looper Carrier Rock Shaft Crank
191E	21/01	-
130840	21720	(front) Clamping Screw
T90940	41140	Looper and Thread (under) Take-up
		Eccentric with two 1036c

NO. 1036c	PLATE 21703	NAME Looper and Thread (under) Take-up
10900	21103	Eccentric Set Screw
130765	21733	Looper Gate
63c	21701	" " Hinge Screw
2818	21704	" " " Frietion
2010	21101	Washer
1147c	21703	Looper Set Screw
130841	21734	Needle Bar (hollow)
130842	21727	" " Bushing (lower)
435E	21703	" " " Set
20012	21.00	Screw
130843	21727	Needle Bar Bushing (upper)
1133E	21707	" " Set
		Screw
130769	21716	Needle Bar Connecting Link
130875		" " " 130769
		with 130770 and 130844
* 130770		Needle Bar Connecting Link Hinge
		Pin
624 C	21703	Needle Bar Connecting Link Hinge Pin Set Screw
130844	21727	Needle Bar Connecting Stud with
	04500	1454E
1454E	21703	Needle Bar Connecting Stud Clamp-
190041	01714	ing Screw
130941	21714	Needle Bar Oil Pad (felt)
130942 316c	21713 21703	Retainer
1753c	$\frac{21703}{21702}$	Screw
130845	$\frac{21702}{21720}$	" Clamping Nut
162n	21720	Guard
130964	21734	DOLOW
130965	21734	Oil Reservoir " " Cover
50116D	21707	Cover
130953	21714	Thinge acrew
100000	21114	tion Washer
1127p	21707	Oil Reservoir Cover Thumb Screw
*130776		" " Oil Pipe for 130966
130966	21735	" " " 130776 with
200000	22100	130784, for oiling Arm Rotary
		Shaft Back Bearing
*130784		Oil Reservoir Oil Pipe Joint for
		130966
*130779		Oil Reservoir Oil Pipe for 130967
130967	21735	" " " 130779 with
	_	130778, for oiling Arm Rotary
		Shaft Intermediate Bearing
		20011116

NO.	PLATE	NAME
*130778		Oil Reservoir Oil Pipe Joint for 130967
*130782		Oil Reservoir Oil Pipe for 130783
130783	21735	" " " 130782 with
		130784, for oiling Looper Bell
		Crank Connection Driver
*130784		Oil Reservoir Oil Pipe Joint for
100101		130783
*130785		Oil Reservoir Oil Pipe for 130968
130968	21735	" " 130785 with
200000		130778, for oiling Arm Rotary
		Shaft Front Bearing
*130778		Oil Reservoir Oil Pipe Joint for
100110		130968
130787	21710	Oil Reservoir Oil Pipe Clamping
130101	21110	Plate
176ј	21701	Oil Reservoir Oil Pipe Clamping
1100	21101	Plate Screw
190700	91710	Oil Reservoir Oil Pipe Position
130788	21710	
100700	01710	Plate
130789	21710	Oil Reservoir Oil Tube for 130967
100701	01710	and 130968 Oil Reservoir Oil Tube for 130783
130791	21710	and 130966
100057	01710	******
130957	21710	Oil Reservoir Oil Tube for oiling
		Crank Connecting Rod (upper)
120702	21730	Bearing Oil Reservoir Oil Tube Wick (9
130793	21 (30	•
190704	01790	strands) for 130783 Oil Reservoir Oil Tube Wick (6
130794	21730	
100000	01700	strands) for 130967 and 130968
130795	21730	Oil Reservoir Oil Tube Wick (8
10000	01700	strands) for 130966
130797	21730	Oil Reservoir Oil Tube Wick (5
100000		strands) for 130957
130969		Oil Reservoir complete, Nos. 11270,
		50116p, 130793, 130795, 130797,
		130953, 130957, 130964, 130965 and
		two each 130789, 130791 and
F01F0.	01701	130794
501520		Oil Reservoir Screw for 130969
130899	21710	101 130902
130900	21704	On Tube (mass)
130901	21719	WICK (WICK)
130902		Oil Reservoir complete, for oiling
		Feed Connecting Rod, for 130734.
		Nos. 130899 to 130901

NO. 894F	21701	NAME Oil Reservoir Screw, for 130902
130799	21734	Presser Bar
130800	21721	" " Bushing (lower)
435E	21703	" " Set
1000		Screw
49061	21727	Presser Bar Bushing (upper)
1133E	21707	" " " Set
		Screw
49062	21723	Presser Bar Lifter
2120	21707	" " Cap Screw
49063	21704	" " Friction Washer
49064	21723	" " Hinge Stud
453c	21703	" " " " Set
		Screw
130801	9440	Presser Bar Lifting Bracket with
		453c and 892r
892F	21702	Presser Bar Lifting Bracket Ad-
		justing Screw
453∈	21703	Presser Bar Lifting Bracket Set
		Screw
49066	21723	Presser Bar Lifting Link
212p	21707	" " Cap Screw
724c	21707	" " " Hinge
		Screw
49067	21734	Presser Bar Spring (flat)
38468	21716	" " Stud
130949	21712	" Foot (solid) to make two to
		four stitches to the inch
51242c	21703	Presser Foot Hinge Screw
130846		" " Plate for 130848
130929		" " 130930
130950		" " " 130952
130847		" " Shank
130951		" " for 130952
130848	21712	Presser Foot (hinged) complete, to
		make three to four stitches to the
		inch, Nos. 51242c, 130846 and
		130847
130952	21712	Presser Foot (hinged) complete, to
		make two to four stitches to the
		inch, Nos. 51242c, 130950 and
		130951
	Note:	Presser Foot No. 130952 is sent with
	41010	. renset Foot No. 190992 is sent With

Note: Presser Foot No. 130952 is sent with this machine unless another Presser Foot is specified on order.

NO.	PLATE	NAME
130930	21712	Presser Foot (hinged) complete, to
		make three to four stitches to the
		inch, Nos. 51242c, 130847 and
		130929
190л	21707	Presser Foot Screw
574w		Pressure Regulating Thumb Screw
1539w	21702	
130959	21723	Lock Nut
1095F	21707	Slack Thread Controller " " Screw
2102	21723	Tension (under thread) Disc
51570c	21702	" " Regulating
0-0,00		Thumb Nut
50326c	21701	Tension (under thread) Screw Stud
59539		
		50326c with 51570c
59534	9440	Tension (under thread) Spring
59537	21 723	" " " Bush-
		ing (large)
59538	9440	Tension (under thread) Spring
00570	01700	Bushing (small)
32572	21723	Tension (under thread) Spring Washer
130807	9440	Tension (under thread) Thread
100001	0110	Guide (under thread) Thread
50530к	21702	Tension (upper thread, automatic)
		Body
15770	21723	Tension (upper thread, automatic)
		Cap
130808	21723	Tension (upper thread, automatic)
4000		Releasing Cam with 1036c
1036c	21703	Tension (upper thread, automatic)
130809	01704	Releasing Cam Set Screw
130909	21704	Tension (upper thread, automatic)
9540	21724	Releasing Pin
2010	21124	Tension (upper thread, automatic) Spring
848ĸ	21707	Tension (upper thread, automatic)
0.01.		Stud
9541	21704	Tension (upper thread, automatic)
		Stud Plug (micarda)
34527		Tension (upper thread, automatic)
		complete, Nos. 848k, 9540, 9541,
		15770 and 50530K
130849	9440	Tension (upper thread, automatic)
		Thread Guide

NO.	PLATE	NAME
190J	21707	Tension (upper thread, automatic)
		Thread Guide Screw
2102	21723	Tension (upper thread) Disc
51570c	21702	" " Regulating
		Thumb Nut
$50326\mathrm{c}$	21701	Tension (upper thread) Screw Stud
59539		
		50326c with 51570c
59534	9440	Tension (upper thread) Spring
59537	21723	" " " Bush-
		ing (large)
59538	9440	Tension (upper thread) Spring
		Bushing (small)
32572	21723	Tension (upper thread) Spring
		Washer
130850	21705	Tension (upper thread) Thread
		Guide
130851	21705	Thread (under) Take-up
130862	21705	" " Connection
40		(forked) with two 1057E
1057E	21703	Thread (under) Take-up Connection
100001	0.440	Cap Screw
130864	9440	Thread (under) Take-up Connection
100-	01707	Slide Block
190л 130811	$21707 \\ 9440$	Thread (under) Take-up Screw
130311 175j	21703	" " Thread Guide
1100	21103	Screw
130812	21723	Thread (under) Thread Guide
100012	D. 120	(back of arm)
1423л	21707	Thread (under) Thread Guide
2120"		Screw (under) Thread Guide
130853	21706	Thread (upper) Controller
1095г	21707	" " Adjusting
		Screw
691F	21707	Thread (upper) Controller Screw
130854	21723	" " Thread
100001	21120	Screw Eyelet
1708ј	21702	•
11000	21104	Thread (upper) Controller Thread
100055	01705	Screw Eyelet Lock Nut
130855	21705	Thread (upper) Take-up with 457c
457c	21707	Set Screw
130856	21725	Throat Plate with 6653 and 130858,
1000	04===	for 130831 for single thread
130857	21725	Throat Plate for 130831, for double
		thread

NO. 691F	PLATE 21707	Throat	Plate	Screw		
130858	21725	"	"	Thread	Retaine	r
665л	21707	"	4.4	"	"	Screw
*15404		Trade	Mark			
15405		**	**	Rivet		

FITTINGS FOR 157-1 MACHINE

FOR 4 TO 8 STITCHES TO THE INCH, FOR SUGAR OR FLOUR BAGS OF COTTON MATERIAL.

NO.	PLATE	NAME
130739	21709	Feed Dog, 13 teeth (14 teeth to the
		inch) for 130816 and 130982
130802		Presser Foot for 132805
130803		" " Compensating Plate
100000		for 130805
226л	21707	Presser Foot Compensating Plate Screw
130804	21724	Presser Foot Compensating Plate Spring
130805	21709	Presser Foot (compensating) com-
		plete, Nos. 2261 and 130802 to
		130804
50087c	21703	Presser Foot Hinge Screw for
		130981
130979		Presser Foot Plate for 130981
130980		" " Shank for 130981
130981	21709	Presser Foot (hinged) complete,
		Nos. 50087c, 130979 and 130980
130816	21709	Throat Plate, for double thread, for
		130739
130982	21709	Throat Plate (keyhole type needle
		hole) for double thread, for 130739
FOR 4 TO	0 8 STI	TCHES TO THE INCH, FOR SUGAR

OR FLOUR BAGS OF COTTON MATERIAL.

(Narrow Feeding Surface)

130983	21717	Feed Dog. 15 teeth (14 teeth to the inch) for 130991
130984		Presser Foot for 130985
130803		" " Compensating Plate
		for 130985
226л	21707	Presser Foot Compensating Plate Screw
130804	21724	Presser Foot Compensating Plate Spring

NO.	PLATE	NAME
130985	21717	Presser Foot (compensating) com-
		plete, Nos. 2261, 130803, 130804
		and 130984
130986	21724	Presser Foot Hinge Pin for 130989
130987		" " Plate for 130989
130988		" " Shank for 130989
130989	21717	Presser Foot (hinged) complete,
		Nos. 130986 to 130988
130990	21717	Presser Foot (solid)
130991	21717	Throat Plate (keyhole type needle
		hole) for double thread, for 130983

FC

130991	21717	Throat Plate (keyhole type needle hole) for double thread, for 130983
OR FL		TCHES TO THE INCH, FOR SUGAR BAGS OF COTTON MATERIAL OR LAP.
130935	21715	Feed Dog. 15 teeth (10 teeth to the inch) without thread channel for 130926, 130927, 130936 and 130937
130934	21725	Feed Dog, 15 teeth (10 teeth to the inch) with thread channel .005" deep for 130926, 130927, 130936
130971	21711	and 130937 Feed Dog, 15 teeth (10 teeth to the inch) with thread channel .007" deep for 130926, 130927, 130936 and 130937
130919	21729	Feed Dog, 15 teeth (10 teeth to the inch) with thread channel .015" deep for 130926, 130927, 130936 and 130937
130923		Presser Foot for 130925
130924		" " Compensating Plate for 130925
226J	21707	Presser Foot Compensating Plate Screw
130804	21724	Presser Foot Compensating Plate Spring
130925	21711	Presser Foot (compensating) complete, Nos. 226J, 130804, 130923 and 130924
51242c	91709	Presser Foot Hinge Screw
130992		" "Needle Guard for 130994
217J		" " " Screw for
₩± (1)		DOLCM 101

130994 130993 —— Presser Foot Plate for 130994 137070 --- " " Shank for 130994

NO.	PLATE	
130994	21711	Presser Foot (hinged) complete,
		for sewing bags having frayed
		edges, Nos. 217 _J , 51242c, 130992,
		130993 and 137070
51242c	21703	Presser Foot Hinge Screw
130929		" Plate for 130930
130847		" Shank for 130930
130930	21712	
		Nos. 51242c, 130847 and 130929
130922	21711	Presser Foot (solid)
130926	21729	
		for single thread for 130919,
		130920, 130934, 130935 and 130971
130936	21711	Throat Plate (keyhole type needle
		hole) with 6651 and 130928, for
		single thread, for 130919, 130920,
		130934, 130935 and 130971
130928	21729	Throat Plate Thread Retainer for
		130926 and 130936
665л	21707	Throat Plate Thread Retainer
		Screw for 130926 and 130936
130927	21729	Throat Plate for double thread, for
		130919, 130920, 130934, 130935 and
		130971
136937	21715	Throat Plate (keyhole type needle
		hole) for double thread, for
		130919, 130920, 130934, 130935 and
		130971
ינ פחם	TO P	
ON 33	10 8	STITCHES TO THE INCH, FOR

FOR 31 TO 8 STITCHES TO THE INCH, FOR MEDIUM WEIGHT BURLAP BAGS.

Note: The same Presser Feet and Throat Plates are used for medium weight burlap bags as listed in preceding set of fittings.

130920 21729 Feed Dog, 12 teeth (8 teeth to the inch) for 130926, 130927, 130936 and 130937

FOR 31 TO 6 STITCHES TO THE INCH, FOR BAGS OF HEAVY WEIGHT BURLAP HAVING FRAYED EDGES.

130995	21711	Feed Dog, 12 teeth (8 teeth to the
		inch) for 130999 and 131000
51242c	21703	Presser Foot Hinge Screw
130992	21711	" Needle Guard for 130998
217л	21707	" " " Screw
130996		" " Plate for 130998
130997		" Shank for 130998

NO.	PLATE	NAME
130998	21715	Presser Foot (hinged in center)
		complete, Nos. 2171, 51242c, 130992, 130996 and 130997
130999	21715	Throat Plate with 6653 and 130928, for single thread, for 130995
130928	21729	Throat Plate Thread Retainer for 130999
665л	21707	Throat Plate Thread Retainer Screw for 130999
131000	21716	Throat Plate for double thread, for 130995

FOR 3½ TO 6 STITCHES TO THE INCH, FOR BAGS OF LIGHT OR MEDIUM WEIGHT BURLAP OR SIMILAR MATERIAL.

(Two row feeding surface)

138751	21708	Feed Dog, 15 teeth (10 teeth to the inch) for 138754 and 138755
51242C	21703	Presser Foot Hinge Screw
138752		" " Plate
130847		" " Shank
138753	21708	Presser Foot (hinged) complete, Nos. 51242c, 130847 and 138752
138754	21708	Throat Plate with 6653 and 130928, for single thread, for 138751
130928	21729	Throat Plate Thread Retainer for 138754
665л	21707	Throat Plate Thread Retainer Screw for 138754
138755	21708	Throat Plate for double thread, for 138751

ACCESSORIES

NO.	PLATE	NAME
120344	$\boldsymbol{6201}$	Oiler (copper plated) with 120345
120345	6201	" Spout, 5 in. long
11831	6201	Screw Driver (large)
26026	6201	" (small)
120341	6201	Tweezers (curved)
8909	6201	Wrench for 1518
19079	6201	" " 1629
23766	6201	" " 1508 and 1518

MACHINE BASE

NO.	PLATE	NAME
130954	21738	Machine Base
51329E	21702	" " Oil Hole Screw Plug
50144j	21734	" "Thumb Screw with
		49095
49095	21718	Machine Base Thumb Screw Washer
130818	21736	" Cushion (left) felt
130819	21736	" (right) felt
$50339 \mathrm{E}$	21701	" Screw, to fasten machine to
		base
130820	21719	Machine Screw Washer (leather)
130955		Machine Base complete, Nos.
		51329E, 130818, 130819, 130954 and
		three each 50339E and 130820

MACHINE BASE OIL DRAIN JAR

(Swinging Type)

NO.	PLATE	NAME
131185	20526	Jar (glass)
131191	20526	" Cap
131188	20526	" Clamp
131217		" " 131188 with 131189
131189	20526	" Lever
1247c	21703	" " Hinge Screw
131265	20526	Nipple (long)
131266	20526	" (short)
131267	20526	" Elbow
131268		Machine Base Oil Drain Jar (swing-
		ing type) complete, Nos. 131185,
		131191, 131217, 131266 and two
		each 1247c, 131265 and 131267

FOOT LIFTER PARTS

. NO.	PLATE	NAME
6439		Chain, length 36 in. to 45 in., with
		56864 and 56865
	Note:	When ordering No. 6439, state
	leng	th required.
4879	21716	Chain Connecting Link
56864	21716	" Hook (large)
56865	21716	" (small)
130943	21733	Lifting Lever
130944	21705	" Connection
130945		" " " 130944 with
		12761

NO.	PLATE	NAME
12761	21716	Lifting Lever Connection Hinge Pin
9 D	21701	" " Hinge Screw
130946	21734	" " Spring
57286	21732	Treadle
4882	21732	" Shaft
4883	21732	" Spring
4884	21732	" Stand
423c	21703	" Stop Screw
1650c	21702	" " Nut
57287	Time solution	Treadle complete, Nos. 4879, 4882 to 4884, 57286, two each 423c, 1650c and wood screws 1 in. No. 16
130947		Foot Lifter complete, Nos. 9b, 6439, 57287, 130943, 130945 and 130946

KNEE LIFTER PARTS

NO,	PLATE	NAME				
37563		Chain, length 15 in., with 56864 and 56865				
56864	21716	Chain Hook (large)				
56865	21716	" " (small)				
130943	21733	Lifting Lever				
130944	21705	" Connection				
130945		" " 130944 with				
		12761				
12761	21716	Lifting Lever Connection Hinge Pin				
9 0	21701	" " Hinge Screw				
130946	21734	" " Spring				
2763	21738	Rock Shaft				
12242	21738	" " Hanger with two wood				
		screws 1 in, No. 10				
2765	21738	Rock Shaft Knee Arm				
2766	21738	" " " Hub with 356c				
356c	21703	" " " Set Screw				
2768		Rock Shaft Knee Arm complete,				
		Nos. 2765 to 2767				
2767	21738	Rock Shaft Knee Plate with 356c				
356c	21703	" " " Set Screw				
6337	21738	" " Lifting Bracket with				
		two-356c				
7125	21738	Rock Shaft Lifting Bracket Hook				
356∈	21703	a a a a				
		Set Screw				
356c	21703	Rock Shaft Lifting Bracket Set				
		Screw				

NO.	PLATE	NAME				
2770	21738	Rock Shaft Stop Dog with 356c				
356c	21703	" " " Set Screw				
42143	21738	Rock Shaft complete, Nos. 2763,				
130948		2768, 6337, 7125 and two each 2770 and 12242 Knee Lifter complete, Nos. 9D, 37563, 42143, 130943, 130945 and 130946				


THREAD UNWINDER


(For two spools)


NO.	PLATE	NAME			
225257	20335	Spool Rest (for two spools) with			
		201018c			
150203	20335	Spool Rest Cushion (felt)			
225388	20335	" " Rod			
$200383\mathrm{c}$	21707	" " Set Screw			
$201018\mathrm{c}$	21707	" " Set Screw			
202490	20335	" Stand with 200383c			
225391	20335	Thread Guide			
201696 j	21702	" " Lock Nut			
225326	20335	" " Position Cup			
225324	20335	" Rod with 208E and			
		225322			
208E	21707	Thread Guide Rod Screw			
225322	21702	" " Washer			
225258	20335	Thread Unwinder complete, Nos.			
201696л, 202490, 225257, 225324,					
225326, 225388, two each 150203,					
225391 and three wood screws 7					
in. No. 12					


TIMING GAUGE

NO.	PLATE	NAME				
130903	21706	Timing	Gauge	Frame	with	452c
130904	21706	"	"	Indicator	Pin	
452C	21703	"	"	"	**	Set
130905		Screv Timing and 1	Gauge	complete	e, Nos	s. 130903

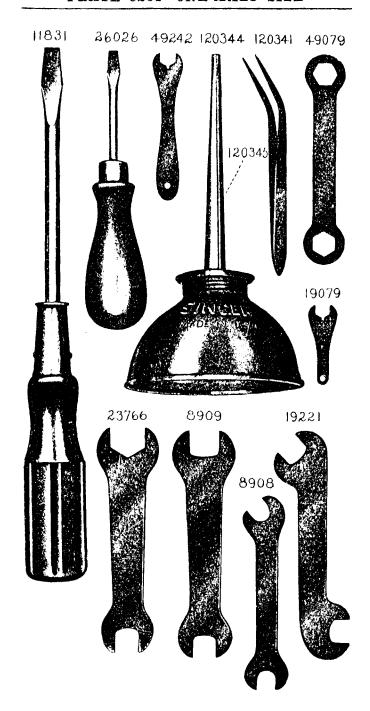

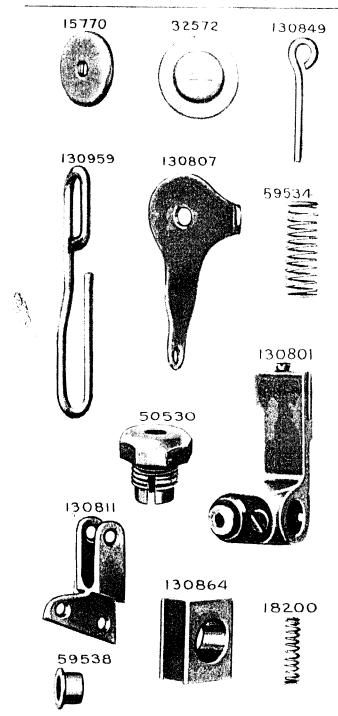

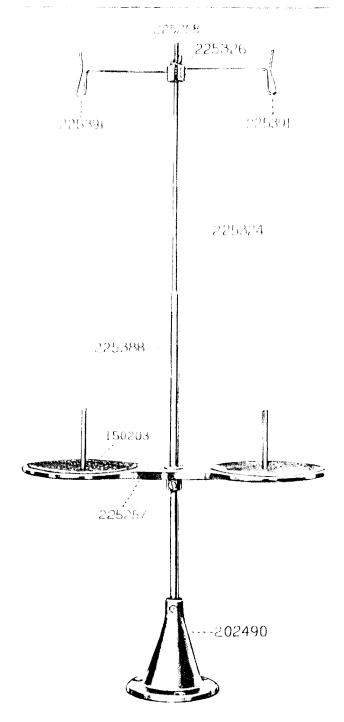

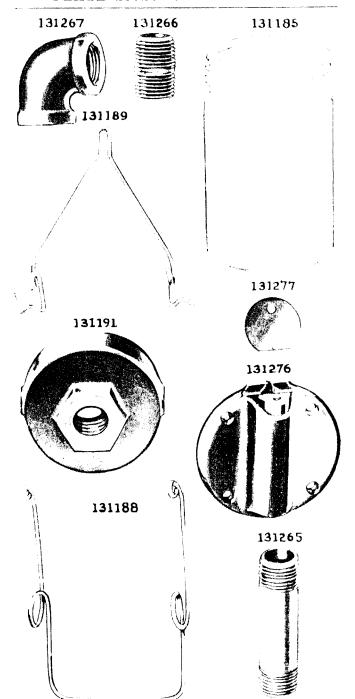




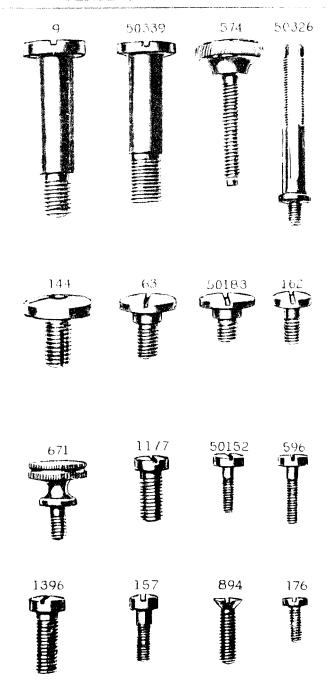



PLATE 21702 -FULL SIZE


PLATE 21703-FULL SIZE

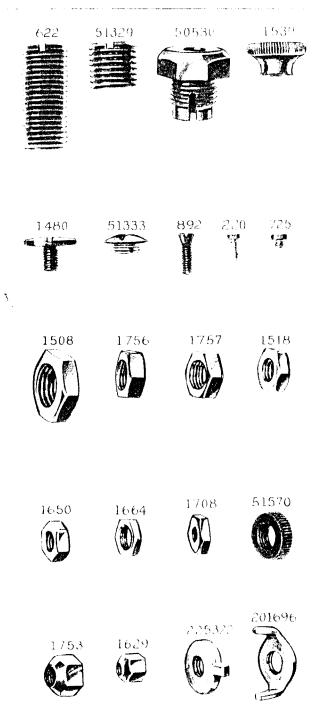

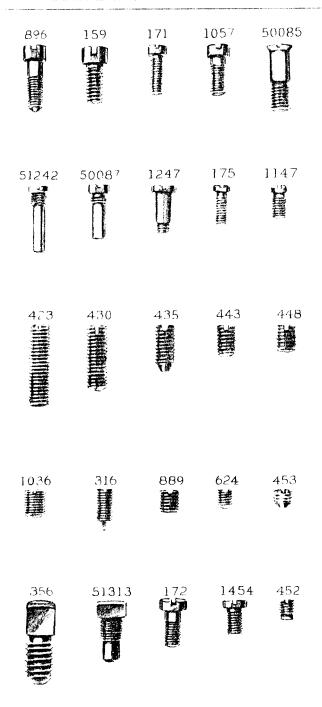

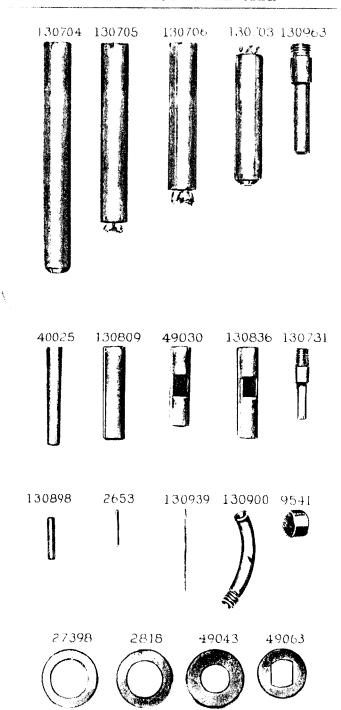

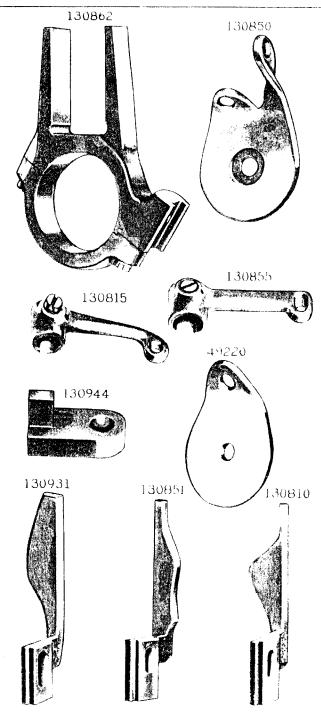

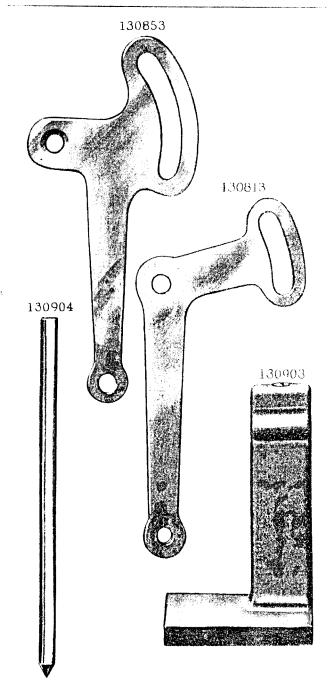

1103	848	1127	51262	1095
51061	193	(9)	7.74	237
152	190	217 设	194	208
202	50116	201018	940	1423
226	1133	200383	666	457

