


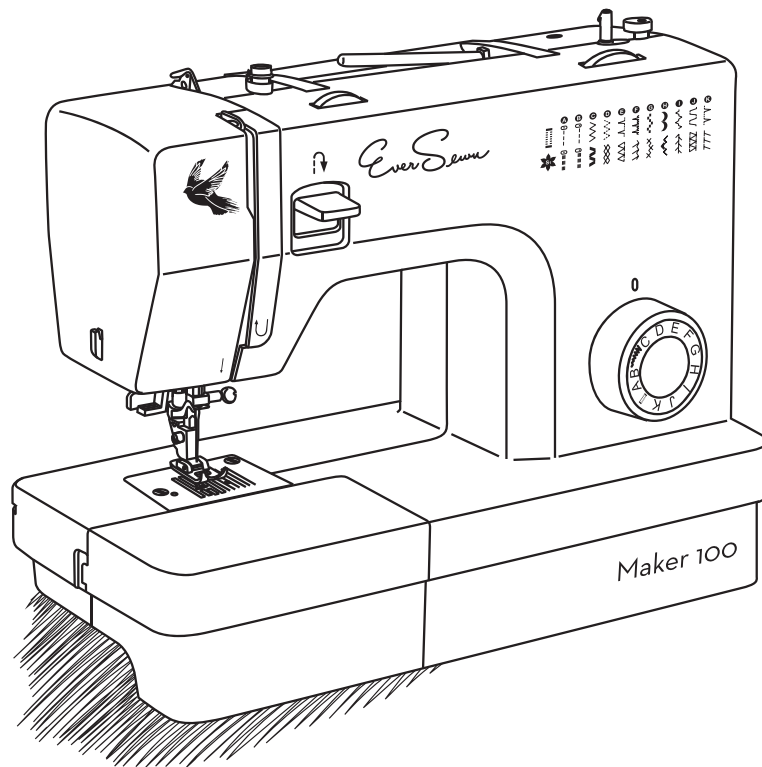

Instructional Manual

Maker 100
sewing machine



IMPORTANT SAFETY INSTRUCTIONS

IMPORTANT

When using an electrical machine, basic safety precautions should always be followed, including the following:

Please read the instruction manual carefully before using this machine.

Keep the instruction manual at a suitable place with the machine and hand it over if you give the machine to a third party.

When the machine is not in use or left unattended, always disconnect the machine from the power supply system. Unplug it from the outlet.

DANGER!

To reduce the risk of electric shock:

1. Never leave the machine unattended when it is plugged in.
2. Always unplug this machine from the electric outlet immediately after using and before cleaning.
3. LED RADIATION: Do not view directly with optical instruments Class.

WARNING!

To reduce the risk of burns, fire, electric shock or injury to persons:


1. The machine mustn't be used by children under 8 or by people with reduced physical, sensory or mental capabilities or if there is a lack of experience and knowledge how to operate the machine. Unless they have been given instruction concerning the use of the machine And the involved risks by a person who is responsible for their safety.
2. Do not use this machine as a toy. Close attention is necessary when this machine is used by children, near children or people with reduced sensation.

3. Use this machine only for its intended use as described in this manual. Use only accessories recommended by the manufacturer.
4. Children should be supervised to ensure that they do not play with the machine.
5. Never operate this machine if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the machine to the nearest authorized dealer or service centre for examination, repair, electrical or mechanical adjustment.
6. Never operate the machine with any air openings blocked. Keep ventilation openings of the machine and the foot control free from accumulation of lint, dust, and loose cloth.
7. Keep fingers away from all moving parts. Special care is required around the machine needle.
8. Always use the proper stitch plate. The wrong plate can cause needle breakage.
9. Do not use bent needles.
10. Do not pull or push the fabric while sewing. This can result in needle breakage.
11. Switch the machine off ("O") when making any adjustments in the needle area, such as threading or changing the needle, threading the bobbin, or changing the presser foot, and the like.
12. Always unplug the machine when performing cleaning or maintenance work such as replacing the sewing light or when making any other user maintenance adjustments mentioned in the instruction manual (disconnect the power plug). Cleaning and maintenance work must not be carried out by children without supervision.
13. Never drop or insert any object into any openings.
14. Use this machine only in dry and protected areas. Never operate the machine in a damp or wet environment.
15. Do not operate the machine where aerosol spray products are being used or where oxygen is being administered.

17. If the supply cord of the foot control is damaged, it must be replaced by the manufacturer or an appropriate service agent or a similar qualified person in order to avoid endangerment.
18. Never place anything on the foot control.
19. When replacing the light bulb, always use the same type.
20. The machine may only be used in combination with a foot control of the type KD-1902, FC-1902 (110-120V area) / KD-2902, FC-2902A, FC-2902C, FC-2902D (220-240V area) / 4C-316B (110-125V area) / 4C-316C (127V area) / 4C-326C (220V area) / 4C-326G (230V area) / 4C-336G (220-240V area).
21. The sound pressure level during normal operation is lower than 75dB(A).
22. This machine is provided with double insulation (except U.S.A/Canada). Use only identical replacement parts. See instructions for Servicing of double-insulated products.

SERVICING OF DOUBLEINSULATED PRODUCTS

In a double-insulated product, two systems of insulation are provided instead of grounding. No grounding means is provided on a double-insulated product nor should a means for grounding be added to the product. Servicing a doubleinsulated product requires extreme care and knowledge of the system and should only be done by qualified service personnel. Replacement parts for a double-insulated product must be identical to those parts in the product. A double insulated product is marked with the words "DOUBLE INSULATION" or "DOUBLE INSULATED".

The symbol  may also be marked on the product.

SAVE THESE INSTRUCTIONS!

Attention!

- This machine is intended for household use only. If used intensively or commercially, regular cleaning and especially attentive care is required.
 - Signs of wear and tear owing to intensive or commercial use are not covered automatically, even if they occur within the warranty period. The decision on how to deal with any such cases rests with the local authorised servicing staff.
-

Note:

If the machine is stored in a cold room, it should be brought to a warm room about one hour before use.

All rights reserved

For technical and product improvement reasons, the machine's features, parts and accessory are subject to unannounced changes and alterations at any time. The accessory included can differ from country to country.



Environmental protection

Ever Sewn is committed to the protection of the environment. We strive to minimize the environmental impact of our products by continuously improving product Design and our technology of manufacturing. Do not dispose of electrical machines as unsorted municipal waste, use separate collection facilities.

Contact your local government for information regarding the collection systems available.

If electrical machines are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.

When replacing old machines with new ones, the retailer is legally obligated to take back your old machine for professional disposal free of charge.

Congratulations:

As the owner of a new sewing machine, you will enjoy precision quality stitching on all types of fabrics, from multiple layers of denim to delicate silks.

Your sewing machine offers the ultimate in simplicity and ease of operation. For your safety and to fully enjoy the many advantages and ease of operation of your sewing machine, we recommend that you read all the important safeguards and use and care instructions in this instruction book.



May we suggest that before you start to use your sewing machine, you discover the many features and advantages by going through this instruction book, step by step, while seated at your sewing machine.

List of contents

Machine Basics	
Details of the machine	7/8
Connecting machine to power source	9
Two-step presser foot lifter	10
Accessories.....	11
Threading the Machine	
Winding the bobbin.....	12
Inserting the bobbin	13
Thread tension.....	14
Threading the upper thread	15
Automatic needle threader (optional).....	16
Raising the bobbin thread.....	17
Sewing	
How to choose your pattern.....	18
Stitch length dial	19
Sewing straight stitch.....	20
Reverse sewing/ Removing the work/ Cutting the thread.....	21
Choosing stretch stitch patterns	22
Blind hem.....	23
Sew 1-Step buttonhole	24
Sewing on buttons	25
Zippers	26
General Information	
Fitting the snap-in sewing table	27
Changing the presser foot	28
Needle/Fabric/Thread Chart	29
Darning plate	30
Maintenance and Troubleshooting	
Inserting the needle	31
Maintenance	32
Troubleshooting Guide	33


Details of the machine

1. Thread tension dial
2. Thread take-up lever
3. Thread cutter
4. Presser foot
5. Needle plate
6. Sewing table and accessory box
7. Reverse sewing lever
8. Bobbin winder stopper
9. Stitch length dial
10. Pattern selector dial
11. One step buttonhole lever
12. Automatic threader (optional)

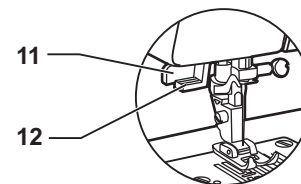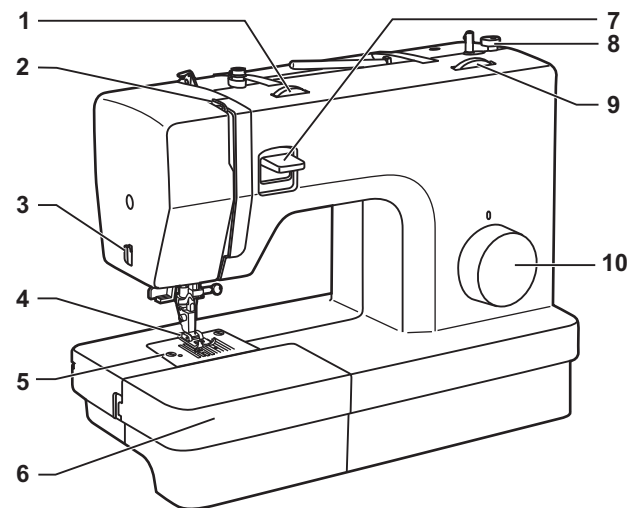

Details of the machine

- 13. Horizontal spool pin
- 14. Bobbin winder spindle
- 15. Hole for second spool pin
- 16. Handwheel
- 17. Power switch
- 18. Main plug socket
- 19. Bobbin thread guide
- 20. Upper thread guide
- 21. Face plate
- 22. Handle
- 23. Presser foot lifter
- 24. Foot control
- 25. Power cord

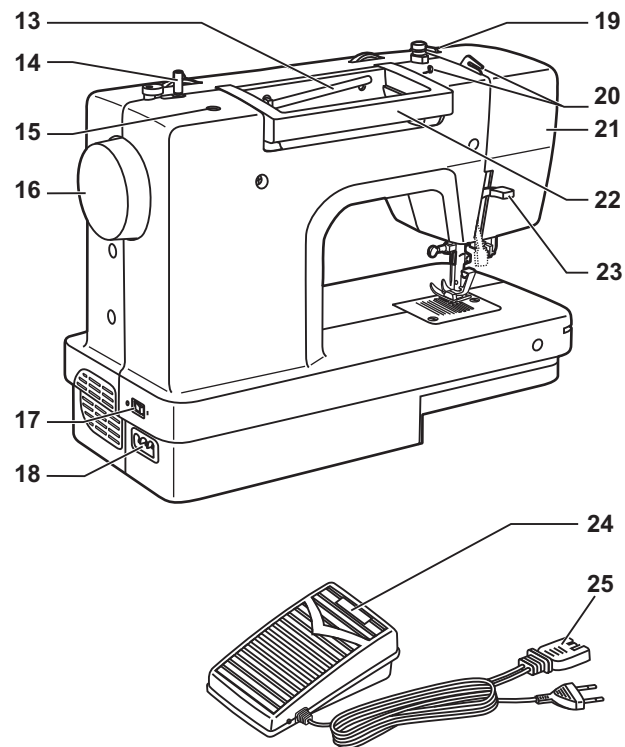

Connecting machine to power source

Attention:

Unplug power cord when machine is not in use.
Consult a qualified electrician if in doubt of how to connect machine to power source.

Connect the machine to a power source as illustrated. (1)
This appliance is equipped with a polarized plug which must be used with the appropriate polarized outlet. (2)

Sewing light


Press main switch (A) to "I" for power and light.

Foot control

The foot control pedal regulates the sewing speed. (3)

IMPORTANT NOTICE


For appliance with a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If it does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not modify the plug in any way.

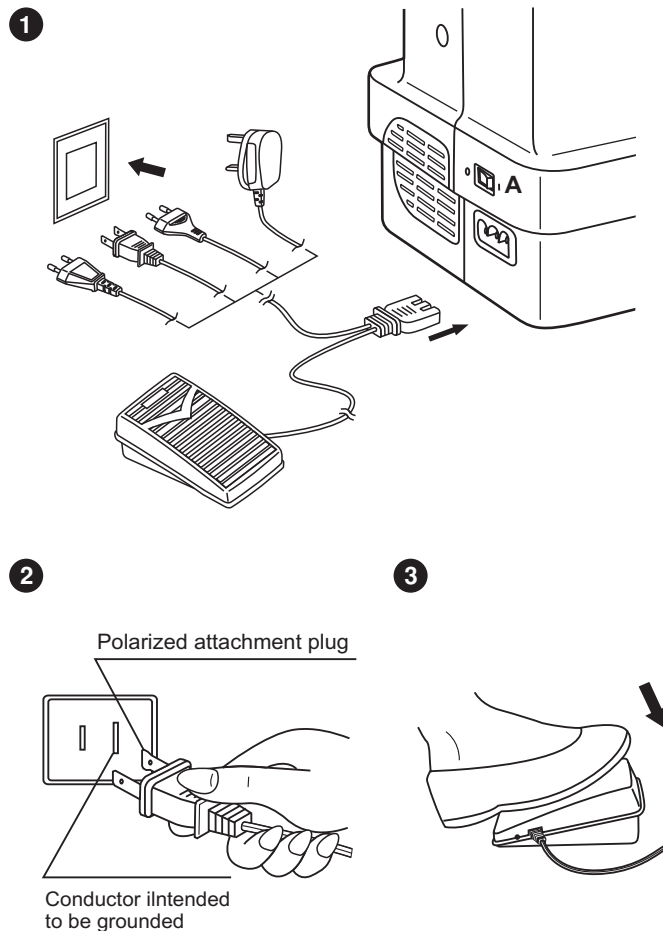

Two-step presser foot lifter

The presser foot lifter raises and lowers your presser foot. (A)

When sewing several layers or thick fabrics, the presser foot can be raised a second stage for easy positioning of the work. (B)

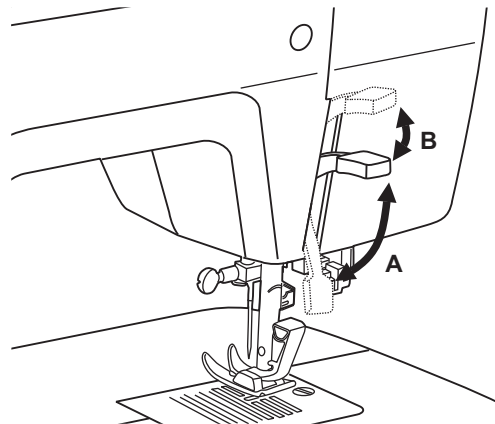

Accessories

Accessories are stored inside the accessory storage .

Standard accessories (1)


- a. All purpose foot
- b. Zipper foot
- c. Buttonhole foot
- d. Button sewing foot
- e. Seam ripper/ brush
- f. Edge/ quilting guide
- g. Pack of needle
- h. Spool holder
- i. Bobbin (3x)
- j. L-screwdriver
- k. Oil bottle
- l. Darning plate
- m. Second spool pin
- n. Spool pin felt

Optional accessories (2)


(Optional accessories are not supplied with this machine; they are however available as special accessories from your local dealer.)

- o. Satin stitch foot
- p. Overcasting foot
- q. Hemmer foot
- r. Cording foot
- s. Blind hem foot
- t. Darning/ embroidery foot
- u. Gathering foot
- v. Quilting foot
- w. Walking foot
- x. Twin needle

1 Standard accessories

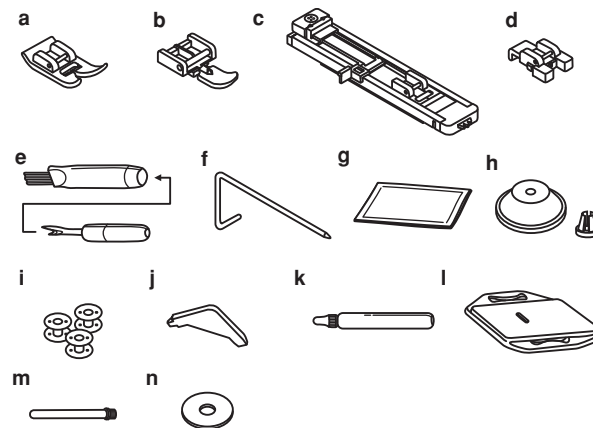

2 Optional accessories


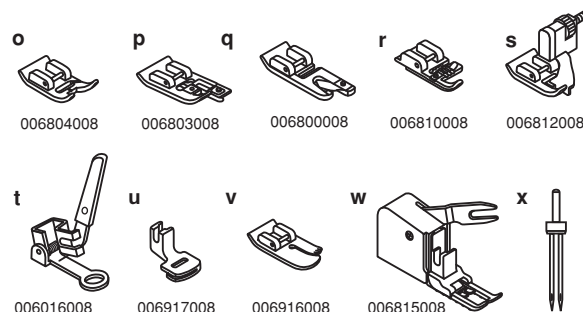


Winding the bobbin

- Place thread and corresponding spool holder onto spool pin. (1/2)
- Snap thread into thread guide. (3)
- Wind thread clockwise around bobbin winder tension discs. (4)
- Thread bobbin as illustrated and place on spindle. (5)
- Push bobbin winder spindle to right. (6)
- Hold thread end. (7)
- Step on foot control. (8)
- Release the pedal after a few turns. Release the thread and cut as close as possible to the spool. Press the pedal again. Once the spool is full, it rotates slowly. Release the pedal and cut thread. (9)
- Push bobbin winder spindle to left (10) and remove.

Please Note:

When the bobbin winder spindle is in "bobbin winding" position, the machine will not sew and the hand wheel will not turn. To start sewing, push the bobbin winder spindle to the left (sewing position).

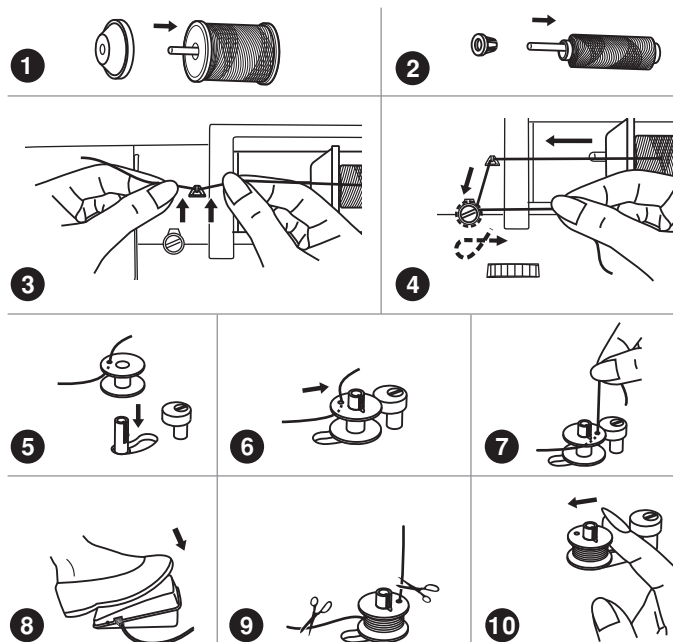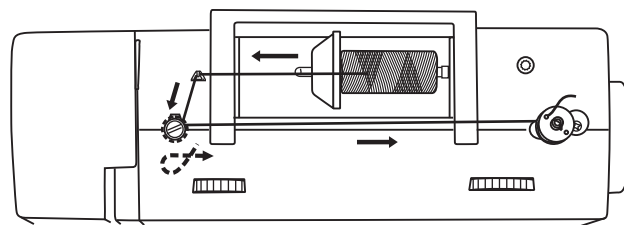

Inserting the bobbin

Attention:


Turn power switch to off ("O") before inserting or removing the bobbin.

When inserting or removing the bobbin, the needle must be fully raised.

- Remove the sewing table, then open the hinged cover. (1)
- Pull the bobbin case by the hinged latch (a). (2)
- Remove the bobbin of the bobbin case. (3)
- Hold the bobbin case with one hand. Insert the bobbin so that the thread runs in a clockwise direction (arrow). (4)
- Pull the thread through the slit and under the finger. (5) Leave a 6 inch tail of thread.
- Hold the bobbin case by the hinged latch. (6)
- Make sure the bobbin case finger (b) fits into the notch (c) at the top of the race as shown in. (7)

Note:

If the bobbin case is not properly placed back into the machine, it will fall out form the shuttle immediately after starting to sew.

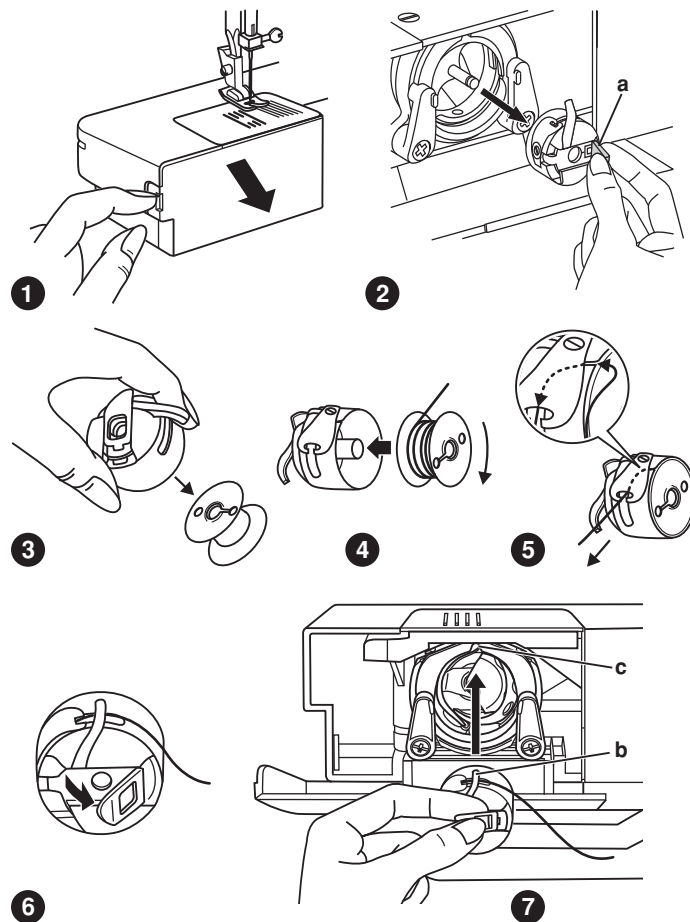

Thread tension

Upper thread tension (1)

Basic upper thread tension setting: "4".


To increase the tension, turn the dial to the next higher number.

To reduce the tension, turn the dial to the next lower number.

A. Normal thread tension

B. Upper thread tension too loose

C. Upper thread tension too tight

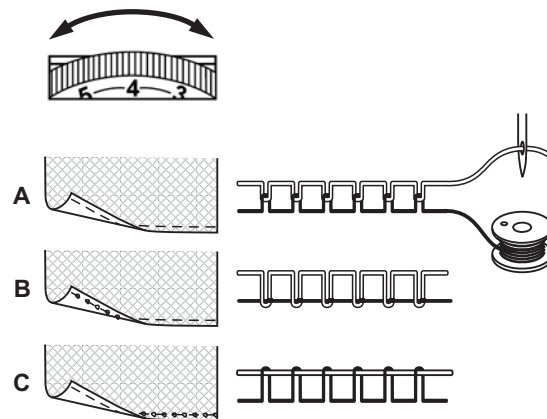

1

Lower thread tension (2)

Note:


The bobbin tension is adjusted correctly during manufacturing, therefore no changes are necessary.

To test the bobbin thread tension, the full bobbin is placed in the bobbin case. The bobbin case and gripper are then suspended by the end of the thread.

If the tension is correct, the thread will unwind by about 5 to 10cm, when gently swung and will then remain suspended.

If the full bobbin case unwinds, the tension is too slack. If the tension is too tight, it hardly unwinds or does not unwind at all.

To adjust, use the screwdriver.

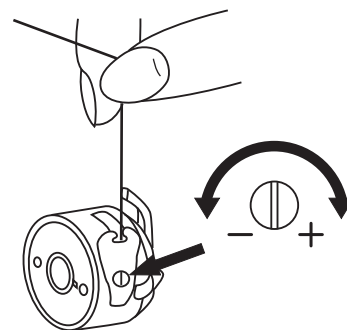

2

Threading the upper thread

This is a simple operation but it is important to carry out correctly as by not doing so several sewing problems could result.


- Start by raising the needle to its highest point (1), and continue turning the handwheel counterclockwise until the needle just slightly begins to descend. Raise the presser foot to release the tension discs.

Note: For safety, it is strongly suggested you turn off the power before threading.

- Lift up the spool pin. Place the spool of thread on the holder with the thread coming off the spool as shown. For small thread spools, place small side of spool holder next to spool. (2)
- Draw thread from spool through the upper thread guide (3) and pulling thread through pre-tension spring as illustrated. (4)
- Thread tension module by leading thread down right channel and up left channel. (5) During this process it is helpful to hold the thread between the spool and thread guide.
- At the top of this movement pass thread from right to left through the slotted eye of the take-up lever and then downwards again. (6)
- Now pass thread behind the thin wire needle clamp guide (7) and then down to the needle which should be threaded from front to back.
- Pull about 6-8 inches of thread to the rear beyond the needle eye. Trim thread to length with built in thread cutter. (8)

Note:

If your sewing machine is equipped with the factory installed optional automatic needle threader, instructions for use can be found on next page.

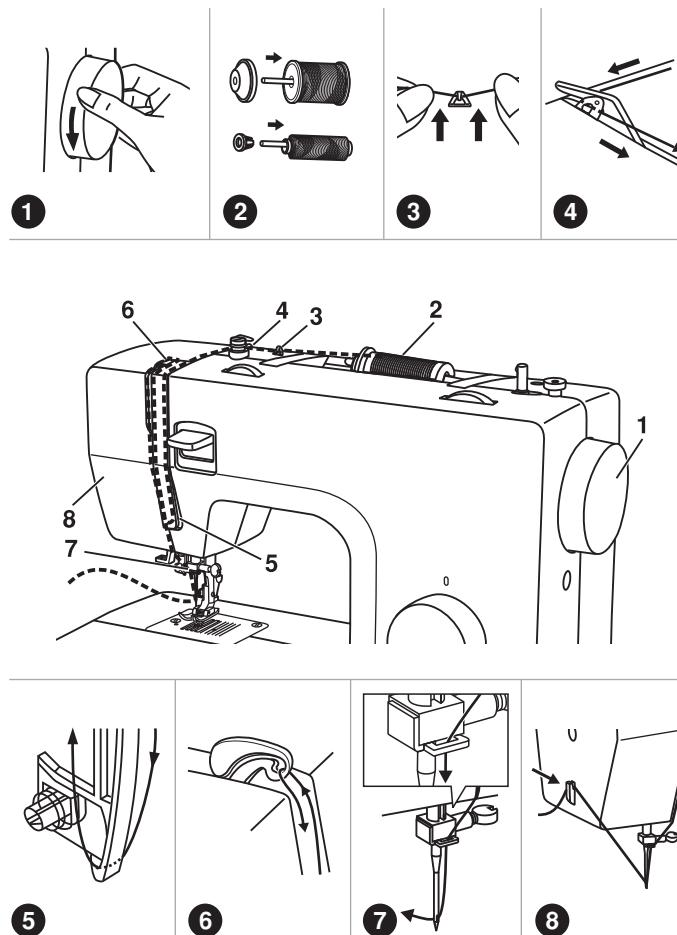


Automatic needle threader (optional)


Attention:

Turn power switch to off ("O")!

- Raise the needle to its highest position.
- Press lever (A) down as far as it will go.
- The threader automatically swings to the threading position (B).
- Pass thread around thread guide (C).
- Pass the thread in front of the needle around the hook (D) from bottom to top.
- Release lever (A).
- Pull the thread through the needle eye.

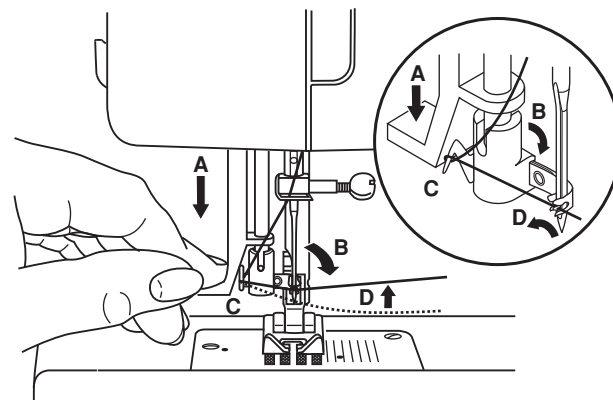

1

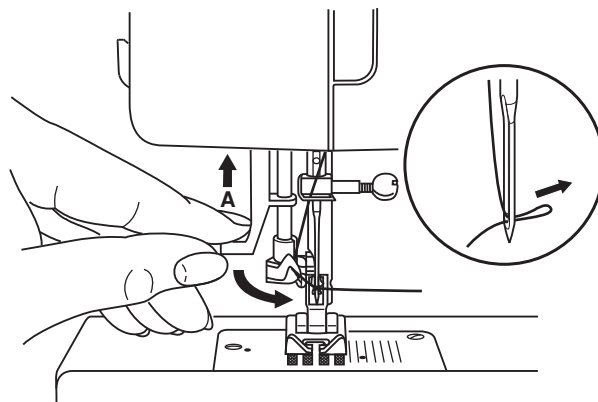

2

Raising the bobbin thread


Hold the upper thread with the left hand. Turn the handwheel (1) towards you (counterclockwise) lowering, then raising needle.

Note:


If it is difficult to raise the bobbin thread, check to make sure the thread is not trapped by the hinged cover or the sewing table.

Gently pull on the upper thread to bring the bobbin thread up through the needle plate hole. (2)


Lay both threads to the back under the presser foot. (3)

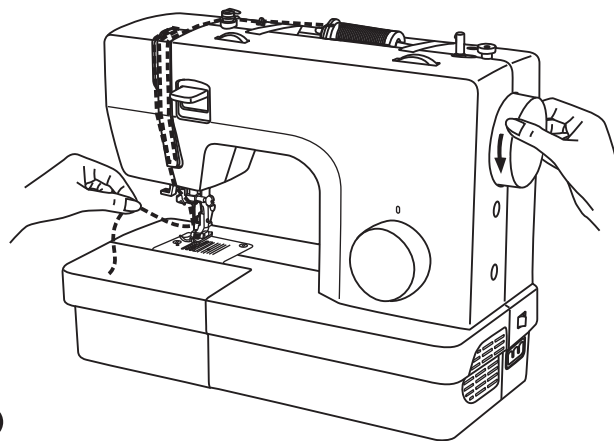

1

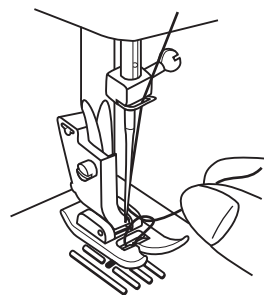

2

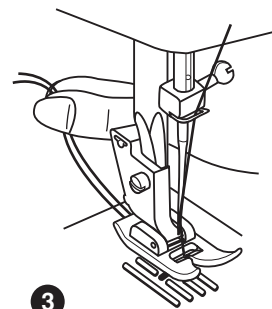

3

How to choose your pattern

Raise the needle to its highest position.

Turn the pattern selector dial to set the desired stitch pattern at the setting mark.


For **straight stitch**, select pattern "1" with the pattern selector dial. Adjust the stitch length with the stitch length dial.

For **zigzag stitch**, select pattern "Z" with the pattern selector dial.

To obtain the other patterns, turn the stitch length dial to "S1", select the pattern desired with pattern selector dial.

Please consult the following stitch patterns chart.

- a. Reverse lever
- b. Stitch length dial S1
- c. Pattern selector dial
- d. Setting mark

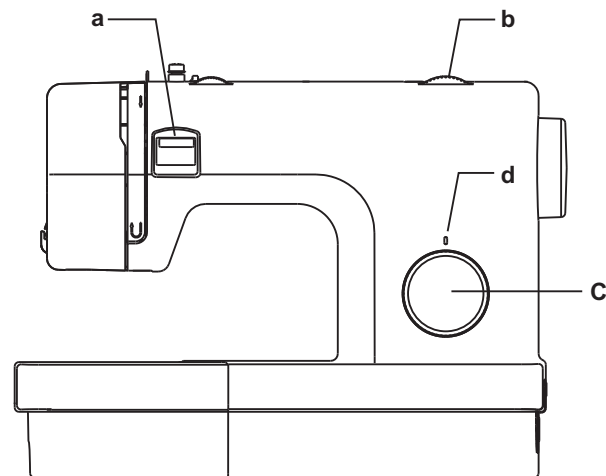

Stitch patterns											
	A	B	C	D	E	F	G	H	I	J	K
S1											

Stitch length dial

Function of stitch length dial while zig-zag stitching

Set the pattern selector dial to "~~~~~".


The density of zig-zag stitches increase as the setting of stitch length dial approaches "0".

Neat zig-zag stitches are usually achieved at "2.5" or below.


Function of stitch length dial for straight stitching

For straight stitch sewing, turn the pattern selector dial to the straight stitch setting. Turn the stitch length dial, and the length of the individual stitches will decrease as the dial approaches "0". The length of the individual stitches will increase as the dial approaches "4". Generally speaking, use a longer stitch length when sewing heavier weight fabrics or when using a thicker needle or thread. Use a shorter stitch length when sewing lighter weight fabrics or when using a finer needle or thread.


Pattern selector dial

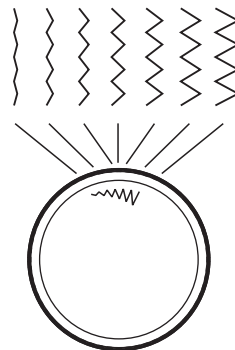

Stitch length dial

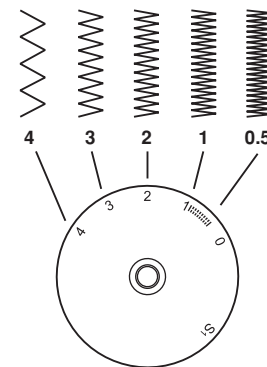

Stitch length dial

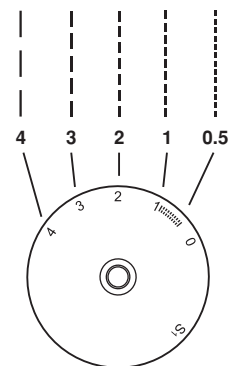


Sewing straight stitch


To begin sewing, set the machine for straight stitch. (1)

Place the fabric under the presser foot with the fabric edge lined up with the desired seam guide line on the needle plate. (2)


Lower the presser foot lifter, and then step on the foot controller to start sewing. (3)

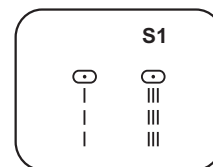

1

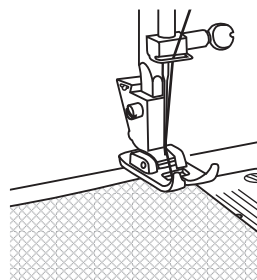

2

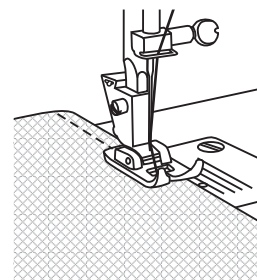

3

Reverse sewing

To secure the beginning and the end of a seam, press down the reverse sewing lever (A).


Sew a few reverse stitches. Release the lever and the machine will sew forward again. (1)

Removing the work


Turn the handwheel toward you (counterclockwise) to bring the thread take up lever to its highest position, raise the presser foot and remove work behind the needle and presser foot. (2)

Cutting the thread


Pull the threads under and behind the presser foot. Guide the threads to the side of the face plate and into thread cutter (B). Pull threads down to cut. (3)

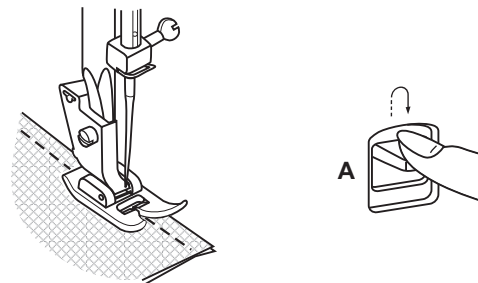

1

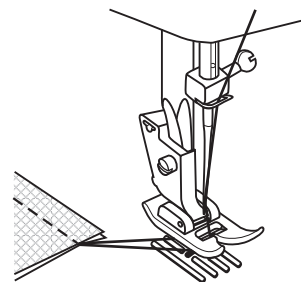

2

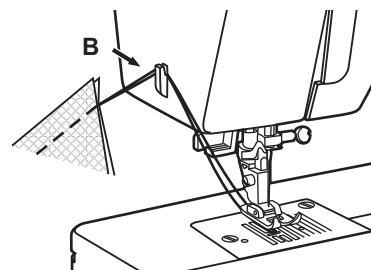

3

Choosing stretch stitch patterns

To select the stretch stitch patterns, turn the pattern selector dial to the desired pattern, turn the stitch length dial to the indicator marked "S1". Though there are several stretch patterns, here are two examples:

Straight Stretch Stitch (1)

Set the pattern selector dial to "|||"⁰ or "|||"⁰.

Used to add triple reinforcement to stretch and hardwearing seams.


 

The machine sews two stitches forward and one stitch backwards.

Ric Rac (2)

Set the pattern selector dial to "ㄣ"⁰.



Ric rac stitch is suitable for firm fabrics like denim, corduroy, poplin, duck, etc.

Stitch length dial

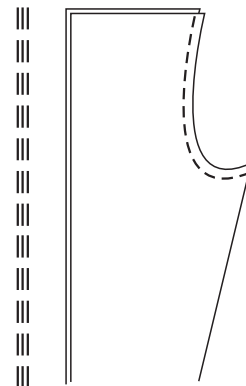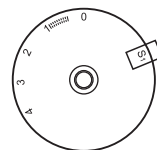

1

Stitch length dial

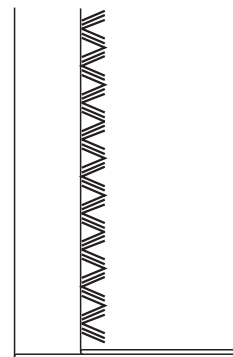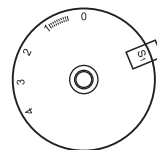

2

Blind hem

For hems on curtains, trousers, skirts, etc.

~~~~~ Blind hem for stretch fabrics.

..A..A.. Blind hem for firm fabrics.

Set the stitch length dial with the range shown on the diagram at the right. Blind hems, however, are normally sewn with a longer stitch length setting.

Sew a test first to make sure the machine settings are appropriate for the fabric.



Blind Hem:

Turn up the hem to the desired width and press. Fold back (as shown in Fig. 1) against the right side of the fabric with the top edge of the hem extending about 7 mm (1/4") to the right side of the folded fabric.


Start to sew slowly on the fold, making sure the needle touches slightly the folded top to catch one or two fabric threads. (2)

Unfold the fabric when hemming is completed and press.



Stitch length dial

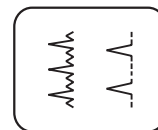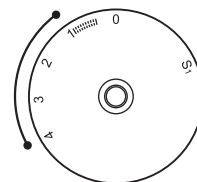

1

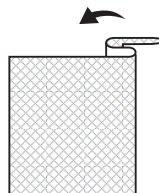

2

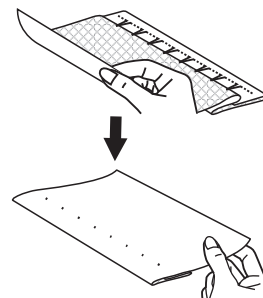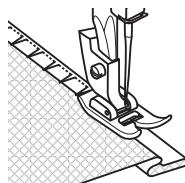

## Sew 1-step buttonholes

**Buttonhole sewing is a simple process that provides reliable results. However, it is strongly suggested to always make a practice buttonhole on a sample of your fabric and stabilizer.**

### Making a Buttonhole



1. Using tailor's chalk, mark the position of the buttonhole on the fabric.
2. Attach the buttonhole foot and set the Pattern Selector Dial to "1". Set stitch length dial to "1".
3. Lower the presser foot aligning the marks on foot with the marks on the fabric (1). (The front bar tack will be sewn first.) (Align the mark on the fabric (a) with the mark on the foot (b).)
4. Open the button plate and insert the button (2).
5. Lower the buttonhole lever and gently push it back (3).
6. While lightly holding the upper thread, start the machine.
7. Buttonhole stitching is done in the order (4).
8. Stop the machine when the buttonhole cycle has completed.

### Making a Buttonhole on Stretch Fabrics (5)

When sewing buttonholes on stretch fabric, hook heavy thread or cord under the buttonhole foot. When the buttonhole is sewn the legs will overcast the cord.

1. Mark the position of the buttonhole on the fabric with the tailor's chalk, attach the buttonhole foot, and set the pattern selector dial to "1". Set stitch length dial to "1".
2. Hook the heavy thread or cord onto the back end of the buttonhole foot, then bring the two heavy thread ends to the front of the foot, insert them into the grooves and temporarily tie them there.
3. Lower the presser foot and start sewing.
4. Once sewing is completed, gently pull the heavy thread to remove any slack, then trim off the excess.

Stitch length dial

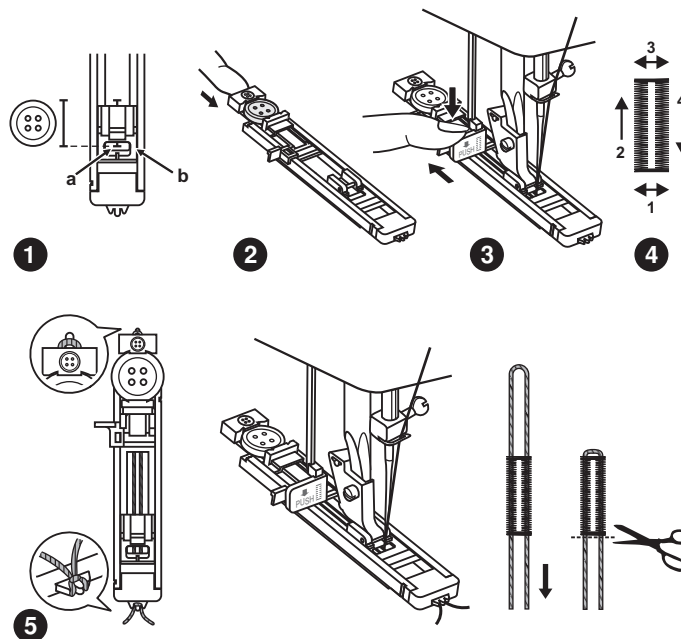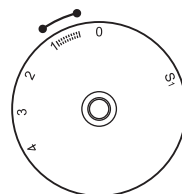


## Sewing on buttons

Install the darning plate. (1)


Change presser foot to button sewing foot.

Position the work under the foot.

Place the button on the marked position and lower the foot.





Set the pattern selector dial on "  " and sew a few securing stitches. Select the zig-zag stitch width according to the distance between the two holes of the button.

Turn the handwheel to check if the needle goes into the right and the left hole of the button without any obstruction (adjust the stitch width according to the button).

Slowly sew on the button with about 10 stitches. Select pattern "  " and sew a few securing stitches. (2)

If a shank is required, place a darning needle on top of the button and sew. (3) For buttons with 4 holes, sew through the front two holes first (2), push work forward and then sew through the back two holes as described. (3)



Stitch length dial

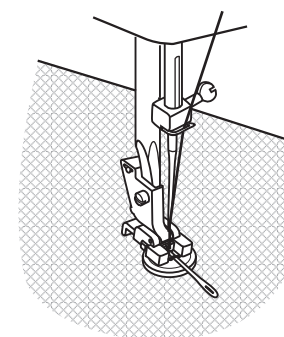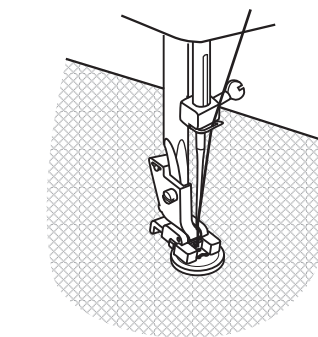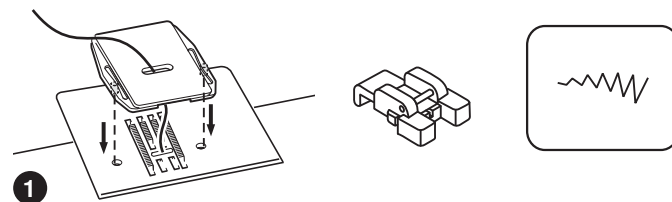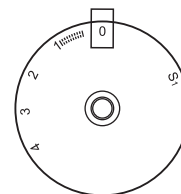



# Zippers

Set the machine as illustrated.

  
1. Place the right sides of the fabric together.  
Sew a bottom seam 2cm from the right edge to the zipper bottom stop position. Sew a few stitches in reverse to lock. Increase the stitch length to maximum, set the tension below 2, and baste the remaining length of the fabric.
2. Press open the seam allowance. Place the zipper face down on the seam allowance with the teeth against the seam line. Baste the zipper tape in place.
3. The zipper foot can be inserted right or left, depending on which side of the foot you are going to sew.
4. Stitching around the zipper, then remove the basting.




Stitch length dial

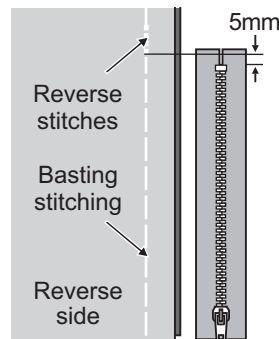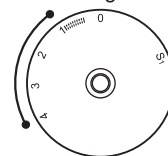


1 2cm →

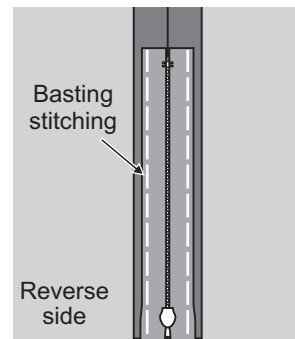

2

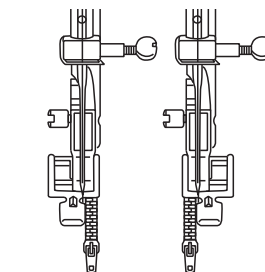


3

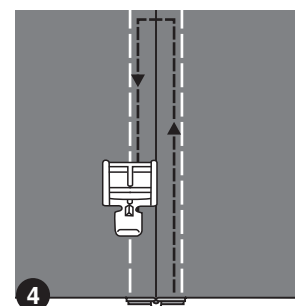

4

## Fitting the snap-in sewing table


Keep the snap-in sewing table horizontal, and push it in the direction of the arrow. (1)

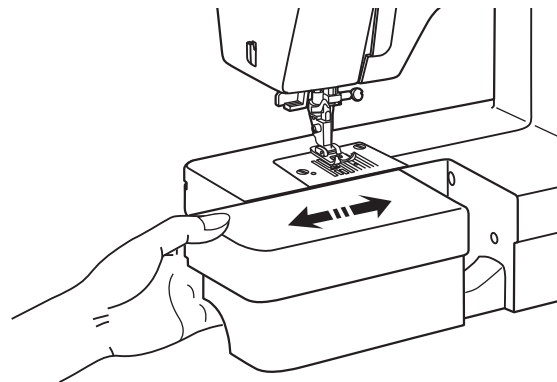

1

The inside of the snap-in sewing table can be utilized as an accessory box.

To open, flip cover down as shown. (2)

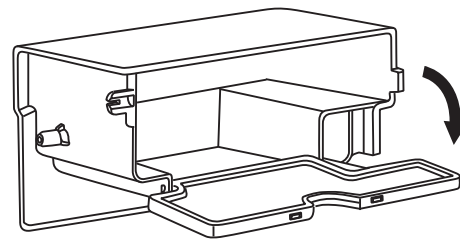

2

## Changing the presser foot

### Attention:

Turn power switch to off ("O") when carrying out any of the above operations!

### Removing the presser foot

Push the presser foot (e) to disengage from the cut-out (c). (1)

### Attaching the presser foot

Install the pin (d) of the presser foot (e) into the cut-out (c) of the presser foot holder. (2)


### Removing and Attaching the presser foot shank

Raise the presser bar (a) with the presser foot lifter.


Removing and Attaching the presser foot shank (b) as illustrated. (3)

### Attaching the edge/ quilting guide


Attach the edge/quilting guide (f) in the slot as illustrated. Adjust as needed for hems, pleats, quilting, etc. (4)

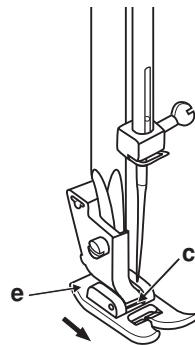


1

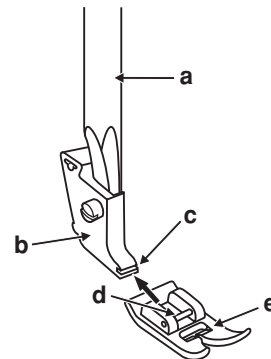

2

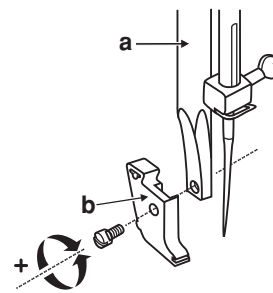

3

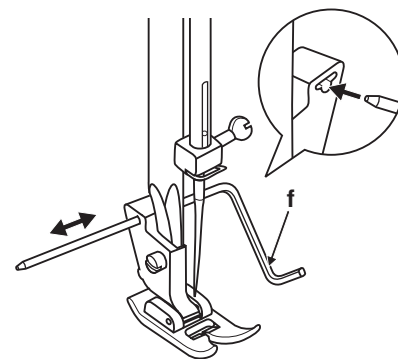

4

## Needle/Fabric/Thread Chart

### NEEDLE, FABRIC, THREAD SELECTION GUIDE

| NEEDLE SIZE | FABRICS                                                                                                                                                          | THREAD                                                                                                                                                                                                                              |
|-------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 9-11(65-75) | Lightweight fabrics-thin cottons, voile, serge, silk, muslin, Qiana, interlocks, cotton knits, tricot, jerseys, crepes, woven polyester, shirt & blouse fabrics. | Light-duty thread in cotton, nylon or polyester.                                                                                                                                                                                    |
| 12(80)      | Medium weight fabrics-cotton, satin, kettleclote, sailcloth, double knits, lightweight woollens.                                                                 | Most threads sold are medium size and suitable for these fabrics and needle sizes. Use polyester threads on synthetic materials and cotton on natural woven fabrics for best results. Always use the same thread on top and bottom. |
| 14(90)      | Medium weight fabrics-cotton duck, woolen, heavier knits, terrycloth, denims.                                                                                    |                                                                                                                                                                                                                                     |
| 16(100)     | Heavyweight fabrics-canvas, woollens, outdoor tent and quilted fabrics, denims, upholstery material (light to medium).                                           |                                                                                                                                                                                                                                     |
| 18(110)     | Heavy woollens, overcoat fabrics, upholstery fabrics, some leathers and vinyls.                                                                                  | Heavy duty thread, carpet thread.<br>(Use heavy foot pressure-large numbers.)                                                                                                                                                       |

IMPORTANT: Match needle size to thread size and weight of fabric

### NEEDLE, FABRIC SELECTION

| NEEDLES        | EXPLANATION                                                             | TYPE OF FABRIC                                                                                                                                                               |
|----------------|-------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| HAx1<br>15x1   | Standard sharp needles. Sizes range thin to large.<br>9 (65) to 18(110) | Natural woven fabrics-wool, cotton, silk, etc. Qiana.<br>Not recommended for double knits.                                                                                   |
| 15x1/705H(SUK) | Semi-ball point needle, scarfed. 9(65) to 18(110)                       | Natural and synthetic woven fabrics, polyester blends.<br>Knits-polyesters, interlocks, tricot, single and double knits. Can be used instead of 15x1 for sewing all fabrics. |
| 15x1/705H(SUK) | Full ball point needle 9(65) to 18(110)                                 | Sweater knits, Lycra, swimsuit fabric, elastic.                                                                                                                              |
| 130 PCL        | Leather needles. 12(80) to 18(110)                                      | Leather, vinyl, upholstery.<br>(Leaves smaller hole than standard large needle.)                                                                                             |

#### Please Note:


- In general, fine threads and needles are used for sewing fine fabrics, and thicker threads are used for sewing heavy fabrics.
- Always test thread and needle size on a small piece of fabric which will be used for actual sewing.
- Use the same thread for needle and bobbin.
- Use a backing for fine or stretchy fabrics.

## Darning plate

For certain types of work, (e.g. darning or free-hand embroidery), the darning plate must be used.

Install the darning plate as illustrated.

For normal sewing, remove the darning plate.

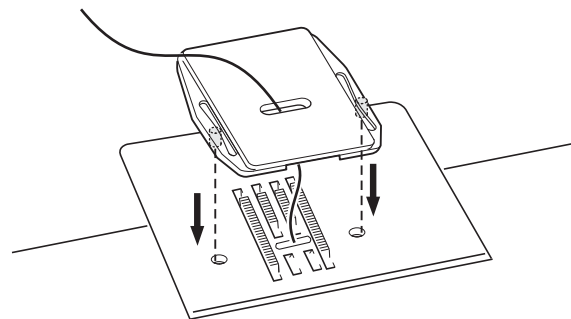



## Inserting the needle

### Attention:

Turn power switch to off ("O") before inserting or removing the needle.

Change the needle regularly, especially if it is showing signs of wear and causing problems.


Insert the needle as illustrated as follows:

- A. Loosen the needle clamp screw and tighten again after inserting the new needle. (1)
- B. The flat side of the shaft should be towards the back.
- C/D. Insert the needle as far up as it will go.


Needles must be in perfect condition. (2)

Problems can occur with:

- A. Bent needles
- B. Damaged points
- C. Blunt needles

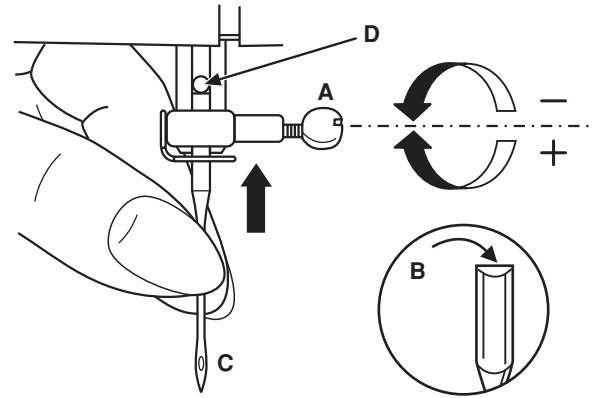

1

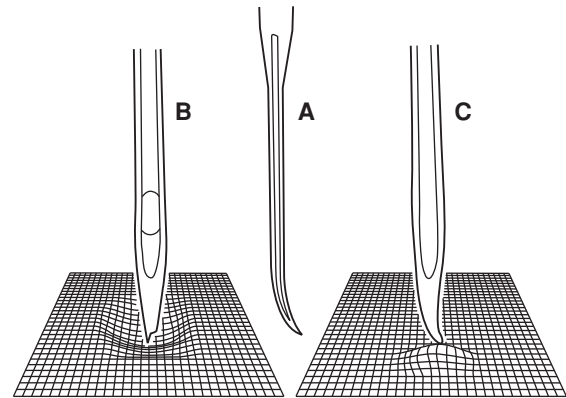

2

### Attention:

Disconnect the machine from the electricity supply by removing the plug from the mains socket. When cleaning the machine, it must always be disconnected from the electricity supply.

### Remove the needle plate:

Turn the handwheel until the needle is fully raised. Open the hinged front cover and unscrew the needle plate screw with the screw driver. (1)

### Cleaning the feed dog:



Remove the bobbin case and use the brush supplied to clean the whole area. (2)

### Cleaning and lubricating the hook:

Remove the bobbin case. Snap the two hook retaining arms (a) outwards. Remove the hook race cover (b) and the hook (c) and clean with a soft cloth. Lubricate at the points (d) (1-2 drops) with sewing machine oil. Turn the handwheel until the hook race (e) is in the left position. Replace the hook (c). Replace the hook race cover and snap back the two hook retaining arms. Insert the bobbin case and bobbin and replace the stitch plate.

### Important:


Fabric fluff and threads must be removed regularly. Your machine should be serviced at regular intervals at one of our service agencies.

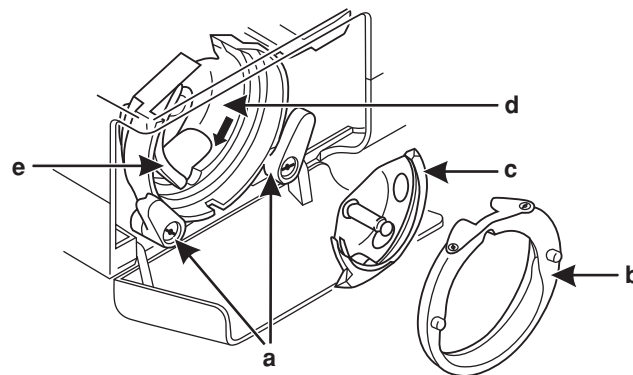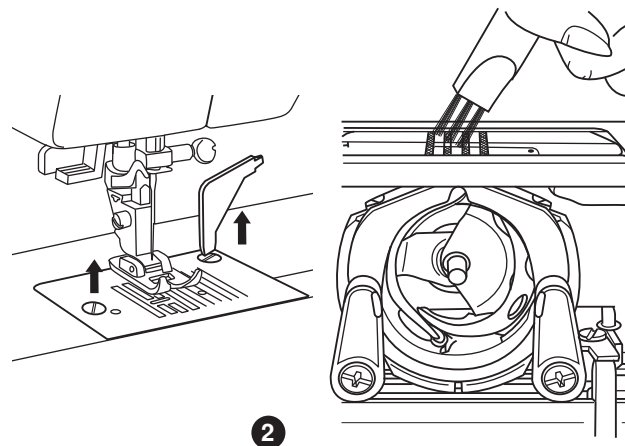



## Trouble shooting guide

Before calling for Service, check the following items. If the problem still persists, contact the EverSewn customer support at: [service@eversewn.com](mailto:service@eversewn.com) or call 1-844-EVERSEW (1-844-383-7739)

| <b>Problem</b>               | <b>Cause</b>                                                                                                                                                                                                                                                                                                                     | <b>Correction</b>                                                                                                                                                                                                                                                                                                       |
|------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Upper thread breaks          | <ol style="list-style-type: none"><li>1.The machine is not threaded correctly.</li><li>2.The thread tension is too tight.</li><li>3.The thread is too thick for the needle.</li><li>4.The needle is not inserted correctly.</li><li>5.The thread is round wound the spool holder pin.</li><li>6.The needle is damaged.</li></ol> | <ol style="list-style-type: none"><li>1.Rethread the machine.</li><li>2.Reduce the thread tension (lower number).</li><li>3.Select a larger needle.</li><li>4.Remove and reinsert the needle (flat side towards the back).</li><li>5.Remove the reel and wind thread onto reel.</li><li>6.Replace the needle.</li></ol> |
| Lower thread breaks          | <ol style="list-style-type: none"><li>1.The bobbin case is not inserted correctly.</li><li>2.The bobbin case is threaded wrongly.</li><li>3.The lower thread tension is too tight.</li></ol>                                                                                                                                     | <ol style="list-style-type: none"><li>1.Remove and reinsert the bobbin case and pull on the thread. The thread should pull easily.</li><li>2.Check both bobbin and bobbin case.</li><li>3.Loosen lower thread tension as described.</li></ol>                                                                           |
| Skipped stitches             | <ol style="list-style-type: none"><li>1.The needle is not inserted correctly.</li><li>2.The needle is damaged.</li><li>3.The wrong size needle has been used.</li><li>4.The foot is not attached correctly.</li></ol>                                                                                                            | <ol style="list-style-type: none"><li>1.Remove and reinsert needle (flat side towards the back).</li><li>2.Insert a new needle.</li><li>3.Choose a needle to suit the thread and fabric.</li><li>4.Check and attach correctly.</li></ol>                                                                                |
| Needle breaks                | <ol style="list-style-type: none"><li>1.The needle is damaged.</li><li>2.The needle is not correctly inserted.</li><li>3.Wrong needle size for the fabric.</li><li>4.The wrong foot is attached.</li></ol>                                                                                                                       | <ol style="list-style-type: none"><li>1.Insert a new needle.</li><li>2.Insert the needle correctly (flat side towards the back).</li><li>3.Choose a needle to suit the thread and fabric.</li><li>4.Select the correct foot.</li></ol>                                                                                  |
| Loose stitches               | <ol style="list-style-type: none"><li>1.The machine is not correctly threaded.</li><li>2.The bobbin case is not correctly threaded.</li><li>3.Needle/ fabric/ thread combination is wrong.</li><li>4.Thread tension wrong.</li></ol>                                                                                             | <ol style="list-style-type: none"><li>1.Check the threading.</li><li>2.Thread the bobbin case as illustrated.</li><li>3.The needle size must suit the fabric and thread.</li><li>4.Correct the thread tension.</li></ol>                                                                                                |
| Seams gather or pucker       | <ol style="list-style-type: none"><li>1.The needle is too thick for the fabric.</li><li>2.The stitch length is wrongly adjusted.</li><li>3.The thread tension is too tight.</li><li>4.Fabric puckers.</li></ol>                                                                                                                  | <ol style="list-style-type: none"><li>1.Select a finer needle.</li><li>2.Readjust the stitch length.</li><li>3.Loosen the thread tension.</li><li>4.Use a backing for fine or stretchy fabrics.</li></ol>                                                                                                               |
| Uneven stitches, uneven feed | <ol style="list-style-type: none"><li>1.Poor quality thread.</li><li>2.The bobbin case is wrongly threaded.</li><li>3.Fabric has been pulled.</li></ol>                                                                                                                                                                          | <ol style="list-style-type: none"><li>1.Select a better quality thread.</li><li>2.Remove bobbin case and retread and insert correctly.</li><li>3.Do not pull on the fabric while sewing, let it be taken up by the machine.</li></ol>                                                                                   |
| The machine is noisy         | <ol style="list-style-type: none"><li>1.The machine must be lubricated.</li><li>2.Fluff or oil have collected on the hook or needle bar.</li><li>3.Poor quality oil has been used.</li><li>4.The needle is damaged.</li></ol>                                                                                                    | <ol style="list-style-type: none"><li>1.Lubricate as described.</li><li>2.Clean the hook and feed dog as described.</li><li>3.Only use good quality sewing machine oil.</li><li>4.Replace the needle.</li></ol>                                                                                                         |
| The machine jams             | Thread is caught in the hook.                                                                                                                                                                                                                                                                                                    | Remove the upper thread and bobbin case, turn the handwheel backwards and forwards by hand and remove the thread remnants. Lubricate as described.                                                                                                                                                                      |

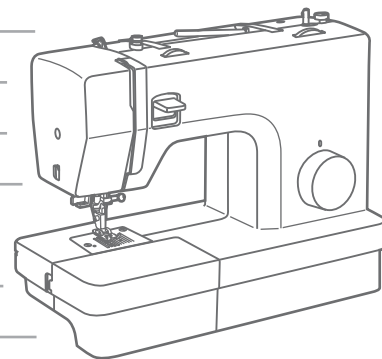

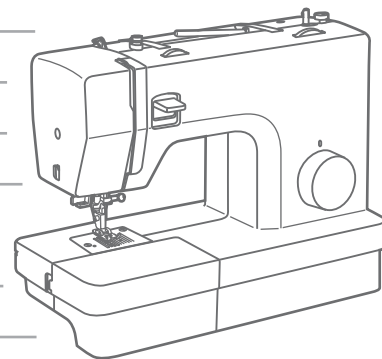

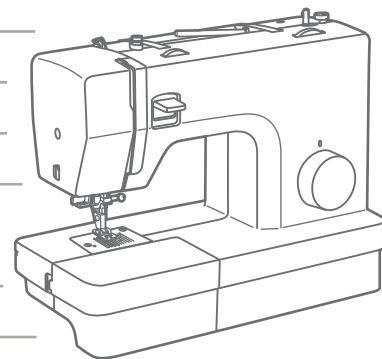





[www.eversewn.com](http://www.eversewn.com)