 
SINGER 111W155



LIST of PARTS



SINGER"

MACHINE No. IIIw155

THE SINGER MANUFACTURING COMPANY

INSTRUCTIONS FOR OILING

To ensure easy running and prevent unnecessary wear of the parts which are in movable contact, the machine requires oiling and when in continuous use, "TYPE B" or "TYPE D" OIL, sold by Singer Sewing Machine Company, should be applied at least twice each day to all oil holes marked "OIL", as instructed in Form 2663w.

"TYPE D" OIL should be used when an oil is desired which will produce a minimum of stain on fabrics, even after a long period of storage.

To insure satisfactory results, "TYPE E" Thread Lubricant, sold by Singer Sewing Machine Company, should be used in the thread lubricator which is attached to the top of the machine.

Copyright, U. S. A., 1938, 1940, 1946, 1950 and 1951 by The Singer Manufacturing Company All Rights Reserved for all Countries

INDEX

ACCESSORIES			_		_	_		_	P	AGE 13
BOBBIN WINDERS		**		***				13	یئ	15
FEED DOGS				_						15
FOOT LIFTER				_			_			16
KNEE LIFTER			-			_		_		14
MACHINE No. 111	w155		-	_	_	_				5
MISCELLANEOUS	PARTS			_	_	-	_			18
NUMERICAL LIST	OF PA	RTS						-		19
PRESSER FEET	e Maria		,	_		_	_	-		16
THREAD LUBRICA	TOR		-	-	-	_	-	-		14
THREAD UNWIND	ER	_	_	_		-	-	-		17
THROAT PLATES			_	_		_	_			17

INSTRUCTIONS FOR ORDERING

In ordering from this list, use ONLY the PART number in the FIRST column.

The number stamped on a Sewing Machine Part is the number of the Single Part only, except when the part includes Set Screws, Clamping Screws, Studs and Rollers Spun on, Small Wires riveted, or Parts soldered together, etc., which it is necessary to furnish in combination.

Every combination of parts sent out has its specific number which, although not stamped on Parts (except in above case), must be used when ordering the combination.

Each number always indicates the SAME PART in whatever list it appears, or for whatever Machine.

The letters after some of the numbers indicate the style of finish only, as follows:

- A Hardened, Polished, Nickel Plated and Buffed.
- AL Heat Treated for Toughness.
- B Polished, Nickel Plated and Buffed.
- C Hardened only.
- D Polished only.
- E Soft, Not polished.
- F Hardened and Polished.
- H Blued.
- J Nickel Plated only.
- R Merlized.
- X Black Oxide, for Iron and Steel.
- XC Hardened and Black Oxide, for Iron and Steel.
- Y Black Nickel Plated only.
- Z Chromium Plated.

These letters MUST BE USED when they appear in the list and AFTER the number, as in the list.

In this series

1 to 1500, 200001 to 201500 and 350001 to 351500 are Screw Numbers. 1501 to 1800, 201501 to 201800 and 351501 to 351800 are Nut Numbers. 1801 to 2000, 201801 to 202000 and 351801 to 352000 are Roller Numbers. 2001 to 50000 and 202001 to 350000 are Numbers of Machine Parts.


The figures in the second column refer only to the plate in which the illustration of the part is shown and are NOT TO BE USED in ordering.

Two or more numbers over a cut indicate that the difference between such parts is not visible in an illustration.

Parts marked with an asterisk (*) are furnished only when repairs are made at the factory.

LIST OF PARTS COMPLETE

FOR

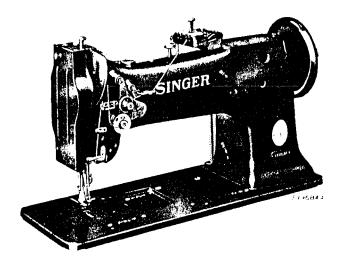

MACHINE No. IIIwI55

HIGH SPEED.

KNEE LIFTER.

COMPOUND FEED. ALTERNATING PRESSERS.

POSITIVE STITCH REGULATION

SAFETY CLUTCH

FOR AUTOMOBILE WORK, TENTS, AWNINGS,

FURNITURE UPHOLSTERING, LEATHER COATS, ETC.

No.	Plate	Name
*240247		Arm with 202135
224002	16686	" Cap
200278H	16686	" " Screw
202248	16686	" " Washer
204235	16695	" Position Pin (2)
200004E	16695	" Screw (3)
202005	16695	" Washer (3)
240553	16686	" Shaft with 224392 and 350431E
249440	16686	" " Ball Bearing
*240054	16686	" " " Collar with two
		200378C
240055	16686	Arm Shaft Ball Bearing Collar 240054 with
		249440
200378C	16686	Arm Shaft Ball Bearing Collar Set Screw
*240056	16686	" " " Retaining Washer
*240053	16686	" " Bushing (back)

et Screw ball bearing)
pall bearing)
40055 and 240056
vith 223847
oil Packing (wick)
" Thumb
N:1 70 1
Oil Pad
Set Screw
fulley with to 202253
Pulley Position
r uney rosition
Pulley Set Screw
" Spring
, 5
Timing Plate
11 11
k)
Screw
elt groove
roove 3.268 in.)
'C
rew
ew
iner
tiner ' Screw
Screw
Screw
Screw
Screw
Screw with 201349C, Driving Screw
Screw with 201349C, Driving Screw
Screw with 201349C, Driving Screw Driving Screw
Screw with 201349C, Driving Screw Driving Screw
vith 201349C, Driving Screw Driving Screw Driving Screw Hinge Stud with
Screw with 201349C, Driving Screw Driving Screw Driving Screw

No.	Plate	Name
200364C	16688	Bobbin Case Opener Lever Hinge Stud Set
		Screw
223623	16688	Bobbin Case Opener Lever Link
Z00118D	16688	" " Screw
203214	16687	" Tension Spring
200984C	16687	" Regulating Screw
200594C	16687	" " Screw
203216	16687	" Washer (cloth)
233765	16687	Bobbin Case complete, Nos. 200594C, 200984C,
		202056, 203214, 203216, 203473, 203474,
		203648, 233764, 241674, 241675 and two
340104	1//05	350405C
240104	16695	Face Plate
202135 200 4 73H	16695	1 03:11011 1 111
	16695	Indino Serew
240223	16690	Feed Bar
240224	16690	" " 240223 with 224052, 225837 and
2502025	16690	350197E
350393C 201518E	16690	Feed Bar Hinge Screw (driving)
264510	16690	Nut
204510	10090	"Dog, 40 elongated needle hole, for needle sizes 23 and 24, for 240144
200106E	16690	Feed Dog Screw (2)
240225	16689	" Driving Connection with 240226 and
LIGELS	1000,	240227
201181C	16689	Feed Driving Connection Hinge Screw
201518E	16689	" " Nut
240226	16689	" " Oiling Felt
240227	16689	11 H H H
		Retaining Wire
240228	16690	Feed Driving Crank with 200019E
200019E	16690	" " Pinch Screw
240554	16689	" " Eccentric
240555	16689	" " " Adjusting Disc
248415	16689	" " Spring
248416	16689	
		Collar with two 200382C
200382C	16689	Feed Driving Eccentric Adjusting Disc
		Spring Collar Set Screw
240231	16689	Feed Driving Eccentric Friction Gib
200369C		
	16689	" " Adjusting
	•	Screw
350101AL	•	Screw Feed Driving Eccentric Friction Gib Adjust-
	16689	Screw Feed Driving Eccentric Friction Gib Adjusting Screw Set Screw
350101AL 240232	•	Screw Feed Driving Eccentric Friction Gib Adjusting Screw Set Screw Feed Driving Flange with 200333C, 200346C,
240232	16689	Screw Feed Driving Eccentric Friction Gib Adjusting Screw Set Screw Feed Driving Flange with 200333C, 200346C, two each 200369C and 350101AL
240232 200333G	16689 16689 16689	Screw Feed Driving Eccentric Friction Gib Adjusting Screw Set Screw Feed Driving Flange with 200333C, 200346C, two each 200369C and 350101AL Feed Driving Flange Position Screw
240232 200333C 200346C	16689 16689 16689	Screw Feed Driving Eccentric Friction Gib Adjusting Screw Set Screw Feed Driving Flange with 200333C, 200346C, two each 200369C and 350101AL Feed Driving Flange Position Screw """ Set Screw
240232 200333C 200346C 223650	16689 16689 16689 16689 16690	Screw Feed Driving Eccentric Friction Gib Adjusting Screw Set Screw Feed Driving Flange with 200333C, 200346C, two each 200369C and 350101AL Feed Driving Flange Position Screw """ Set Screw "" Rock Shaft
240232 200333C 200346C	16689 16689 16689	Screw Feed Driving Eccentric Friction Gib Adjusting Screw Set Screw Feed Driving Flange with 200333C, 200346C, two each 200369C and 350101AL Feed Driving Flange Position Screw """ Set Screw """ Rock Shaft """ " 223650 with 201518E,
240232 200333C 200346C 223650 240233	16689 16689 16689 16690 16690	Screw Feed Driving Eccentric Friction Gib Adjusting Screw Set Screw Feed Driving Flange with 200333C, 200346C, two each 200369C and 350101AL Feed Driving Flange Position Screw " " Set Screw " " Rock Shaft " " " 223650 with 201518E, 240224 and 350393C
240232 200333C 200346C 223650 240233 248420	16689 16689 16689 16690 16690	Screw Feed Driving Eccentric Friction Gib Adjusting Screw Set Screw Feed Driving Flange with 200333C, 200346C, two each 200369C and 350101AL Feed Driving Flange Position Screw " " Set Screw " " Rock Shaft " " " 223650 with 201518E, 240224 and 350393C Feed Driving Rock Shaft Bushing (left) (split)
240232 200333C 200346C 223650 240233	16689 16689 16689 16690 16690	Screw Feed Driving Eccentric Friction Gib Adjusting Screw Set Screw Feed Driving Flange with 200333C, 200346C, two each 200369C and 350101AL Feed Driving Flange Position Screw " " Set Screw " " Rock Shaft " " " 223650 with 201518E, 240224 and 350393C Feed Driving Rock Shaft Bushing (left) (split)
240232 200333C 200346C 223650 240233 248420	16689 16689 16689 16690 16690	Screw Feed Driving Eccentric Friction Gib Adjusting Screw Set Screw Feed Driving Flange with 200333C, 200346C, two each 200369C and 350101AL Feed Driving Flange Position Screw " " Set Screw " " Rock Shaft " " " 223650 with 201518E, 240224 and 350393C Feed Driving Rock Shaft Bushing (left) (split) " " " " " Pinch Screw
240232 200333C 200346C 223650 240233 248420 200347C	16689 16689 16689 16689 16690 16690	Screw Feed Driving Eccentric Friction Gib Adjusting Screw Set Screw Feed Driving Flange with 200333C, 200346C, two each 200369C and 350101AL Feed Driving Flange Position Screw " " Set Screw " " Rock Shaft " " " 223650 with 201518E, 240224 and 350393C Feed Driving Rock Shaft Bushing (left) (split)

No.	Plate	Name		No.	Plate	Name
244084	16690	Feed Driving Rock Shaft Bushing (left) Pinch Screw Set Screw Packing (fibre)		*240056	16689	Hook Driving Shaft Ball Bearing Retaining
248421	16690	Feed Driving Rock Shaft Bushing (right)		. 2		Washer
Lioili	10070	(split)		*240058	16689	Hook Driving Shaft Bushing (back)
200327C	16690	(spiit) Feed Driving Rock Shaft Bushing (right) Pinch Screw		240063	16689	Hook Driving Shaft Bushing (back) (ball bearing) complete, Nos. 240056, 240058 and 240061
200347C	16690	Feed Driving Rock Shaft Bushing (right)		237529	16689	
	,	Pinch Screw Set Screw		200327C		Hook Driving Shaft Bushing (front) " " " Set Screw (2)
244084	16690	Feed Driving Rock Shaft Bushing (right)	;	265314	16689	" " Lock Ratchet with 200354C
224141	1//00	Pinch Screw Set Screw Packing (fibre)				and 200362C
224141	16690	Feed Driving Rock Shaft Crank with 200019E		200354C	16689	Hook Driving Shaft Lock Ratchet Position
200019E	16690	Pinch Screw	•			Screw
202625	16690	" " Stop Collar with		200362C	16689	Hook Driving Shaft Lock Ratchet Set Screw
		two 200383C (2)		240244	16689	" " " Stud
200383C	16690	Feed Driving Rock Shaft Stop Collar Set		240245	16689	" " " Retaining
		Screw				Spring
248449	16604	Feed Indicating Disc with 200958C		248425	16689	Hook Driving Shaft Lock Stud Spring
200958C	16604	" Set Screw		203525	16687	" Gib
224154	16689	" Lifting Cam with 201220C		201253F	16687	" " Screw
224052	16690	" " Fork with 200173D and		240559	16687	" Needle Guard
		223655		201409F	16687	" " Screw
350197E	16690	Feed Lifting Cam Fork Screw		223850	16688	Belew
225837	16690	" " Washer		224024		baddle with 200007E
223655	16690	" " Oiling Felt		224024	16688	223030 WITH 200304C, 200440C,
200173D	16690	" " " " Screw		240242		224019 and 224020
201220C	16689	berev		240243	16689	Hook Saddle Bearing
240235	16689	Set Screw		200335C	16689	" " Set Screw
		Regulating Didd		200009E	16688	" " Pinch Screw
240245	16689	Ketaning Sp. ing		200006E	16688	" " Screw
248425	16689	Opt mg		225585	16688	" " Washer
*240556		Hook (sewing)		240560	16688	Hook Saddle complete, Nos. 200118D, 200364C,
240557	16687	" 240556 with 203525, 240559, two each 201253F and 201409F				223623, 224004, 224005, 224022, 224024, 240167, 240558 and 265088
240558	16687	Hook and Bobbin Case complete, Nos. 233765		237837	16695	Knee Lifter Connection Lever
		and 240557		200262H	16695	" " " Hinge Screw
224019	16688	Hook Bushing (lower) (bronze)		223684	16695	" " Lifting Rod
200364C	16688	" Set Screw				with 202302
224020	16688	" " (upper) (bronze)		202302	16695	Knee Lifter Connection Lever Lifting Rod
200446C	16688	" " Position Screw				Cotter Pin
223867	16689	" Driving Gear (spiral) with 200362C and 201222C		206628	16695	Knee Lifter Connection Lever Lifting Rod Spring
201222C	16689	Hook Driving Gear Position Screw		227227	16695	Knee Lifter Connection Lever Lifting Rod
200362C	16689	" " Set Screw				Spring Collar with 200113F
240167	16688	" Pinion (spiral) with 300382C		200113F	16695	Knee Lifter Connection Lever Lifting Rod
		and 201220C				Spring Collar Set Screw
201220C	16688	Hook Driving Pinion Position Screw		240516	16695	Knee Lifter Lifting Lever
200382C	16688	" " Set Screw		200262H	16695	" Hinge Screw
224022	16688	" " Thrust Washer		240205	16693	Lifting Bell Crank
240241	16689	" " Shaft		200996C	16693	" " Cap Screw
249440	16689	" " Ball Bearing		240125	16691	" " Link
*240060	16689	" " Collar with		350172C	16691	" " " Screw Stud
		200378C and 201220C			16691	" " Nut
240061	16689	Hook Driving Shaft Ball Bearing Collar 240060		*237195	16691	" Eccentric
		with 249440		*237749	16691	" " Body
201220C	16689	Hook Driving Shaft Ball Bearing Collar			16691	" " Position Screw
		Position Screw			16691	" " Set Screw
200378C	16689	Hook Driving Shaft Ball Bearing Collar Set		240126	16691	" Connection
	•	Screw	÷	210120	100/1	Connection

No.	Plate	NI.
240171	16691	Name Lifting Eccentric Connection Crank with
240111	10071	200029E and 248821
248821	16691	Lifting Eccentric Connection Crank Oil
		Packing (wick)
200029E	16691	Lifting Eccentric Connection Crank Pinch
1103C	16691	Screw
217D	,-	Lifting Eccentric Regulating Screw
7071	16691	Bet Screw
237196	16691	Washer
23.170	10071	Lifting Eccentric complete, Nos. 217D, 443C, 1103C, 7071, 237195, 237749 and 350107C
240517	16693	Lifting Presser Foot, for cording and general
3000745	1//02	upholstery
200074F		Lifting Presser Foot Screw
240136 240174	16691 16691	ROCK Shart with 201324E and 350172C
240174	16692	Dusning (2)
240498	10092	Needle Bar with 200175D, 201350F and 240499
238251	16692	Needle Bar Connecting Link
264718	16692	" " " Oil Guard
200161D	•	" " " Screw
202333	16692	" " Stud with 202254
202254	16692	" " Oil Packing
2222212		(wick)
200374C	16692	Needle Bar Connecting Link Stud Set Screw
200383C	16692	Screw
208552	16692	" " Stud with 200086C
202330	16692	
202330	10072	Needle Bar Connecting Stud Oil Packing (wick)
200086C	16692	Needle Bar Connecting Stud Pinch Screw
202692	16692	" " Crank with 200335C, 200374C,
	,-	200383C, 200428C and 202333
240178	16692	Needle Bar Crank 202692 with 202399,
		202400, 208552, 238251 and 241518
203172	16692	Needle Bar Crank Friction Washer
200428C	16692	" " Position Screw
200335C	16692	" " Set Screw
240248	16692	" " Rock Frame
248437	16692	" " " Hinge Stud
200347C	16692	" " " " Set Screw
202666	16692	" " Position Bracket
200098F	16692	и и и и и
		Screw
223690	16691	Needle Bar Rock Frame Rock Shaft
223691	16691	" " " " 223690
224/22		with 200387C and 210920
223692	16691	Needle Bar Rock Frame Rock Shaft Crank
222/02	1//04	with 200029E
223693	16604	Needle Bar Rock Frame Rock Shaft Crank
201407C	1//04	Connection with 202277
2014070	16604	Needle Bar Rock Frame Rock Shaft Crank Connection Hinge Screw (lower)
206758	16604	Needle Bar Rock Frame Rock Shaft Crank
200130	10007	Connection Hinge Screw (lower) Oil
		Packing (wick)
201517E	16604	Needle Bar Rock Frame Rock Shaft Crank
2012114		Connection Hinge Screw (lower) Nut
		Commenter trings boren (toner) true

No.	Plate	Name
2008330	16604	Needle Bar Rock Frame Rock Shaft Crank
		Connection Hinge Screw (upper)
201 522E	16604	Needle Bar Rock Frame Rock Shaft Crank
		Connection Hinge Screw (upper) Nut
202277	16604	Needle Bar Rock Frame Rock Shaft Crank
		Connection Oil Packing (wick)
20 0029E	16691	Needle Bar Rock Frame Rock Shaft Crank
		Pinch Screw
202668	16691	Needle Bar Rock Frame Slide Block
210920	16691	" " 202668
		with 201141C
201141C	16691	Needle Bar Rock Frame Slide Block Stud
200387C	16691	" " " " " " " Set
3.10.10.0		Screw
240499	16692	Needle Bar Thread Guide
200175D		" " " Screw
201350F		Set Screw
208566 241352	16693	Presser Bar with 200074F
207072	16693 16693	busning (lower)
200352C	16693	(upper)
202671	16693	Set Screw (2)
200653C	16693	Litter
264526	16693	ninge ocrew
200975F	16693	Litting Bracket with 200054E
200054E	16693	Guide Screw
202337	16693	" " " Pinch Screw " Position Guide
202338	16693	" " " Lever with
	,-	200086F
200086F	16693	Presser Bar Position Guide Lever Pinch
		Screw
200352C	16693	Presser Bar Position Guide Set Screw
237836	16695	" Spring (flat)
210949	16693	" Bracket with 200086C
200086C	16693	" " Pinch Screw
201410F	16695	" " Regulating Screw
200948F	16695	" " Support Screw
265032	16689	Safety Clutch Hook Driving Shaft Position
		Collar with two 201254C
201254C	16689	Safety Clutch Hook Driving Shaft Position
240510	1//00	Collar Set Screw
240519	16689	Safety Clutch Locking Lever
240520	16689	" Connecting Link
240536	16689	ninge stud
200 364C	16689	Set
265102	1//00	Screw
240537	16689 16689	Safety Clutch Locking Lever Spring
200364C	16689	Hinge Stud
200304C	10087	
240538	16689	Set Screw
210220	10007	Safety Clutch Pulley with 202253 and two 200364C
202253	16689	
265057	16689	Safety Clutch Pulley Spring Flange " " Throw-in Latch
240522	16689	" " Pin
265051	16689	" " " Spring
,	,	Spr ing

		N.
No.	Plate	Name 240510 240520
240539	16689	Safety Clutch complete, Nos. 240519, 240520, 240522, 240536 to 240538, 265032, 265051,
		265057 and 265102
341510	14402	Take-up Lever
241518	16692 16692	" Driving Stud with 202277
202399 202277	16692	" Oil Packing (wick)
202400	16692	" Hinge Stud with 202423
202423	16692	" " Oil Packing (wick)
200363AL		" " Set Screw
240023	16612	Tension Bracket with 201224B and 236060
200159H	16612	" Screw
240446	16612	Tension Bracket complete, Nos. 200978H,
210110		201199F, 204271, 223438, 223703, 223704,
		223706, 237174, 240023, two each 200309E,
		201572H and 244048
244048	16612	Tension Disc
236060	16612	" Position Pin
223703	16612	" Release Lever
235576	16693	" Rod
200309E	16612	" " Screw
223704	16612	" Plunger
264527	16693	" " Slide
240142	16693	" " Spring
204271	16612	" Washer
223438	16612	" Spring
201224B	16612	" Stud
201572H	16612	" Thumb Nut
223706	16612	Thread Controller Disc
200978H	16612	" Screw
237174	16612	" Spring " Stop
241360	16612	n n !! Stop
200132E	16612	11 Stud with 204925
201199F	16612	" Set Screw
200061C	16612	" Thumb Nut
201572H	16612	u u Washer
204925	16612	" Guide
202412	16686	" Guide
224040	16612	" Guide
210954	16612	" (upper)
210955	16612 16612	" Screw (4)
200582H 240034	16612	" Retainer
240034 200355H	16612	" Set Screw
240144	16690	Throat Plate, for 264510
691F	16690	" " Screw (2)
240183	16693	Vibrating Presser Bar
240184	16693	" " Connecting Link
240185	16693	" Extension with 204264
		and 240186
240186	16693	Vibrating Presser Bar Extension Collar
204264	16693	n n n n Pin
202277	16693	" Oil Packing (wick)
240188	16693	" " Spring
350299C	16693	" " Thumb Screw
		(pressure regulating)
240518	16693	Vibrating Presser Foot, 40 needle hole, with
		201015F
201015F	16693	Vibrating Presser Foot Pinch Screw

ACCESSORIES

No.	Plate	Name
200157B	16695	Attachment Screw
200861D	16695	Bed Slide (back) Locking Thumb Screw
203470	16687	Bobbin (5)
.:31337	16695	Cloth Guide
200861D	16695	" " Thumb Screw
228476	17620	Screw Driver (Bobbin Case)
135x17		Needles, three each, sizes 20 and 22
224121	16644	Drip Pan, 20 in. long, with four 3/4 in. wire nails
12361	16695	Machine Hinge Connection (2)
41400	17620	" Rest Pin (wood)
	17620	Oiler (copper plated) with 120343
120342		` /
120343	17620	" Spout (3-1/2 in. long)
225498	17620	Screw Driver (7-1/4 in. long)
225554	17620	Wrench (steel)

BOBBIN WINDER

(SWINGING AUTOMATIC, RIGHT HAND)

FOR "V" BELT DRIVE

259428	18312	Brake (leather)
259429	18312	" Clamp
200113F	18312	" Screw
225453	18312	Frame with 202277 and 259660
225454	18312	" Hinge Pin
202277	18312	" Oil Packing (wick)
259660	18312	" Well Washer
2 25455	18312	" Spring
225456	18312	" Plunger
259461	18312	Pulley with 200380C
300380G	18312	" Set Screw
225381	18312	Spindle
225444	18312	Stop Latch
200056E	18312	" Screw
225458	18312	" " Thumb Lever
225459	18312	" " " Hinge Stud
225459	18312	" " " Joint Stud
202478	18312	" Trip Lever
८ ०० २९९ म	18312	" " Hinge Screw
225461	18312	Tension Bracket with 201499H
200082D	18312	" "Screw
228026	18312	" " Washer
2102	18312	" Disc
13710	18312	" Spring

No.	Plate	Name		
201499H	18312	Tension Stud		
201572H	18312	" Thumb Nut		
225462	18312	Bobbin Winder Tension Bracket complete,		
		Nos. 13710, 201572H, 225461 and two 2102		
259662	18312	Bobbin Winder and Tension Bracket Base		
259462	18312	Universal Bobbin Winder complete, Nos.		
		200056E, 200082D, 200113F, 200299H,		
		202478, 225381, 225444, 225453 to 225456,		
		225458, 225462, 228026, 259428, 259429,		
		259461, 259662, two each 225459 and wood		
		screws 3/4 in., No. 12, R. H. B.		

KNEE LIFTER

228359	16643	Rock Lev	er with two 350231C
228486	16643		Bracket with 200347C and three
		wood:	screws 7/8 in., No. 12
228361	16643	Rock Lev	er Bracket 228486 with 228359,
		22836	3, 228367, 228386 and 228455
228362	16643	Rock Lev	er Extension with 2005 39C
350231C	16643	••	" Set Screw
228363	16643	11	Hinge Pin
228364	16643	11	Knee Plate with 350231C
228388	16643	11	" " Arm
350231C	16643	18	" Set Screw
350231C	16643	** 1	" Set Screw
228455	16643	11 (1)	Position Spring
228365	16643	11	' Rod
200529C	16643	10	" - " Set Screw
228386	16643		' Spring
228367	16643		Stop Stud
200347C	16643		" " Set Screw
228368	16643	Knee Lif	ter complete, Nos. 228361, 228362,
		22836	4,228365 and 228388
	(Other	Knee Lifte	r Parts are listed with parts of
	•		ne Head)

THREAD LUBRICATOR

236955	18515	Thread Lubricating Cup with 200059C and 201280C
236957	18515	Thread Lubricating Cup Oil Pad (felt)
236959	18515	" " " " (upper)
		Reinforcing Plate
201280C	18515	Thread Lubricating Cup Oil Pad (upper)
		Tension Screw Stud
222712	18515	Thread Lubricating Cup Oil Pad (upper)
		Tension Spring

No.	Plate	Name
Z01572H	18515	Thread Lubricating Cup Oil Pad (upper)
		Tension Thumb Nut
≥36961	18515	Thread Lubricating Cup Oil Pad (upper)
		complete, Nos. 236957 and 236959
200059€	18515	Thread Lubricating Cup Set Screw
236962	18515	" " Thread Guide
236963	18515	Thread Lubricating Cup complete, Nos.
		201572H, 222712, 236955, 236961, 236962
		and three 236957

BOBBIN WINDER

(SWINGING AUTOMATIC, RIGHT HAND)

FOR 5/16 INCH ROUND BELT DRIVE

Note:	Same as	259462 "V" belt Bobbin Winder with the
	followin	g exceptions:
.25368	18312	Pulley with 200380C
.159430	18312	Bobbin Winder and Tension Bracket Base
35943I	18312	Universal Bobbin Winder complete, Nos.
		200056E, 200082D, 200113F, 200299H,
		202478, 225368, 225381, 225444, 225453 to
		225456, 225458, 225462, 228026, 259428 to
		259430, two each 225459 and wood screws
		3/4 in., No. 12, R. H. B.

FEED DOGS

240118	16696	Feed Dog, 46 needle hole, for needle sizes
		16 and 18, for 240143
240114	16696	Feed Dog, 50 needle hole, for needle sizes
		14 and 15, for 240144
240113	16696	Feed Dog, 46 needle hole, for needle sizes
		16 and 18, for 240144
264510	16690	Feed Dog, 40 elongated needle hole, for
		needle sizes 23 and 24, for 240144
240147	16696	Feed Dog, 38 needle hole, for needle sizes
		23 and 24, for 240144
240115	16696	Feed Dog, 50 needle hole, for needle sizes
		14 and 15, for 240145
240116	16696	Feed Dog, 46 needle hole, for needle sizes
		16 and 18, for 240145
240117	16696	Feed Dog, 40 needle hole, for needle sizes
		20 and 22, for 240145
2 40119	16696	Feed Dog, 40 needle hole, for needle sizes
		20 and 22, for 240146
240120	16696	Feed Dog, 38 needle hole, for needle sizes
		23 and 24, for 240146

FOOT LIFTER

PARTS REQUIRED FOR CHANGING FROM KNEE LIFTER TO FOOT LIFTER

No.	Plate			Nam	e
223733	16695	Lifting	Lever	Extension	
200082D	16695	11	- 11	11	Screw (2)
227561	16695	11	11	Spring	

FOOT LIFTER

227952	17620	Lever (left or right) with 227954
227678	17620	" Chain, 48 in. long, with 202784
227954	17620	" " Hook (lower)
202784	17620	" " (upper)
225016	17620	" Hinge Pin
227939	17620	" Stand with two wood screws 1 in.,
		No.12
227955	17620	Foot Lifter Lever (left or right) complete, Nos. 225016, 227678, 227939 and 227952

PRESSER FEET

240128	16694	Lifting I	Presser	Foot	, for	closing	gloves,
		for 2	40150 to	2401	52		
240130	16694	Lifting I	Presser	Foot	, for	cording	and general
		uphol	stery, fo	r 24	0154		
240133	16694	Lifting l	Presser	Foot	, for	240153	
240134	16694	11	11	11	11	240157	
240148	16694	Lt.	11	11	11	240149	
240517	16694	U	11	11	11	cording	and
		gene	ral upho	lste r	y, fo	r 240518	
240151	16694	Vibratin	g Press	er F	oot,	50 needle	e hole, with
			15F, for				
240152	16694	Vibratin	g Press	er F	oot,	46 needle	e hole, with
			15F, for				
240150	16694						e hole, with
		2010	15F, for	closi	ng g	loves, fo	r 240128

No.	Plate	Name
240154	16694	Vibrating Presser Foot, 40 needle hole, with
		201015F, for 240130
240153	16694	Vibrating Presser Foot, 40 needle hole, with
		201015F, for 240133
240157	16694	Vibrating Presser Foot, 40 needle hole, with
		201015F, for 240134
240149	16694	Vibrating Presser Foot, 46 needle hole, with
		201015F, for 240148
240518	16694	Vibrating Presser Foot, 40 needle hole, with
		201015F, for 240517

THREAD UNWINDER

228692	17900	Spool Pin
201528H	17900	" " Nut
228693	17900	" " Washer
225257	17900	" Rest (for two spools) (flat)
		with 201018C, two each 201528H, 228692
		and 228693
150203	17900	Spool Rest Cushion (felt)
225388	17900	" " Rod
200383C	17900	" " Set Screw
201018C	17900	" " Set Screw
259658	17900	" Stand with 200383C
225391	17900	Thread Guide
201696Н	17900	" " Lock Nut
225326	17900	" " Position Cup
225324	17900	" Rod with 208AL and 225322
208AL	17900	" " Screw
225322	17900	" " Washer
225258	17900	Thread Unwinder (for two spools) complete,
		Nos. 201696H, 225257, 225324, 225326,
		225388, 259658, two each 150203, 225391
		and three wood screws 7/8 in., No. 12
		•

THROAT PLATES

240143 240144	16696 16690	Throat Plate, for 240118 " " 240113, 240114, 240147 and
		264510
240145	16696	Throat Plate, for 240115 to 240117
240146	16696	" " 240119 and 240120

