

**MODEL**  
**RICCAR**  
**3300 · 3400**  
**3500 · 3600**

**PARTS LIST**

*RR 3000s*

*get  
5013 - #*

## CONTENTS

1) Arm shaft .....	1
2) Balance wheel & panel .....	2
3) Arm top cover.....	3
4) Face plate .....	4
5) Presser bar.....	5
6) Needle bar.....	6
7) Pattern cam contact .....	8
8) Pattern cam.....	9
9) Zig zag dial .....	10
10) Pattern selector dial.....	11
11) Dial tension.....	13
12) Forked rod .....	15
13) Feed regulator dial .....	16
14) Bobbin winder.....	18
15) Motor belt cover .....	19
16) Free arm cover .....	20
17) Feed rock shaft & feed dog .....	21
18) Lower shaft.....	22
19) Feed Lifting rock crank.....	23
20) Needle plate & belt .....	24
21) Rotary hook .....	25
22) Switch cord .....	26
23) Motor .....	27
24) Sewing table .....	28
25) Free arm base .....	29

## **MODEL 3300,3400,3500,3600**

When you order any spare parts from us, please cooperate with us by writing

- 1) Model number,
- 2) Parts number,
- 3) Name of parts
- 4) Voltage, if necessary
- 5) Others, if any,

## (1) ARM SHAFT

REPAIR MANUAL A. REHW (MAH-1)

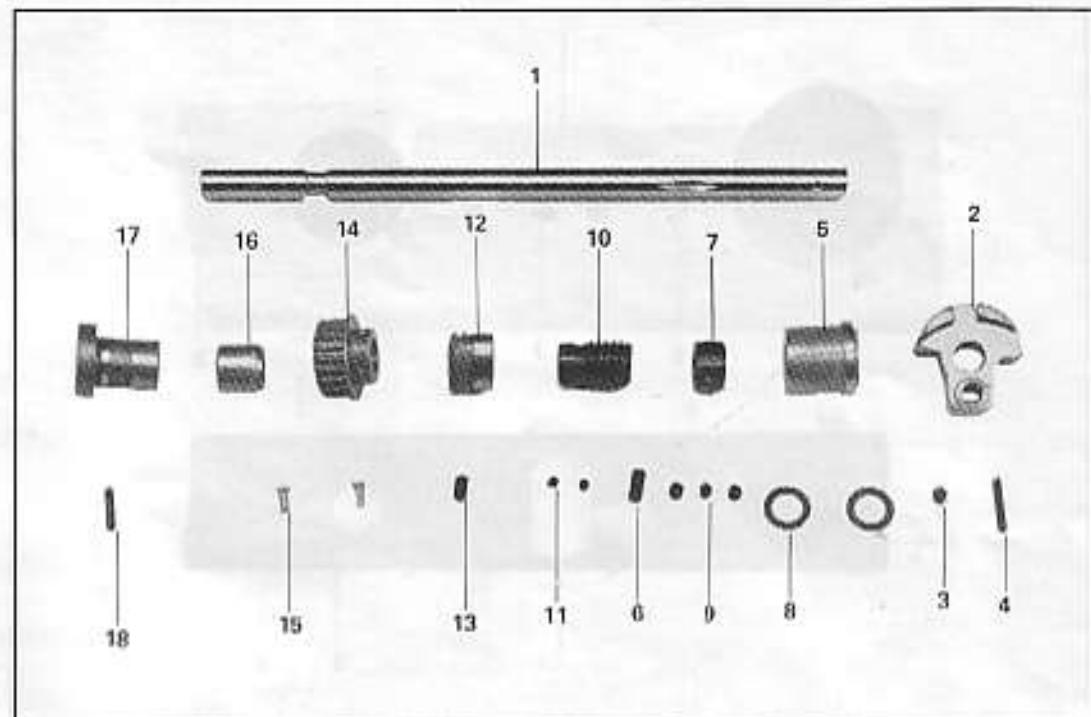


FIG. NO.	PARTS NO.	DESCRIPTION	O'1Y	3300	3400	3500	3600
1.	US13942	Arm shaft	1	0	0	0	0
2.	US42991	Arm shaft balance complete	1	0	0	0	0
3.		Arm shaft balance pin set screw	1	0	0	0	0
4.	SP36241	Arm shaft balance pin	1	0	0	0	0
5.	WHZ1A93	Arm shaft collar washer	2	0	0	0	0
6.	US33941	Arm shaft bushing (1)	1	0	0	0	0
7.	SWCWW11	Arm shaft bushing (1) set screw	1	0	0	0	0
8.	USE2941	Arm shaft collar complete	1	0	0	0	0
9.	SWCWW11	Arm shaft collar set screw	(2)	0	0	0	0
10.	USO1991	Worm	1	0	0	0	0
11.	SWC53W1	Worm set screw	2	0	0	0	0
12.	US2299	Feed cam	1	0	0	0	0
13.		Feed cam set screw	1	0	0	0	0
14.	USB1991	Arm shaft sprocket complete	1	0	0	0	0
15.		Arm shaft sprocket set screw	2	0	0	0	0
16.	USC3991	Arm shaft bushing	1	0	0	0	0
17.	HW1941L	Balance wheel bushing	1	0	0	0	0
18.	SW7YY14	Balance wheel bushing pin	1	0	0	0	0

(2) HAND WHEEL & FRONT PANEL

TRADE PARTS

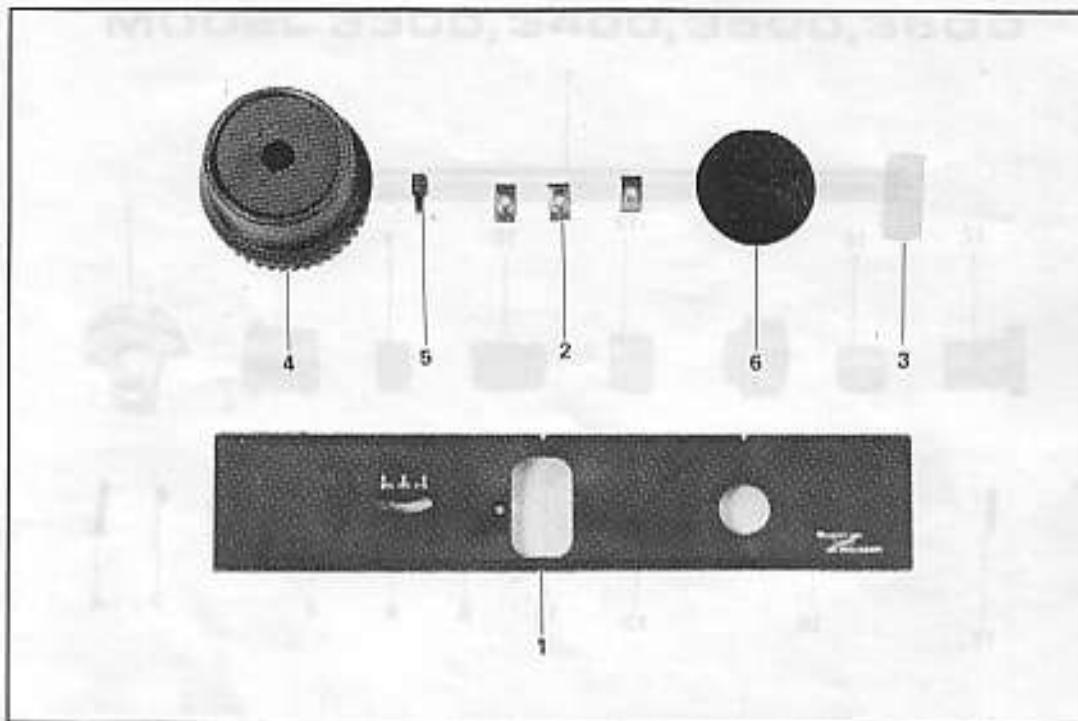


FIG. NO.	PARTS NO.	DESCRIPTION	Q'TY	3300	3400	3500	3600
1.		Front panel	1	0	0	0	0
2.		Front panel-stopper	3	0	0	0	0
3.		Needle position lever plate (for model JFS-1 JPN)	1			0	
4.		Hand wheel	1	0	0	0	0
5.		Hand wheel decorated plate	1	0	0	0	0
6.		Hand wheel set screw	1	0	0	0	0

(3) ARM TOP COVER

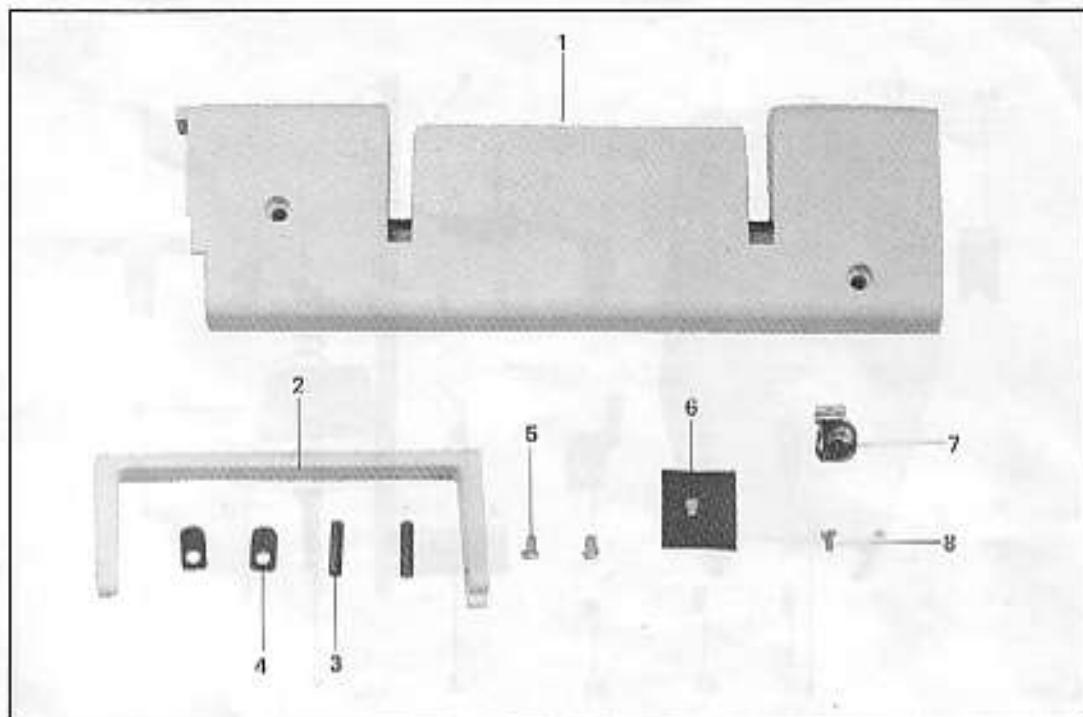


FIG. NO.	PARTS NO.	DESCRIPTION	O'TY	3300	3400	3500	3600
		Arm top cover complete	1	0	0	0	0
1.	TP1941	Arm top cover	1	0	0	0	0
2.	AA10943	Handle	1	0	0	0	0
3.	AA11043	Spindle for handle	2	0	0	0	0
4.	AA12944	Stopper plate of handle	2	0	0	0	0
5.	SW1YY54	Stopper plate set screw	2	0	0	0	0
6.	AA13963	Stopper of handle	1	0	0	0	0
7.	TG22041	Arm top cover thread guide	1	0	0	0	0
8.	SW84342	Arm top cover thread guide set screw	1	0	0	0	0
9.	SW8XX22	Arm top cover set screw	2	0	0	0	0

(4) FACE PLATE

REV 00 NOT DRAWN TO

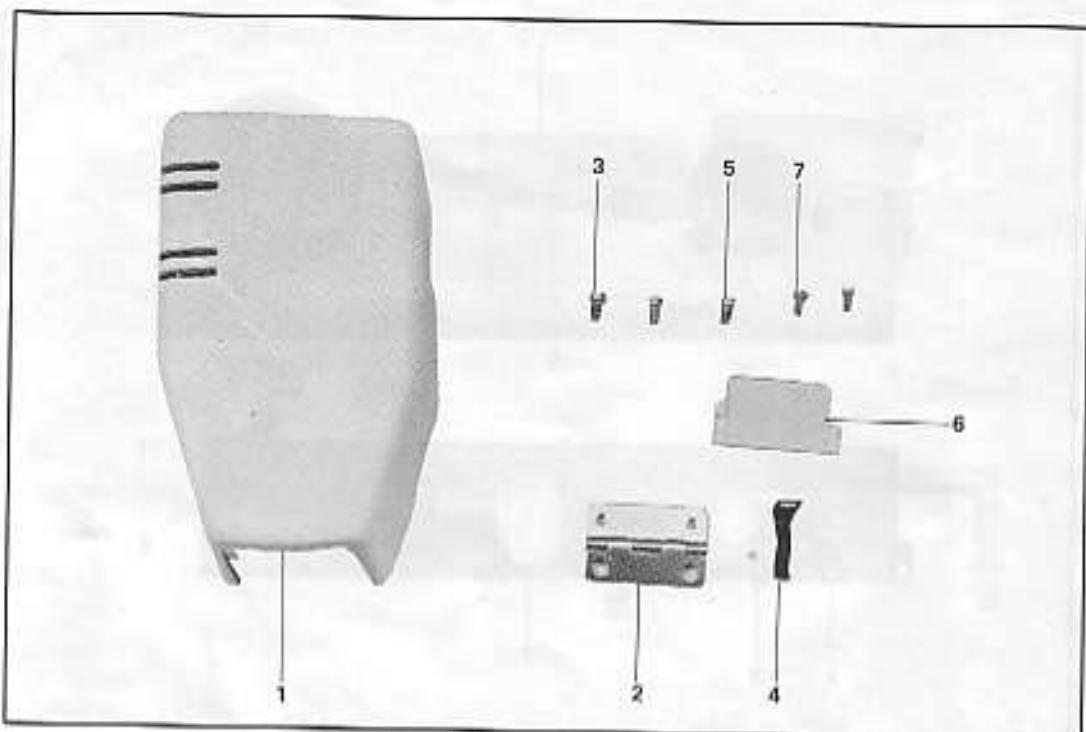


FIG. NO.	PARTS NO.	DESCRIPTION	O'TY	3300	3400	3500	3600
1.	FD4941	Face plate	1	0	0	0	0
2.	NB12901	Face plate hinge	1	0	0	0	0
3.	SW1YY54	Face plate hinge set screw (1)	2	0	0	0	0
4.	SG26D74	Face plate stopper spring	1	0	0	0	0
5.	SW1YY54	Face plate stopper spring set screw	1	0	0	0	0
6.	AA14963	Face plate shielding plate	1	0	0	0	0
7.	SW2ZZ14	Face plate hinge set screw	2	0	0	0	0

(5) PRESSER BAR

REV. E JUN 1987 DRAFT DRAFT A REV. 2 JUNE 1987

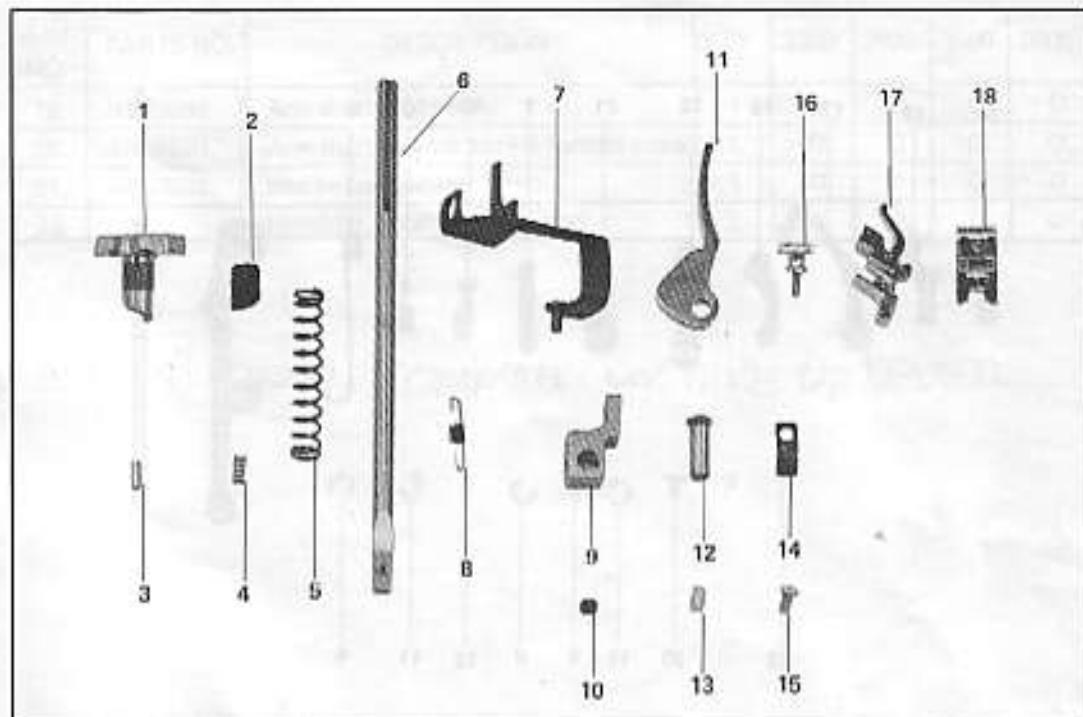


FIG. NO.	PARTS NO.	DESCRIPTION	Q'TY	3300	3400	3500	3600
1.	D19943Q	Presser bar regulating dial	1	0	0	0	0
2.	NBT3941	Pressure spring supporter	1	0	0	0	0
3.	NBS6041	Presser bar regulating dial stopper pin	1	0	0	0	0
4.	SG1FC54	Presser bar regulating dial pin spring	1	0	0	0	0
5.	SG16C44	Pressure spring	1	0	0	0	0
6.	NBU3941	Presser bar	1	0	0	0	0
7.	NBP2941	Tension lever lifter	1	0	0	0	0
8.	SG13G84	Tension lever lifter spring	1	0	0	0	0
9.	NB94941	Needle bar supporter stopper	1	0	0	0	0
10.		Needle bar supporter stopper set screw	1	0	0	0	0
11.	NBC3941	Presser bar lifter	1	0	0	0	0
12.	NBD4991	Presser bar lifter pin	1	0	0	0	0
13.	SWCXX14	Presser bar lifter pin set screw	1	0	0	0	0
14.	NBB2991	Presser bar bracket	1	0	0	0	0
15.		Presser bar bracket set screw	1	0	0	0	0
16.	SWB4322	Presser foot set screw	1	0	0	0	0
17.	NB92994	Shank complete	1	0	0	0	0
18.	NB92991	Zigzag presser foot	1	0	0	0	0

5013-3

## (6) NEEDLE BAR &amp; THREAD TAKE UP LEVER

PAB HOLLOWAY CO.

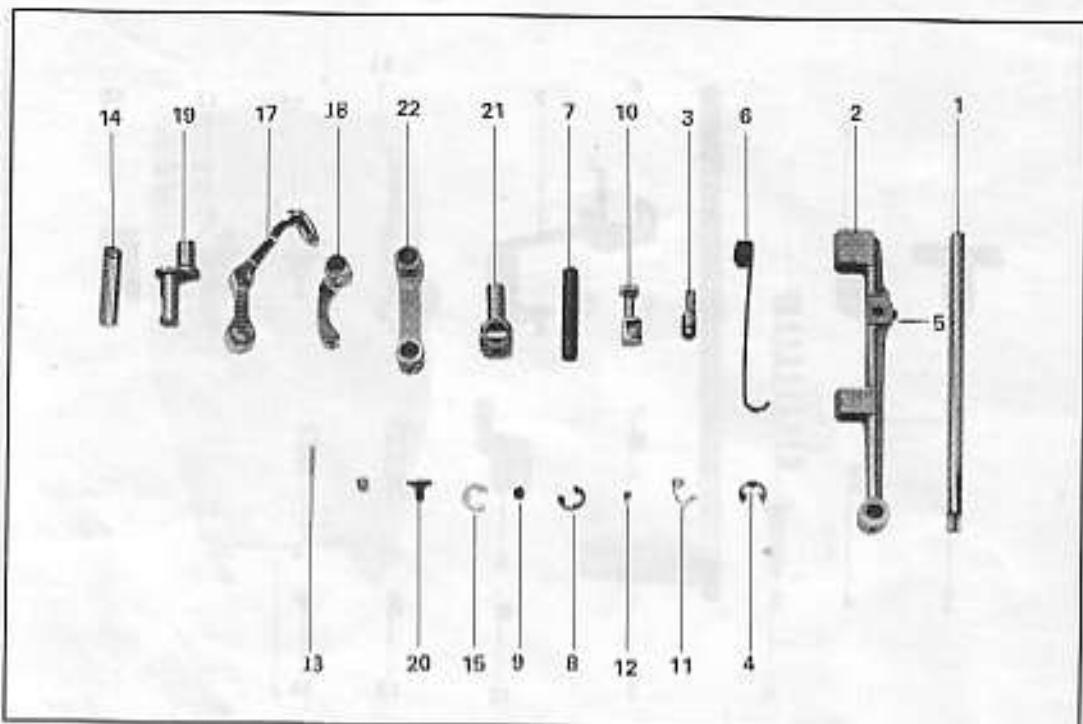


FIG. NO.	PARTS NO.	DESCRIPTION	QTY	3300	3400	3500	3600
1.	NB13122	Needle bar	1	0	0	0	0
2.		Needle bar supporter	1	0	0	0	0
3.	NBM4942	Needle bar supporter pin	1	0	0	0	0
4.	RREQQ52	Needle bar supporter spring	1	0	0	0	0
5.	SWCXX14	Needle bar supporter pin set screw	1	0	0	0	0
6.	SG1G064	Needle bar supporter set screw	1	0	0	0	0
7.	NB03902	Needle bar driving rod pin	1	0	0	0	0
8.	RREQQ52	Needle bar driving rod pin set ring	1	0	0	0	0
9.		Needle bar driving rod set screw	1	0	0	0	0
10.	NB32991	Needle clamp complete	1	0	0	0	0
11.	NB25991	Needle bar thread guide	1	0	0	0	0
12.	NB35944	Needle bar thread guide set screw	1	0	0	0	0
13.	NDIHA141	Needle	1	0	0	0	0
14.	NB73996	Thread take up lever supporting shaft	1	0	0	0	0
15.		Thread take up lever supporting shaft set ring	1	0	0	0	0
16.		Thread take up lever supporting shaft set screw	1	0	0	0	0
*	NB72941	Thread take up lever complete	1	0	0	0	0
*	NB75992	Thread take up lever (1)	1	0	0	0	0
*	NB75942	Thread take up lever (2)	1	0	0	0	0

SN23  
CONF 2  
END

FIG. NO.	PARTS NO.	DESCRIPTION	Q'TY	3300	3400	3500	3600
19.	NB73905	Arm shaft balance pin	1	0	0	0	0
20.	SW543Z1	Arm shaft balance pin lift handed screw	1	0	0	0	0
21.	NB62901	Needle bar bracket	1	0	0	0	0
22		Needle bar crank rod	1	0	0	0	0

\* COMES ONLY complete w/TAKE UP LEVER.

(7) PATTERN CAM CONTACT

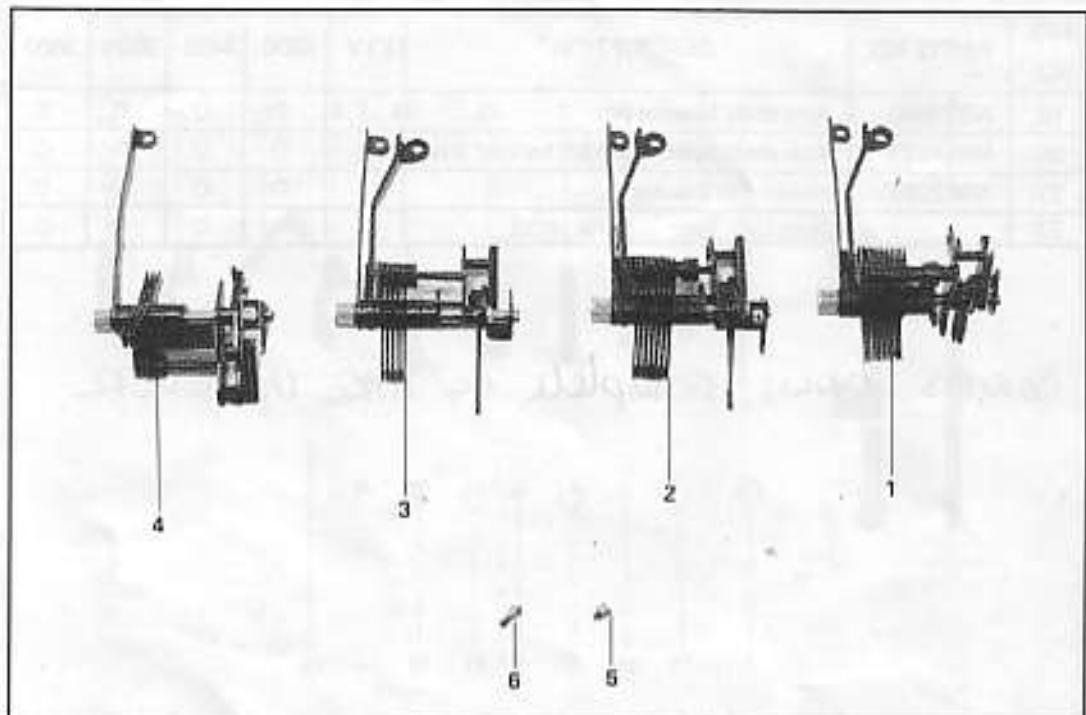


FIG. NO.	PARTS NO.	DESCRIPTION	O'TY	3300	3400	3500	3600
1.	PC12911	Pattern cam contact complete	1				0
2.	PC12921	Pattern cam contact complete	1			0	
3.	PC12931	Pattern cam contact complete	1		0		
4.	PC12941	Pattern cam contact complete	1	0			
5.		Pattern cam contact set screw	1	0	0	0	0
6.		Pattern cam contact set screw	1	0	0	0	0

(8) PATTERN CAM

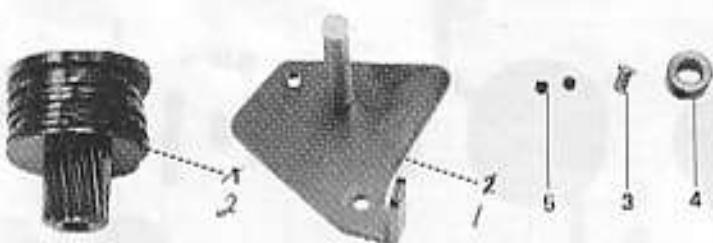


FIG. NO.	PARTS NO.	DESCRIPTION	Q'TY	3300	3400	3500	3600
1.	PCA2042	Pattern cam supporter plate	1	0	0	0	0
2.	PCC3941	Pattern cam	1	0	0	0	0
3.	SW8XX43	Pattern cam supporter plate set screw	1	0	0	0	0
4.	PCJ4942	Pattern cam collar	1	0	0	0	0
5.	SWCE5311	Pattern cam collar set screw	1	0	0	0	0

(9) ZIG ZAG DIAL

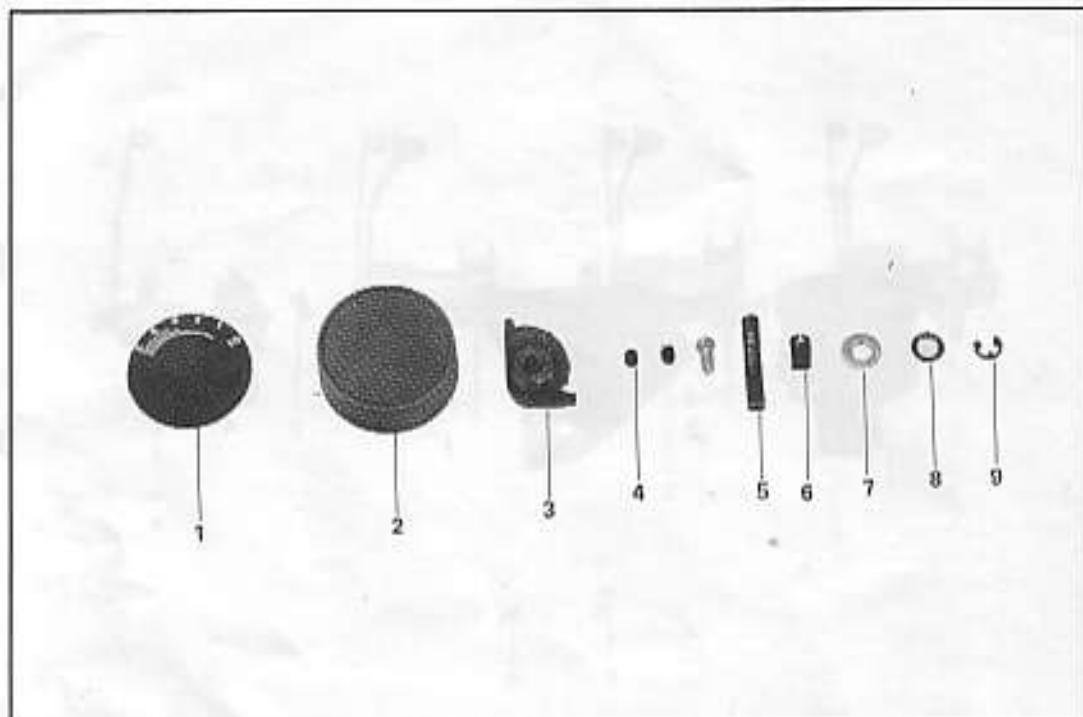


FIG. NO.	PARTS NO.	DESCRIPTION	Q'TY	3300	3400	3500	3600
1.		Zig zag width dial plate	1	0	0	0	0
2.	DI7943L	Zig Zag width dial	1	0	0	0	0
3.	PC93942	Zig zag width regulating cam	1	0	0	0	0
4.	SWC53X1	Zig zag width regulating cam set screw	2	0	0	0	0
5.	PC04941	Zig zag width dial shaft	1	0	0	0	0
6.	SP66002	Zig zag width dial spring	1	0	0	0	0
7.	WH11B11	Zig zag width dial shaft washer (1)	1	0	0	0	0
8.	WH00613	Zig zag width dial shaft washer (2)	1	0	0	0	0
9.	RRE0051	Zig zag width dial shaft set ring	1	0	0	0	0

(10) PATTERN SELECTOR DIAL

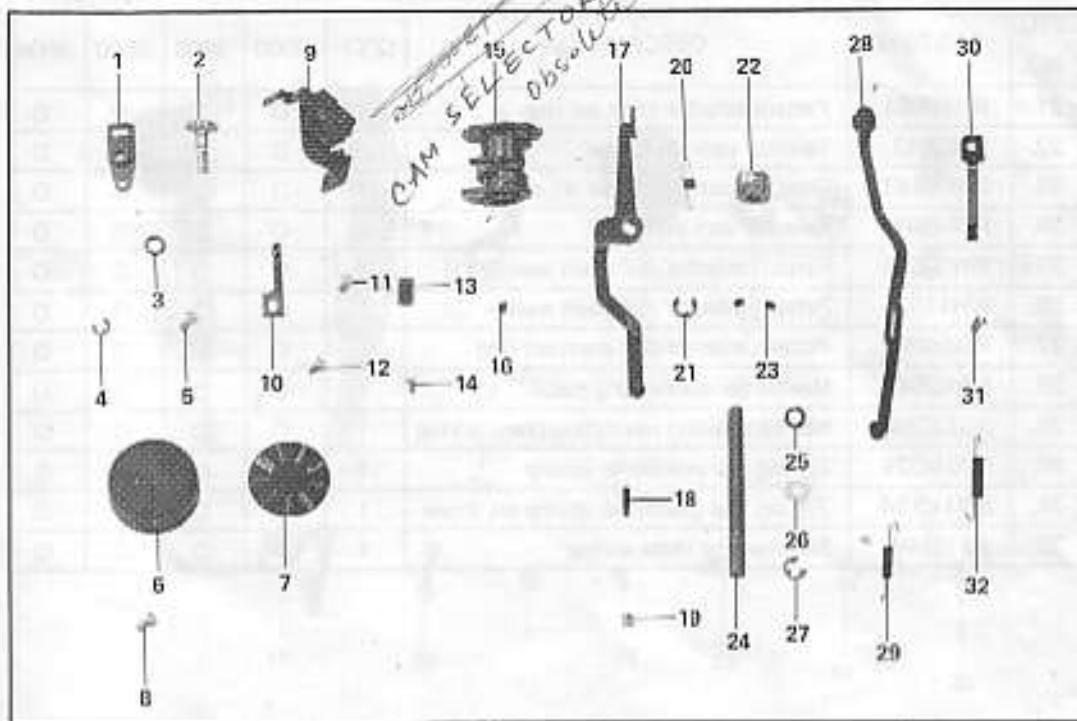


FIG. NO.	PARTS NO.	DESCRIPTION	Q'TY	3300	3400	3500	3600
1.	PC32942	Selector dial support plate	1	0	0	0	0
2.	PCF3941	Selector dial shaft gear	1	0	0	0	0
3.	WH30613	Selector dial shaft washer	1	0	0	0	0
4.	HILLI 0051	Selector dial shaft set ring	1	0	0	0	0
5.	SW1YY44	Selector dial support plate	2	0	0	0	0
6.	D17943L	Selector dial	1	0	0	0	0
7.	PLB9211	Selector dial decorated plate	1	0	0	0	0
8.	SP66002	Selector dial spring	1	0	0	0	0
9.	PCF2921	Needle position lever complete	1	0	0	0	0
10.	SG27F64	Needle position spring	1	0	0	0	0
11.	SW1YY44	Needle position spring set screw	1	0	0	0	0
12.	SW1YY44	Needle position plate set screw	1	0	0	0	0
13.	D10923	Needle position lever knob	1	0	0	0	0
14.	SW73411	Needle position lever knob set screw	1	0	0	0	0
15.	PC83922-3300	Selector cam 3400, 3500, 3600	0	0	0	0	0
16.	SWC63X1	Selector cam shaft gear set screw	1	0	0	0	0
17.	PC72941	Pattern selector lever	1	0	0	0	0
18.	SW943W2	Pattern selector dial adjusted screw	1	0	0	0	0
19.	SN043Y2	Pattern selector dial adjusted screw nut	1	0	0	0	0
20.	SG12D14	Pattern selector lever spring	1	0	0	0	0

15-PC83922-MODEL#

\* PC83922-3600 (For 3600) - 3500 (For 3500) - 3400 (For 3400)

FIG. NO.	PARTS NO.	DESCRIPTION	Q'TY	3300	3400	3500	3600
21.	RRE0061	Pattern selector lever set ring	1	0	0	0	0
22.	PCS3042	Selector cam shaft gear	1	0	0	0	0
23.	SWC53X1	Selector cam shaft gear set screw	1	0	0	0	0
24.	PC44941	Selector cam shaft	1	0	0	0	0
25.	WH30613	Pattern selector dial shaft washer (1)	1	0	0	0	0
26.	WH11B11	Pattern selector dial shaft washer (2)	1	0	0	0	0
27.	RRE0061	Pattern selector dial shaft set ring	1	0	0	0	0
28.	NBN29M1	Needle bar connecting rod	1	0	0	0	0
29.	SG12G94	Needle position regulating crank spring	1	0	0	0	0
30.	SG2AD24	Zig zag dial positioner spring	1	0	0	0	0
31.	SW1YY54	Zig zag dial positioner spring set screw	1	0	0	0	0
32.	SG19E94	Selector dial plate spring	1	0	0	0	0

**(11) DIAL TENSION**

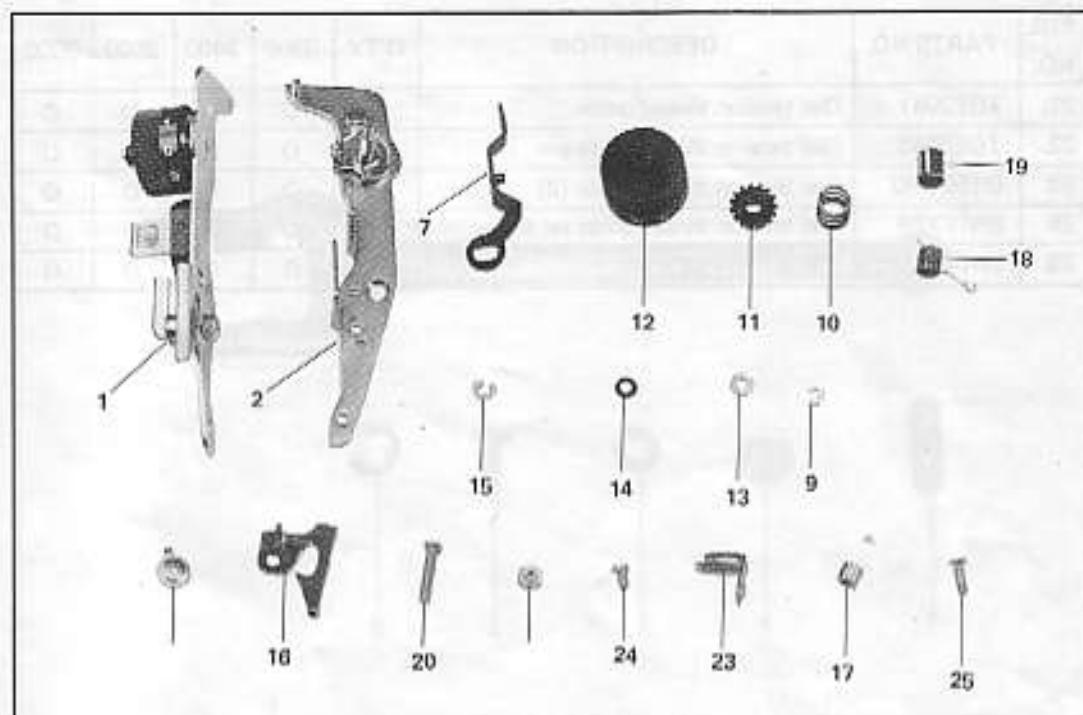


FIG. NO.	PARTS NO.	DESCRIPTION	O'TY	3300	3400	3500	3600
1.	DT294100	Dial Tension complete	1	0	0	0	0
2.	DT649200	Dial tension supporter plate	1	0	0	0	0
3.	DT394300	Dial tension supporter pin	1	0	0	0	0
4.	DT694400	Dial tension shaft	1	0	0	0	0
5.	DT694500	Dial tension disc (1)	1	0	0	0	0
6.	DT694600	Dial tension disc (2)	1	0	0	0	0
7.	DT694700	Dial tension waft plate	1	0	0	0	0
8.	DT394800	Dial tension waft plate pin	1	0	0	0	0
9.	RREQQ39	Dial tension waft plate set ring	1	0	0	0	0
10.	SG14C24	Dial tension spring	1	0	0	0	0
11.	DT394100	Dial tension spring regulator nut	1	0	0	0	0
12.	DT394AL	Dial tension knob	1	0	0	0	0
13.		Dial tension knob spring washer	1	0	0	0	0
14.	WH11B47	Dial tension shaft washer	1	0	0	0	0
15.	RRE0033	Dial tension shaft set ring	1	0	0	0	0
16.	DT394H0	Dial tension thread plate	1	0	0	0	0
17.	DT694C0	Dial thread guide spring tube	1	0	0	0	0
18.	SG12C16	Thread guide spring	1	0	0	0	0
19.	DT694D0	Thread guide spring rugnulator	1	0	0	0	0
20.	DTSWIYY61	Thread guide set screw	1	0	0	0	0

FIG. NO.	PARTS NO.	DESCRIPTION	Q'TY	3300	3400	3500	3600
21.	TGE2941	Dial tension thread guide	1	0	0	0	0
22.	TGF5943	Dial tension thread guide pin	1	0	0	0	0
23.	DT594HQ	Dial tension thread guide (2)	1	0	0	0	0
24.	SWIYY54	Dial tension thread guide set screw	1	0	0	0	0
25.	SW6YY284	Dial tension set screw	1	0	0	0	0

(12) FORKED ROD

ROTARY DIES SET

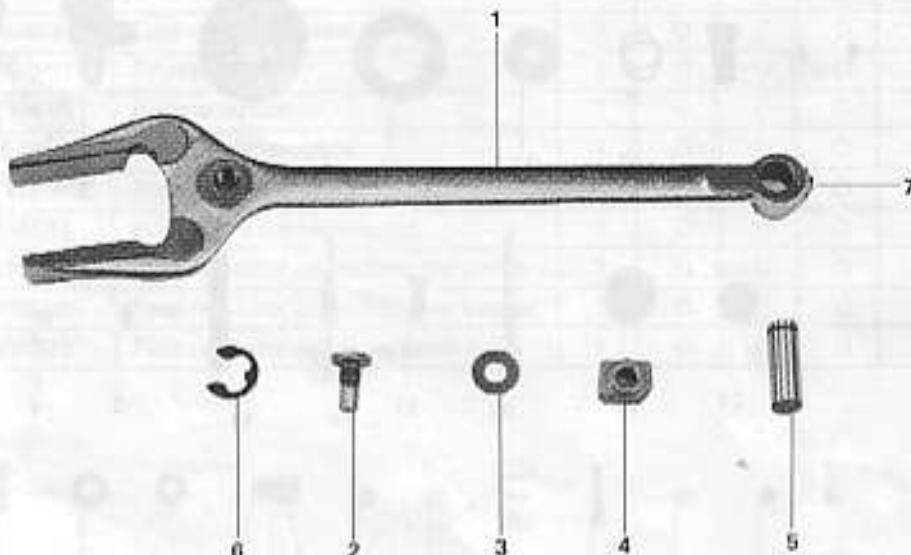


FIG. NO.	PARTS NO.	DESCRIPTION	Q'TY	3300	3400	3500	3600
1.	FR46002	Forked rod	1	0	0	0	0
2.	FR53995	Feed regulating slide block shaft	1	0	0	0	0
3.	WH21AB3	Feed regulating slide block washer	1	0	0	0	0
4.	FR53994	Feed regulating slide block	1	0	0	0	0
5.	FRE3992	Forked rod pin	1	0	0	0	0
6.	RRE0071	Forked rod set screw	1	0	0	0	0
7.	SWC53W1	Forked rod set screw	1	0	0	0	0

(13) FEED REGULATOR

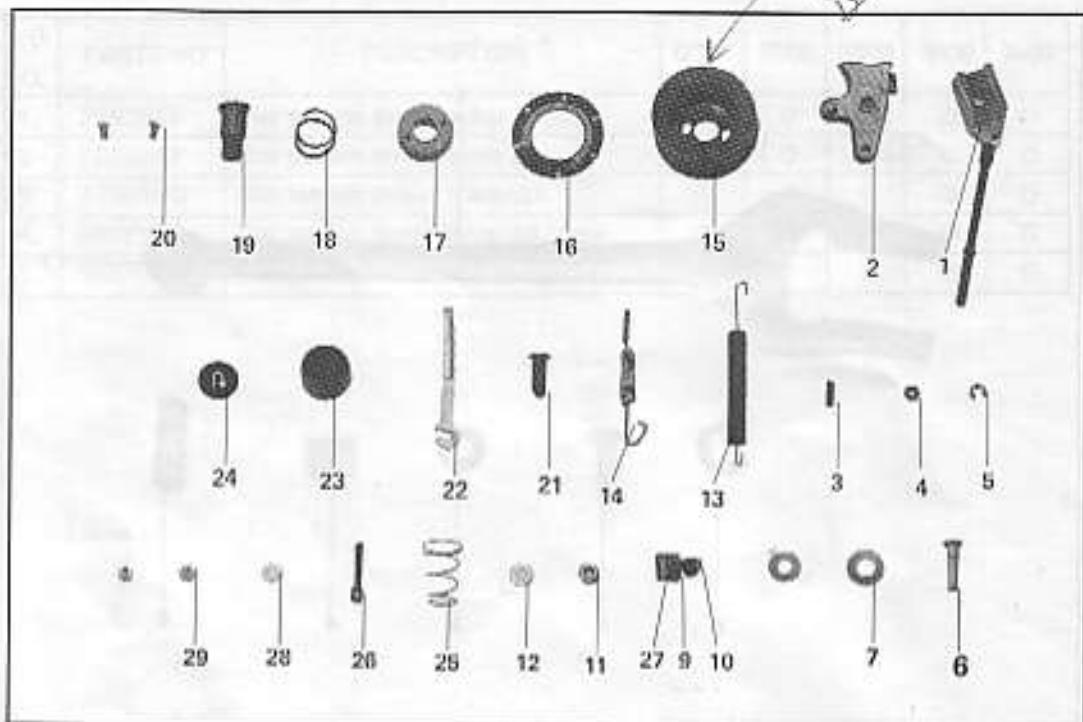


FIG. NO.	PARTS NO.	DESCRIPTION	Q'TY	3300	3400	3500	3600
1.	FR52922	Feed regulator complete	1	0	0	0	0
2.	FR72941	Feed regulator plate	1	0	0	0	0
3.	SWC43/1	Feed regulator plate adjusting screw	1	0	0	0	0
4.	SN043Z1	Feed regulator plate adjusting screw nut	1	0	0	0	0
5.	RRE0031	Reverse lever stop ring	1	0	0	0	0
6.	FR63991	Feed regulator shaft	1	0	0	0	0
7.	WH21A73	Feed regulator shaft washer	1	0	0	0	0
8.	SWCXX24	Feed regulator set screw	1	0	0	0	0
9.	SG12A16	Feed regulating connecting rod spring	1	0	0	0	0
10.	SN053Z1	Feed regulation nut	1	0	0	0	0
11.	SN053Y1	Feed regulator rock nut	1	0	0	0	0
12.	WI110A64	Feed regulator rock washer	2	0	0	0	0
13.	SG1BF24	Reverse spring	1	0	0	0	0
14.	FRF2941	Button hole spring	1	0	0	0	0
15.	DI1043	Feed regulator dial H119832.11	1	0	0	0	0
16.	PL29111	Feed regulator dial plate	1	0	0	0	0
17.	FRC3991	Feed regulator gear	1	0	0	0	0
18.	SGC3A91	Feed regulator spring	1	0	0	0	0
19.	FRI3991	Feed regulator gear supporter bushing	1	0	0	0	0
20.	SW73411	Feed regulator dial set screw	2	0	0	0	0

FIG. NO.	PARTS NO.	DESCRIPTION	Q'TY	3300	3400	3500	3600
21.	FRD4991	Feed regulator screw	1	0	0	0	0
22.	FRB4991	Reverse lever	1	0	0	0	0
23.	D13943N	Reverse button	1	0	0	0	0
24.	PL61411	Reverse button plate	1	0	0	0	0
25.	SG1DA44	Reverse button spring	1	0	0	0	0
26.	PCG4941	Buttonhole connecting rod	1	0	0	0	0
27.	SG12A16	Feed regulator connecting rod spring	1	0	0	0	0
28.	WH19A65	Feed regulator connecting rod washer	1	0	0	0	0
29.	SN043Z1	Feed regulator adjusting screw nut	1	0	0	0	0

**(14) BOBBIN WINDER**

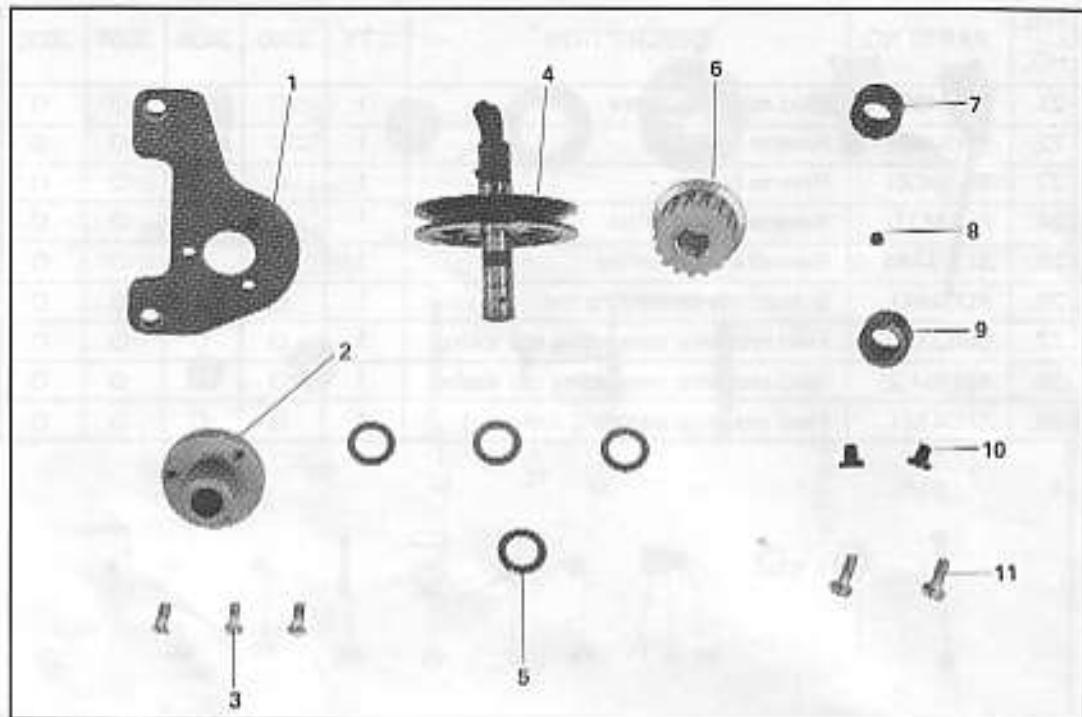


FIG. NO.	PARTS NO.	DESCRIPTION	Q'TY	3300	3400	3500	3600
1.	BW14942	Bobbin winder shaft plate	1	0	0	0	0
2.	BW13943	Bobbin winder bushing	1	0	0	0	0
3.	SW1YY44	Bobbin winder bushing set screw	1	0	0	0	0
4.	BW10945	Bobbin winder shaft & idle pulley	1	0	0	0	0
5.	WH21B23	Bobbin winder shaft washer	2	0	0	0	0
6.	BW13949	Clutch pulley	1	0	0	0	0
7.	BW14948	Bobbin winder shaft collar (1)	1	0	0	0	0
8.	SWC5311	Bobbin winder shaft collar (1) set screw	1	0	0	0	0
9.	BW14948	Bobbin winder shaft collar (2)	1	0	0	0	0
10.	SW15321	Bobbin winder shaft collar (2) set screw	2	0	0	0	0
11.	SW2XX24	Bobbin winder shaft set screw	2	0	0	0	0

(15) MOTOR DRIVER BELT COVER & SPOOL PIN

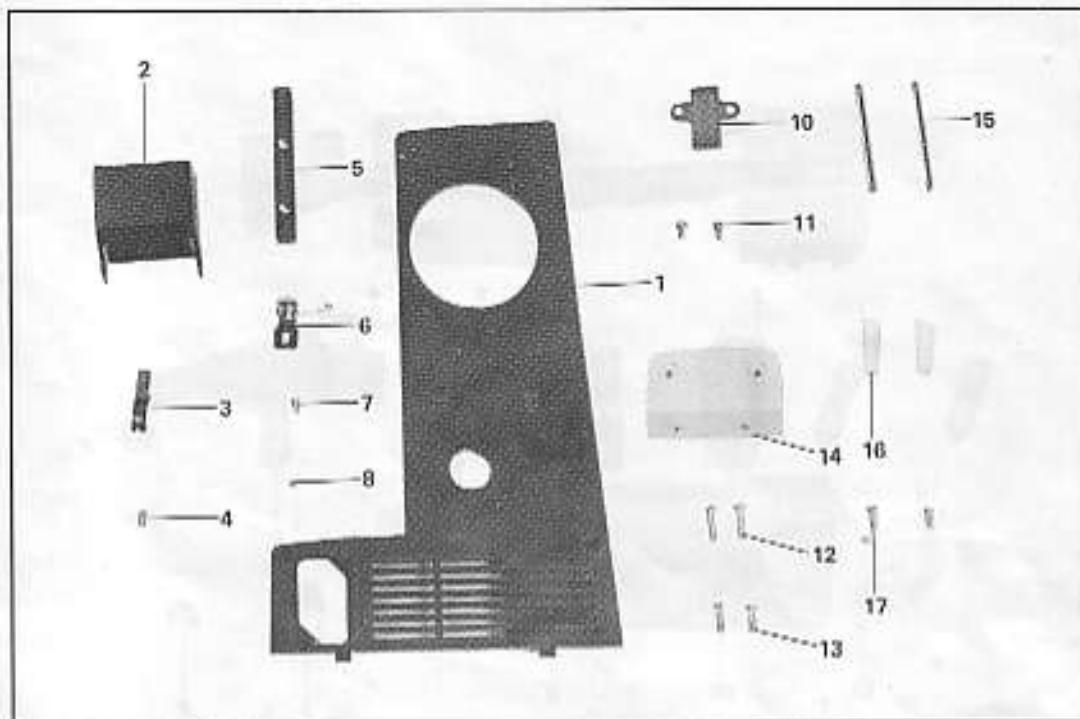


FIG. NO.	PARTS NO.	DESCRIPTION	Q'TY	3300	3400	3500	3600
1.	CV8305P	Motor drive belt cover	1	0	0	0	0
2.	CV9301P	Bobbin winder cover	1	0	0	0	0
3.	SG26D54	Bobbin winder cover spring	1	0	0	0	0
4.	SWHYY15	Bobbin winder cover spring set screw	1	0	0	0	0
5.	TG05941	Bobbin winder thread guide slide plate	1	0	0	0	0
6.	TGA2941	Bobbin winder thread guide complete	1	0	0	0	0
7.	SW2ZZ12	Bobbin winder thread guide set screw	1	0	0	0	0
8.	DI-39980	Bobbin winder thread guide slide plate ball	1	0	0	0	0
9.	SG1FD4b	Bobbin winder thread guide slide plate spring	1	0	0	0	0
10.	TGB5941	Ribbin winder thread guide supporter plate	1	0	0	0	0
11.	SWHYY15	Bobbin wider thread guide support plate set screw	2	0	0	0	0
12.	SW1YY84	Motor drive belt cover set screw (1)	2	0	0	0	0
13.	SW1YY34	Motor drive belt cover set screw (2)	2	0	0	0	0
14.	TG9394N	Spool pin plate	1	0	0	0	0
15.	TG45991	Spool pin	2	0	0	0	0
16.	TGD399N	Spool pin roller	2	0	0	0	0
17.	SW1YY42	Spool pin plate set screw	2	0	0	0	0

(16) FREE ARM COVER

WILTEK 3300 3400 3500 3600 SERVICE MANUAL

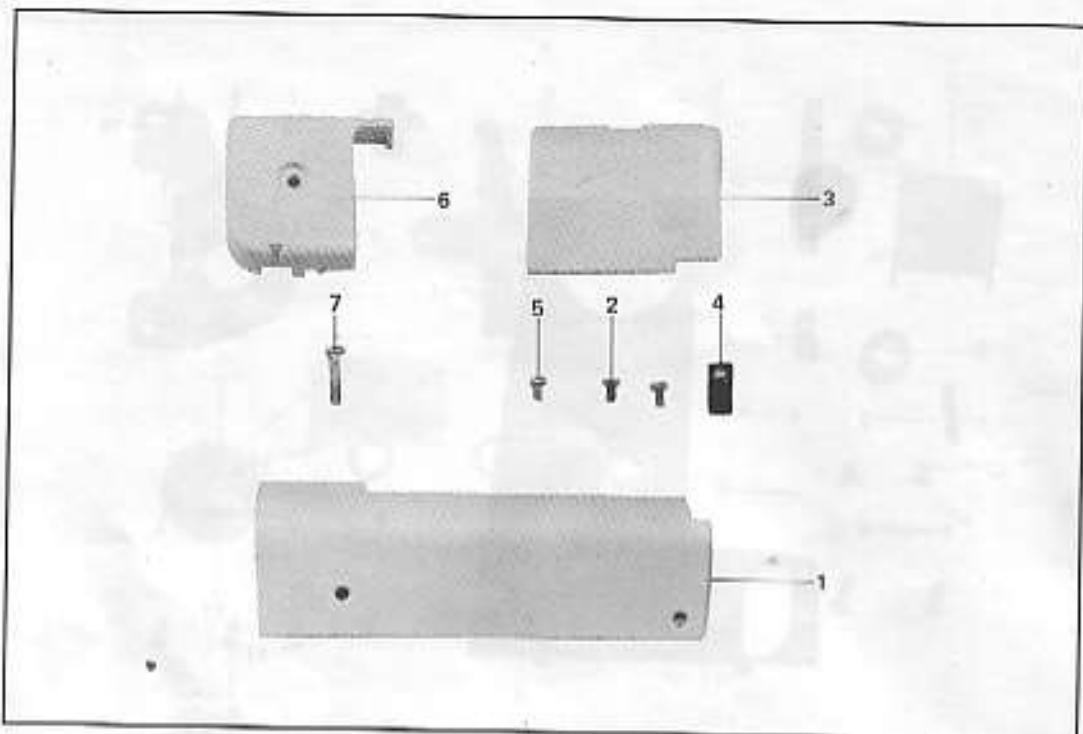


FIG. NO.	PARTS NO.	DESCRIPTION	Q'TY	3300	3400	3500	3600
1.	CV6302	Free arm cover	1	0	0	0	0
2.	SWFYY12	Free arm cover set screw	2	0	0	0	0
3.	CV5302	Rotary hook cover	1	0	0	0	0
4.	SG26D61	Rotary hook cover spring	1	0	0	0	0
5.	SW1YY54	Rotary hook cover spring set screw	1	0	0	0	0
6.	CV4302	Front cover	1	0	0	0	0
7.	SW2XX34	Front cover set screw	1	0	0	0	0

## (17) FEED ROCK SHAFT &amp; FEED DOG

TRADE PARTS LIST

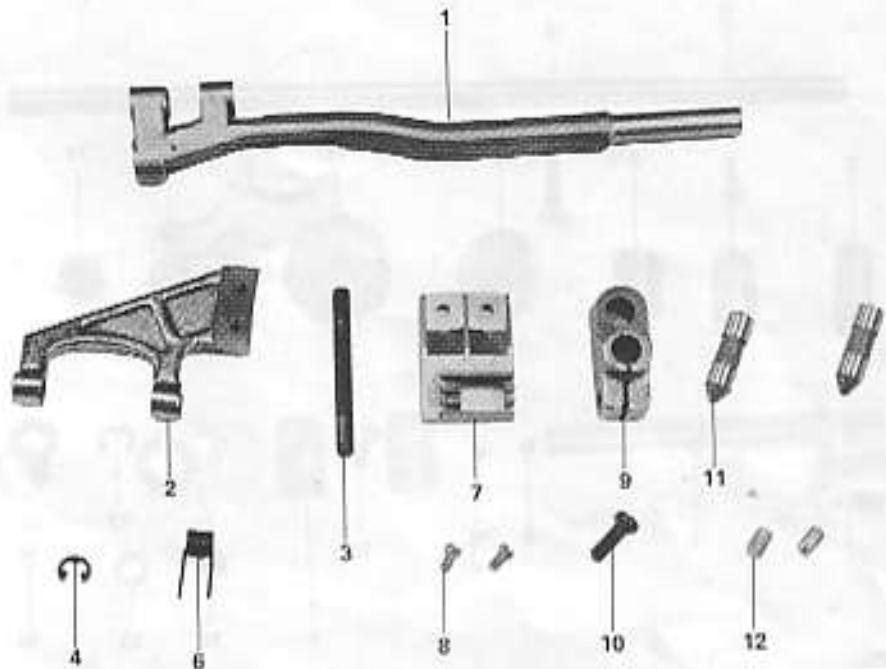


FIG. NO.	PARTS NO.	DESCRIPTION	Q'TY	3300	3400	3500	3600
1.	RS16903	Feed rock shaft	1	0	0	0	0
2.	HS46991	Feed bar	1	0	0	0	0
3.	RS03992	Feed bar shaft	1	0	0	0	0
4.	RRI0041	Feed bar shaft set righ	1	0	0	0	0
5.	SWC5311	Feed bar shaft set screw	1	0	0	0	0
6.	SG17054	Feed rock shaft spring	1	0	0	0	0
7.	RS46941	Feed dog	1	0	0	0	0
8.	SW73411	Feed dog set screw	2	0	0	0	0
9.	HS26992	Feed rock shaft crank complete	2	0	0	0	0
10.	SW85371	Feed rock shaft crank set screw	1	0	0	0	0
11.	HSA3992	Center bar	2	0	0	0	0
12.	SWCXX24	Center bar set screw	2	0	0	0	0

**(18) LOWER SHAFT**

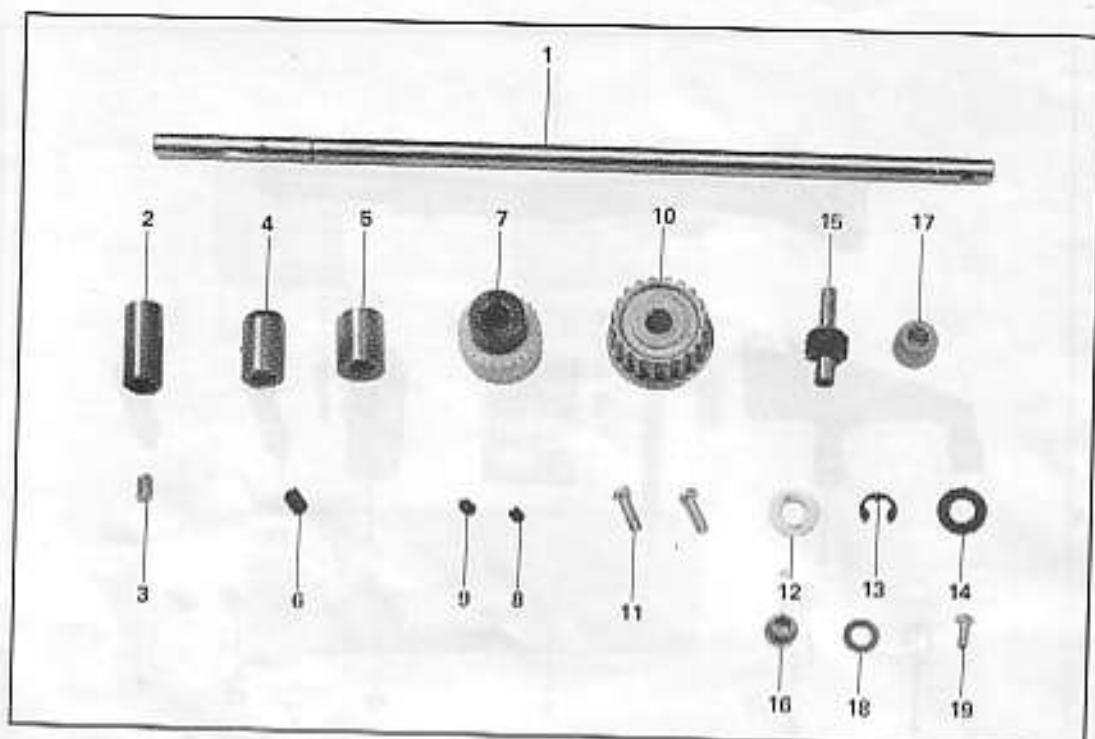


FIG. NO.	PARTS NO.	DESCRIPTION	Q'TY	3300	3400	3500	3600
1.	SH13041	Lower shaft	1	0	0	0	0
2.	SRR3991	Lower shaft bushing (1)	1	0	0	0	0
3.	SWCXX22	Lower shaft bushing set screw	1	0	0	0	0
4.	SHB3992	Lower shaft bushing (2)	1	0	0	0	0
5.	HSB6092	Feed lifting rock cam	1	0	0	0	0
6.	SWC7131	Feed lifting rock cam set screw	1	0	0	0	0
7.	SRS2991	Lower shaft gear	1	0	0	0	0
8.	SWCB3X1	Lower shaft gear set screw (1)	1	0	0	0	0
9.	SWC53Y1	Lower shaft gear set screw (2)	1	0	0	0	0
10.	SRC3992	Lower shaft sprocket complete	1	0	0	0	0
11.	SW1YY34	Lower shaft sprocket set screw	2	0	0	0	0
12.	WH16A13	Lower shaft washer (1)	1	0	0	0	0
13.	RRE0061	Lower shaft set ring	1	0	0	0	0
14.	WH21A23	Lower shaft washer (2)	1	0	0	0	0
15.	SRE3991	Shuttle drive shaft	1	0	0	0	0
16.	SRF3991	Shuttle drive shaft bushing (1)	1	0	0	0	0
17.	SRF3992	Shuttle drive shaft bushing (2)	1	0	0	0	0
18.	WH21A83	Shuttle drive shaft washer	1	0	0	0	0
19.	SWCYY14	Shuttle drive shaft bushing (2) set screw	1	0	0	0	0

**(19) FEED LIFTING ROCK CRANK**

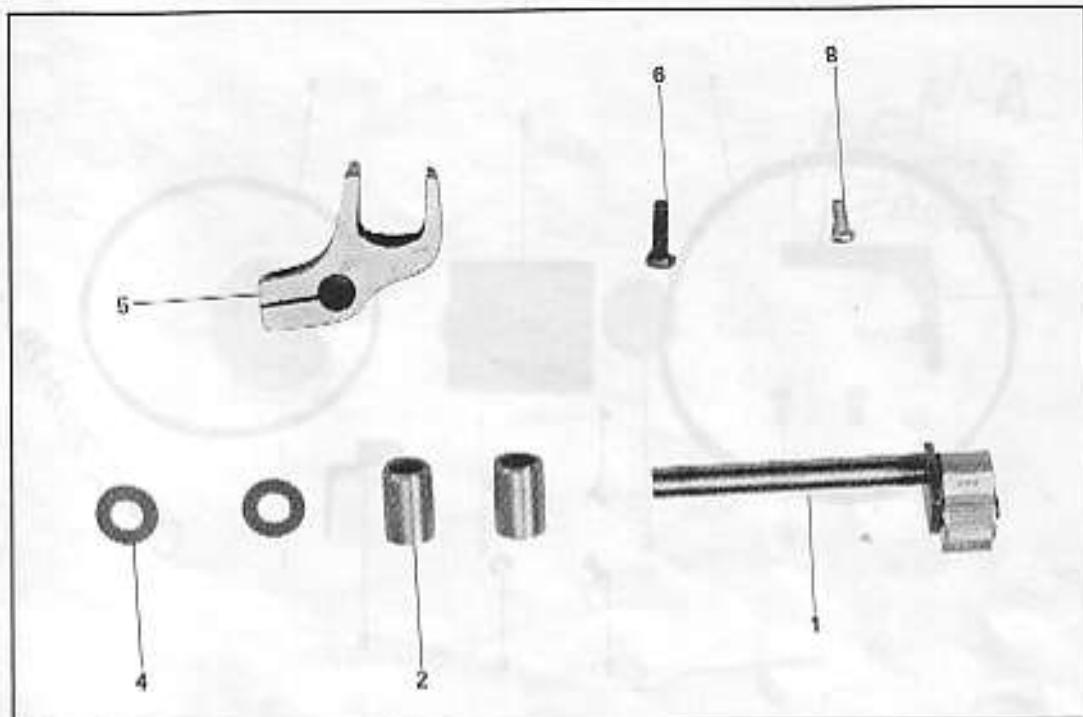


FIG. NO.	PARTS NO.	DESCRIPTION	Q'TY	3300	3400	3500	3600
1.	DF29910	Feed lifting rock crank	1	0	0	0	0
2.	RSC3941	Feed lifting rock shaft bushing	2	0	0	0	0
3.	SW1YY44	Feed lifting rock shaft bushing set screw	1	0	0	0	0
4.	WH21A93	Feed lifting rock crank washer	1	0	0	0	0
5.	DI 96892	Feed lifting rock crank fork	1	0	0	0	0
6.	SW853Z1	Feed lifting rock crank fork set screw	1	0	0	0	0

(20) NEEDLE PLATE & BELT

PRINTED IN CHINA 03/2003 (01)

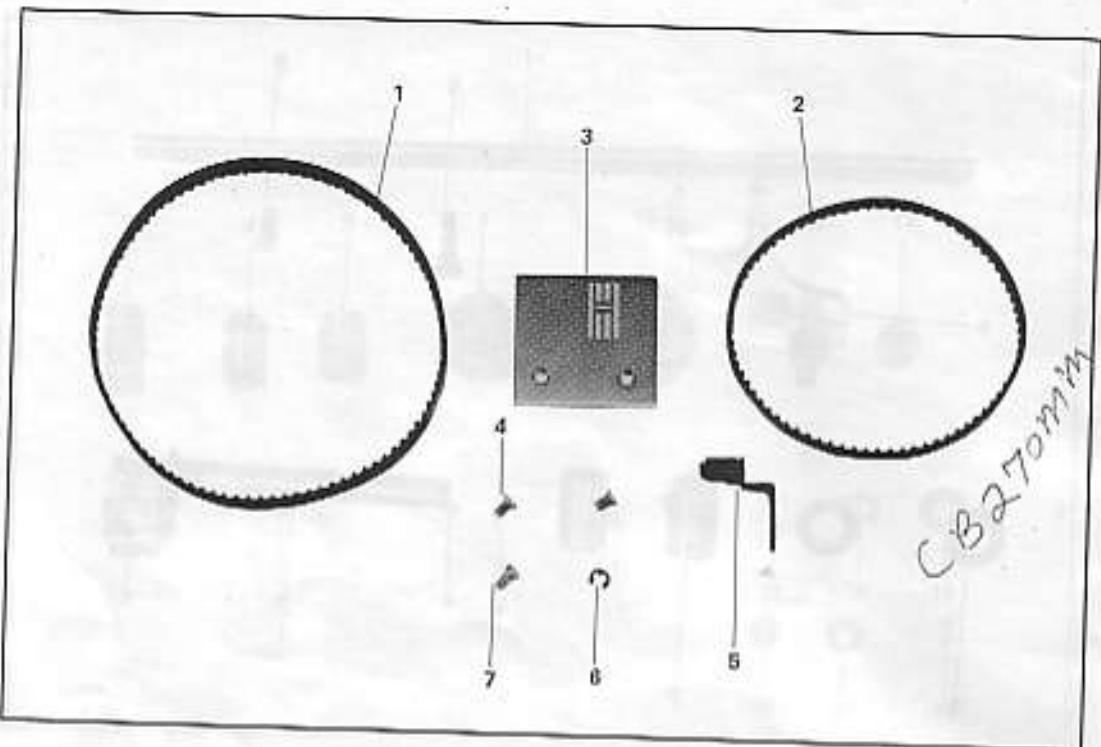


FIG. NO.	PARTS NO.	DESCRIPTION	Q'TY	3300	3400	3500	3600
1.	BT19013	Timing belt	1	0	0	0	0
2.	BT16011	Motor drive belt	1	0	0	0	0
3.	NBH8991	Needle plate	1	0	0	0	0
4.	SW66312	Needle plate set screw	2	0	0	0	0
5.	SRD2941	Timing belt adjusting plate	1	0	0	0	0
6.	RHE0011	Timing belt adjusting roller set ring	1	0	0	0	0
7.	SW1YY44	Timing belt adjusting plate set screw	1	0	0	0	0

## (21) ROTARY HOOK

2000-07-10 00:00:00

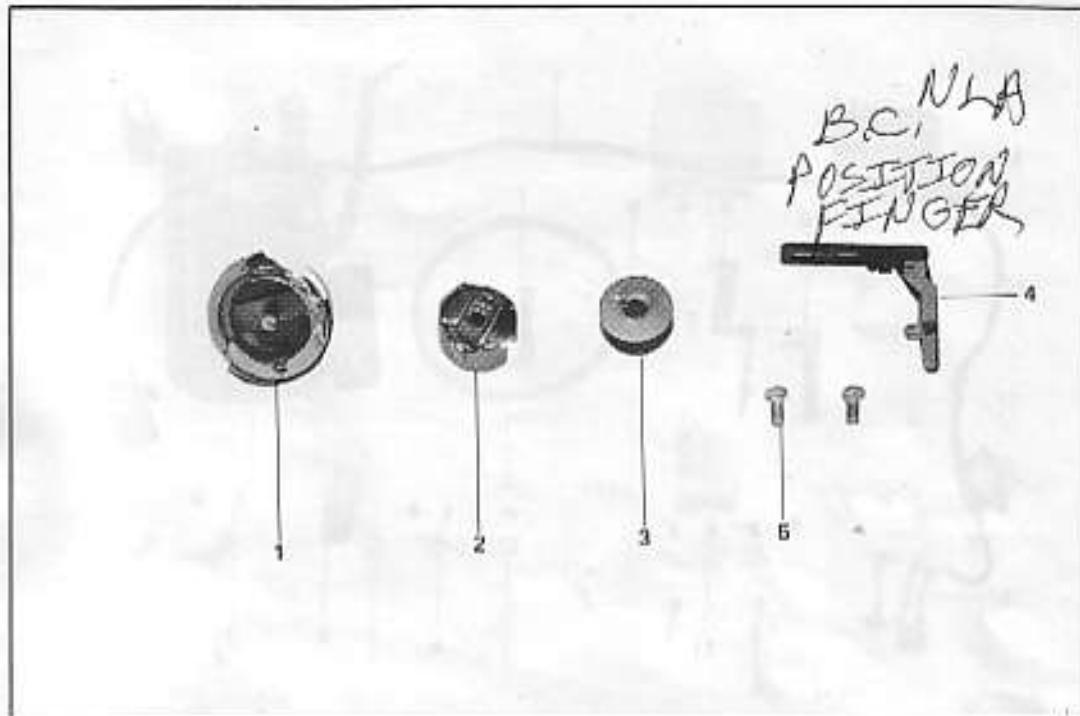


FIG. NO.	PARTS NO.	DESCRIPTION	Q'TY	3300	3400	3500	3600
1.	SR62991	Rotary hook complete <i>KR13</i>	1	0	0	0	0
		Rotary hook set screw	3	0	0	0	0
		Rotary hook spring	1	0	0	0	0
		Rotary hook spring set screw	1	0	0	0	0
2.	SRB2001	Bobbin case <i>For 3+7=8</i>	1	0	0	0	0
3.	SR96991	Bobbin <i>55623</i>	1	0	0	0	0
4.	SRG2991	Rotary hook holder <i>59834</i>	1	0	0	0	0
5.	SW1YY44	Rotary hook holder set screw	2	0	0	0	0

NLA  
H12405000

## (22) SWITCH CORD

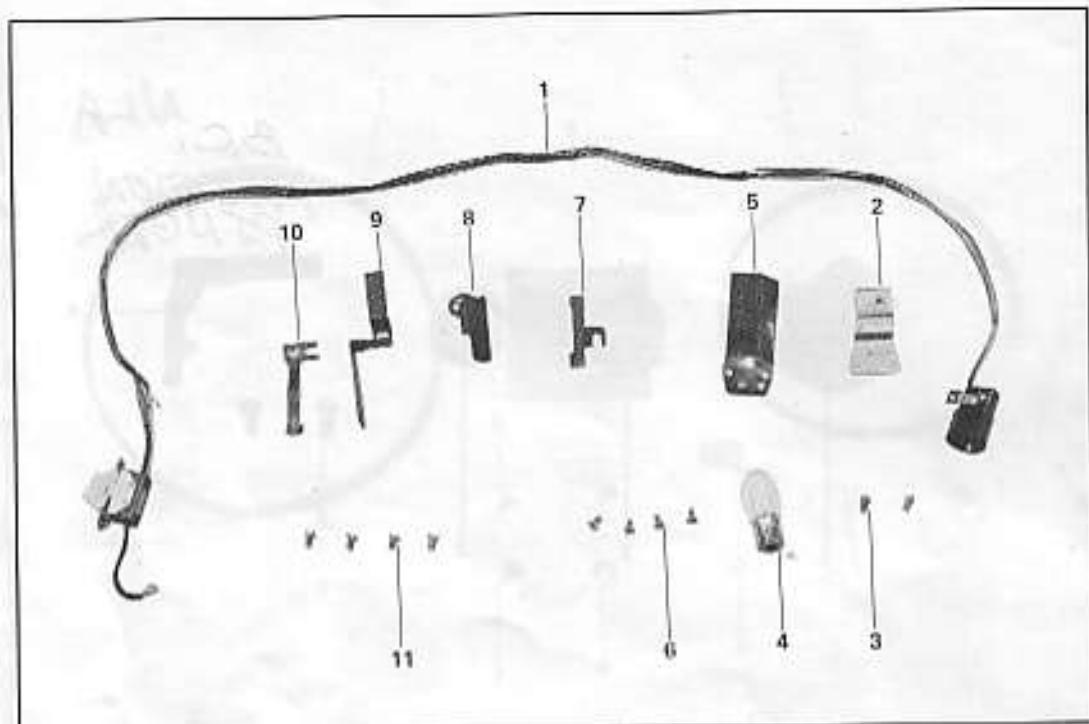


FIG. NO.	PARTS NO.	DESCRIPTION	Q'TY	3300	3400	3500	3600
1.		Switch cord complete	1	0	0	0	0
2.		Lamp holder	1	0	0	0	0
3.		Lamp holder set screw	1	0	0	0	0
4.		Lamp	1	0	0	0	0
5.		Lamp shielding holder (JAPAN)	1	0	0	0	0
6.	EL44901	Lamp shielding holder set screw	4	0	0	0	0
7.	EL54941	Cord holder (1)	1	0	0	0	0
8.	EL54943	Cord holder (2)	1	0	0	0	0
9.	EL54944	Cord holder (3)	1	0	0	0	0
10.	EL54942	Cord holder (4)	1	0	0	0	0
11.		Cord holder set screw	1	0	0	0	0

(23) MOTOR

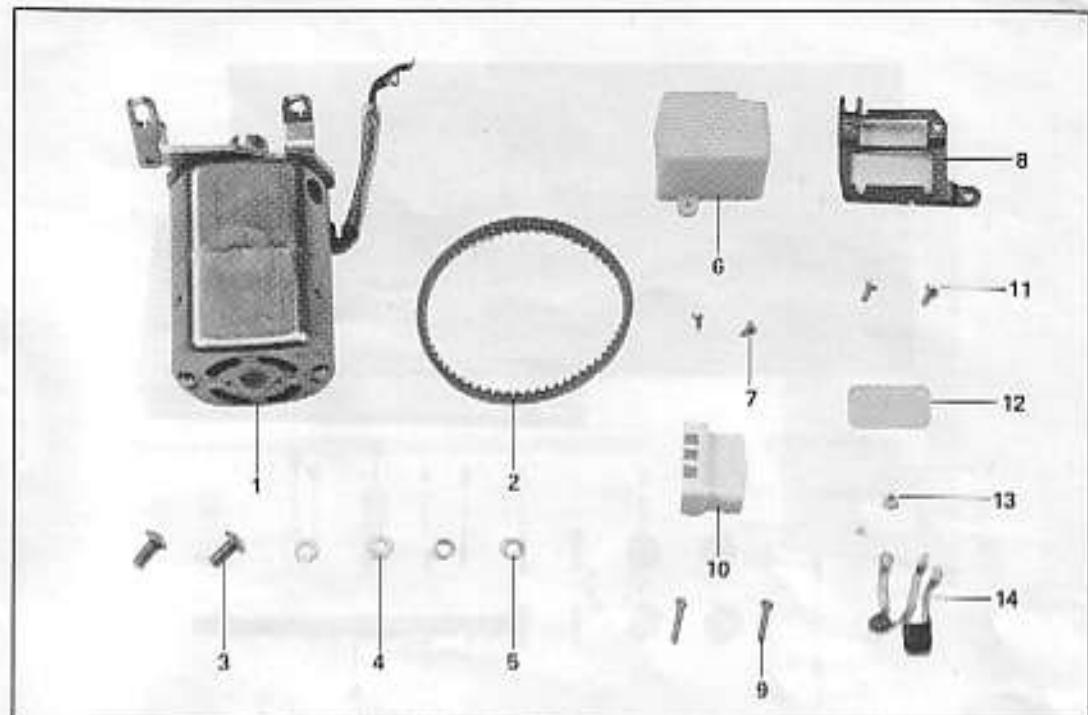


FIG. NO.	PARTS NO.	DESCRIPTION	Q'TY	3300	3400	3500	3600
1.	3M352H	Motor complete	1	0	0	0	0
2.		Motor belt See pg. 30	1	0	0	0	0
3.		Motor bracket set screw	2	0	0	0	0
4.		Motor bracket set screw spring wusher (1)	2	0	0	0	0
5.		Motor bracket set screw spring wusher (2)	2	0	0	0	0
6.		Concave cover	1	0	0	0	0
7.		Concave cover set screw	2	0	0	0	0
8.		Concave holder	1	0	0	0	0
9.		Concave holder set screw	2	0	0	0	0
10.		Concave complete	1	0	0	0	0
11.		Concave set screw	2	0	0	0	0
12.		Concave cover	1	0	0	0	0
13.		Concave cover set screw nut	2	0	0	0	0
14.		Condensor	2	0	0	0	0
15.		Concave cover set screw	2	0	0	0	0

M B 8500 MOTOR BRUSH

(24) SEWING TABLE

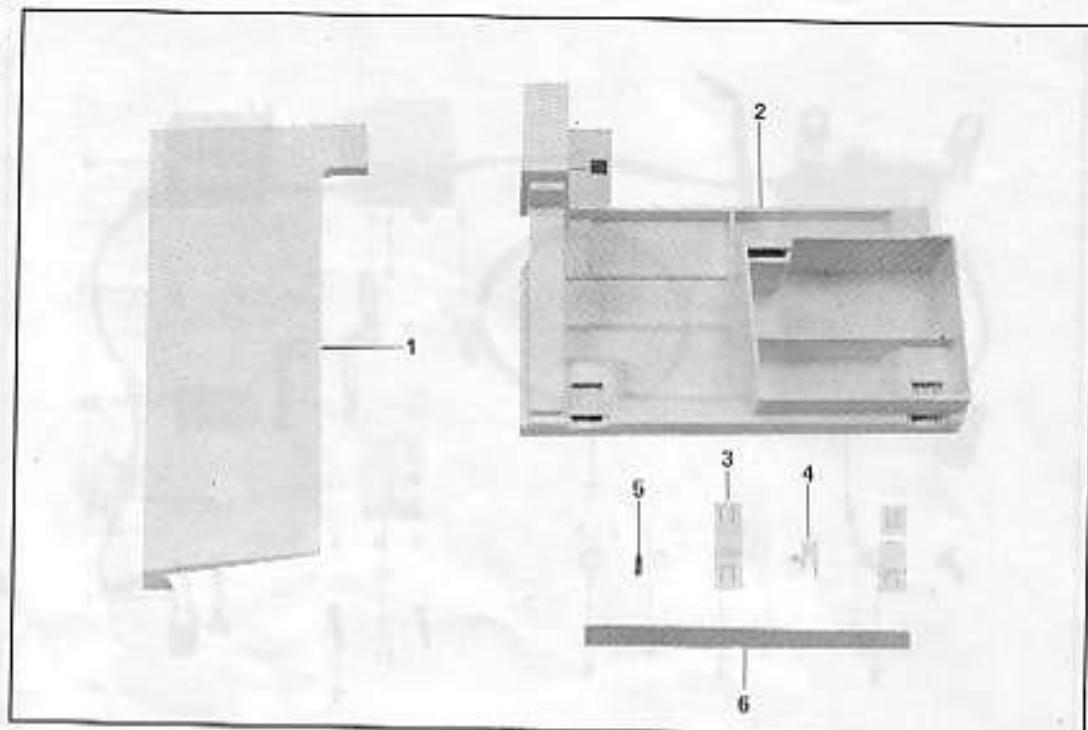


FIG. NO.	PARTS NO.	DESCRIPTION	O' TY	3300	3400	3500	3600
1.	ST3941	Sewing table complete	1	0	0	0	0
2.	ST3943	Sewing table body	1	0	0	0	0
3.	ST3942	Sewing table cover	1	0	0	0	0
4.	ST3940	Sewing table hinge	2	0	0	0	0
5.	ST39450	Sewing table stopper	1	0	0	0	0
6.	SG12D35	Sewing table stopper spring	1	0	0	0	0
7.	ST39480	Sewing table felt	3	0	0	0	0

(25) FREE ARM BASE

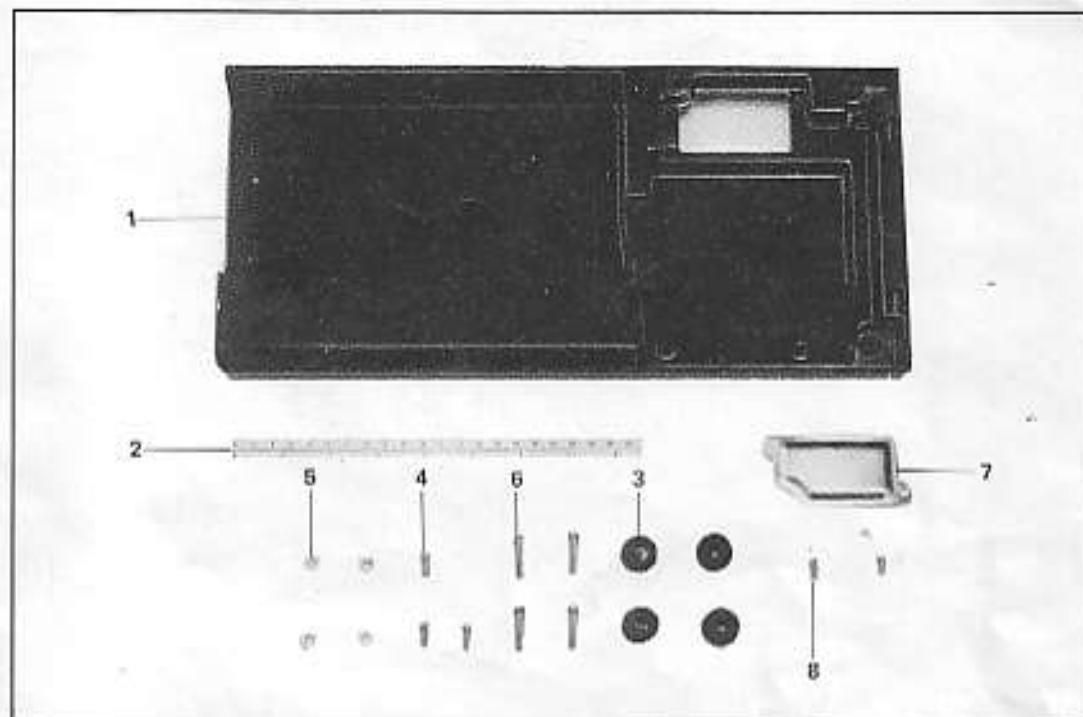


FIG. NO.	PARTS NO.	DESCRIPTION	Q'TY	3300	3400	3500	3600
1.	FB13041	Free arm base	1	0	0	0	0
2.	AD33321	Scale	1	0	0	0	0
3.	AA03941	Free arm base cushion rubber	4	0	0	0	0
4.	SW3YY22	Free arm base cushion rubber set screw	3	0	0	0	0
5.	WH47B07	Free arm base set screw washer	4	0	0	0	0
6.	SW2XX34	Free arm base set screw	1	0	0	0	0
7.	CV05010	Free arm base cover	1	0	0	0	0
8.	SW3YY14	Free arm base cover set screw	2	0	0	0	0